

750C, 850C Crawler Dozer Repair

TECHNICAL MANUAL 750C, 850C, 750C Series II, 850C Series II Crawler Dozers

TM1589 10AUG04 (ENGLISH)

For complete service information also see:

750C, 850C, Crawler Dozer Operation and Test	TM1588
6068 Engine	CTM8
6068 POWERTECH™ Engine	CTM104
6076 Engine	CTM42
6081 POWERTECH™ Engine	CTM86
Undercarriage Appraisal Man	




Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine problems quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of problems and their causes.

TX,750C,SS2406 -19-13JUL95-1/1

Technical Information Feedback Form

We need your help to continually improve our technical publications. Please copy this page and FAX or mail your comments, ideas and improvements.

SEND TO: John Deere Dubuque Works
P.O. Box 538
Attn: Publications Supervisor, Dept. 303
Dubuque, IA 52004-0538

FAX NUMBER: 563-589-5800

Ideas, Comments (Please State Page Number): _____

OVERALL, how would you rate the quality of this publication? (Check one)

1 Poor 2 3 Fair 4 5 Good 6 7 Very Good 8 9 Excellent 10

Company Name: _____

Technician Name: _____

Address: _____

Phone: _____

Fax No.: _____

Dealer Acct. No.: _____

THANK YOU!

Introduction

Contents

SECTION 00—General Information

- Group 01—Safety
- Group 02—General Specifications
- Group 03—Torque Values
- Group 04—Fuels and Lubricants

SECTION 01—Tracks

- Group 0130—Track System
- Group 0199—Dealer Fabricated Tools

SECTION 02—Axles and Suspension Systems

- Group 0201—Drive Axle Housing and Support
- Group 0250—Axle Shaft, Bearings and Reduction Gears
- Group 0299—Dealer Fabricated Tools

SECTION 03—Transmission

- Group 0300—Remove and Install
- Group 0315—Control Linkage
- Group 0360—Hydrostatic System
- Group 0399—Dealer Fabricated Tools

SECTION 04—Engine

- Group 0400—Removal and Installation

SECTION 05—Engine Auxiliary Systems

- Group 0505—Cold Weather Starting Aid
- Group 0510—Cooling System
- Group 0515—Speed Controls
- Group 0520—Intake System
- Group 0530—External Exhaust Systems
- Group 0560—External Fuel Supply Systems
- Group 0599—Dealer Fabricated Tools

SECTION 07—Dampener Drive

- Group 0752—Elements

SECTION 11—Park Brake

- Group 1100—Park Brake
- Group 1115—Control Linkage
- Group 1160—Hydraulic System

SECTION 15—Equipment Attaching

- Group 1511—Drawbar

SECTION 16—Electrical System

- Group 1671—Batteries, Support, and Cables
- Group 1672—Alternator, Regulator and Charging System Wiring
- Group 1673—Lighting System
- Group 1674—Wiring Harness and Switches
- Group 1675—System Controls
- Group 1677—Motors and Actuators

SECTION 17—Frames, Chassis, or Supporting Structure

- Group 1740—Frame Installation
- Group 1746—Frame Bottom Guards
- Group 1749—Chassis Weights

SECTION 18—Operator's Station

- Group 1800—Removal and Installation
- Group 1810—Operator Enclosure
- Group 1821—Seat and Seat Belt
- Group 1830—Heating and Air Conditioning

SECTION 19—Sheet Metal

- Group 1910—Hood and Engine Enclosures
- Group 1921—Grille and Grille Housing

SECTION 20—Safety, Convenience and Miscellaneous

- Group 2004—Horn and Warning Devices

SECTION 32—Bulldozer

- Group 3200—Removal and Installation
- Group 3201—Blade
- Group 3215—Controls Linkage
- Group 3240—Frames
- Group 3260—Hydraulic System
- Group 3299—Dealer Fabricated Tools

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2004
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright © 1995, 1997, 1999, 2000, 2001

00

01

02

03

04

05

07

11

15

16



Thank you very much
for your reading.
Please click here
to get more information.