

**8100, 8200, 8300, 8400  
8110, 8210, 8310, 8410  
Tractors  
Repair**



**John Deere Waterloo Works  
TM1575 (15NOV99)**


LITHO IN U.S.A.  
ENGLISH

# Introduction

## FOREWORD

This manual is written for an experienced technician. Essential and recommended tools required in performing certain service work are identified in this manual.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are used to provide service information. The Repair Technical Manual tells how to repair the components. The Operation and Test Technical Manual helps you quickly identify the majority of failures.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential and recommended tools, other material needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

RX, TMIFC -19-03APR96-1/1

## NOTICE TO THE DEALER

This is a complete revision of TM1575 Repair Technical Manual for 8100, 8200, 8300, and 8400 Tractors. It also covers 8110, 8210, 8310 and 8410 Tractors.

**Discard TM1575 dated 12JAN99**

AG.RX15494.46 -19-24NOV98-1/1

# Contents

## SECTION 10—General Information

- Group 05—Safety
- Group 10—General Information

## SECTION 20—Engine

- Group 00—Component Removal and Installation
- Group 05—Engine Repair

## SECTION 30—Fuel and Cooling Systems

- Group 05—Diesel Fuel System
- Group 10—Air Intake System
- Group 15—Engine Cooling System
- Group 20—Air Conditioning Condenser and Coolers

## SECTION 40—Electrical

- Group 05—Connectors
- Group 10—Wiring Harness Routings
- Group 15—Charging Circuit
- Group 20—Starting Circuit
- Group 25—Solenoids and Switches
- Group 30—Monitoring Systems and Sensors
- Group 35—Armrest Control
- Group 40—Implement and Accessory Connectors
- Group 45—Convenience and Accessory Components

## SECTION 50—Power Shift Transmission

- Group 00—Component Removal and Installation
- Group 05—Miscellaneous Repair
- Group 10—8100, 8200, 8300, and 8400 Transmission
- Group 15—8110, 8210, 8310, and 8410 Transmission

## SECTION 56—Drive Systems

- Group 00—Component Removal and Installation
- Group 05—Rear Differential and Input Quill
- Group 10—Final Drives
- Group 15—Rear PTO
- Group 20—Hydraulic Pump Drive
- Group 25—MFWD Clutch
- Group 30—MFWD Axle—Version "A"
- Group 35—MFWD Axle—Version "B"
- Group 40—Drivelines

## SECTION 60—Steering and Brakes

- Group 05—Steering Column
- Group 10—Steering Control Assembly
- Group 15—Steering Cylinders
- Group 20—Brake Valve
- Group 25—Brake Components
- Group 30—Trailer Brakes

## SECTION 70—Hydraulics

- Group 00—Component Removal and Installation
- Group 05—Hydraulic System Repair and Cleanup
- Group 10—Tandem Hydraulic Pump (Steering-Brakes-Charge)
- Group 15—Secondary Hydraulic Pump (Hitch-SCV)
- Group 20—Filter Bypass
- Group 25—Hitch Valve, Selective Control Valves, and Couplers
- Group 30—Hitch
- Group 35—Row Guidance

## SECTION 80—Miscellaneous

- Group 00—Component Removal and Installation
- Group 05—Front Axle (2-Wheel Drive)
- Group 10—Wagon and Pick-Up Hitch

## SECTION 90—Operator Station

- Group 00—Component Removal and Installation
- Group 05—Heating, Ventilating and Air Conditioning—(HVAC)
- Group 10—Air Conditioning System
- Group 15—Air Suspension Seat (8000 Series)
- Group 20—Air Suspension Seat (8000 TEN Series)
- Group 25—Armrest
- Group 30—Cab Door and Windshield

## SECTION 99—Dealer Fabricated Tools

- Group 05—Fabricated Tools

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 1999  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright © 1996, 1995, 1994, 1998

Contents

10

20

30

40

50

56

60

70

80

90





Thank you very much  
for your reading.  
Please click here  
to get more information.