



8850 Tractor



TECHNICAL MANUAL 8850 Tractor

TM1254 (01FEB85) English



John Deere Waterloo Works
TM1254 (01FEB85)

LITHO IN U.S.A.
ENGLISH



8850 TRACTOR TECHNICAL MANUAL TM-1254 (FEB-85)

CONTENTS—REPAIR SECTIONS

SECTION 10—GENERAL

- Group 00—Specification and Special Tools
- Group 05—Predelivery, Delivery and After-Sale Services
- Group 10—Tune-up
- Group 15—Lubrication

SECTION 15—SEPARATION

- Group 00—Specifications and Special Tools
- Group 05—Front Drive
- Group 10—Fuel Tanks and Fenders
- Group 15—Front End
- Group 20—Front End and Engine From Clutch Housing
- Group 25—Engine
- Group 30—SOUND-GARD® Body
- Group 35—Front Hinge From Rear Hinge
- Group 40—Front Hinge
- Group 45—Clutch Housing
- Group 50—Rear Hinge
- Group 55—Torque Divider
- Group 60—Transmission
- Group 65—Final Drives

SECTION 25—ENGINE REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Acquire Access to Cylinder Head, Valves and Camshaft
- Group 10—Cylinder Head, Valves and Camshaft
- Group 15—Acquire Access to Block, Liners, Pistons and Rods

- Group 20—Cylinder Block, Liners, Pistons and Rods
- Group 25—Acquire Access to Crankshaft, Main Bearings and Flywheel
- Group 30—Crankshaft, Main Bearings and Flywheel
- Group 35—Acquire Access to Lubrication System
- Group 40—Lubrication System
- Group 45—Acquire Access to Cooling System
- Group 50—Cooling System

SECTION 30—FUEL AND AIR SYSTEM REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Acquire Access to Air Intake System
- Group 10—Air Intake System
- Group 15—Acquire Access to Diesel Fuel System
- Group 20—Diesel Fuel System
- Group 25—Speed Control Linkage

SECTION 40—ELECTRICAL REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Harness Replacement
- Group 06—Connector Repair
- Group 10—John Deere Charging Circuit
- Group 15—Starter Circuit Repair
- Group 21—DELCO-REMY Starting Motor
- Group 25—Lighting Circuits
- Group 30—INVESTIGATOR™ II Warning System and Digital Tach. Repair
- Group 35—Accessory Circuits

Continued on next page

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1985
DEERE & COMPANY
Moline, Illinois
All rights reserved
A JOHN DEERE ILLUSTRATION
Previous Edition
Copyright © 1984
Copyright © 1982
Copyright © 1981
DEERE & COMPANY

U10;010GEN AX2 040385

CONTENT—CONTINUED

SECTION 50—POWER TRAIN REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Remove/Install Clutch Oil Pressure Valve Housing
- Group 10—Clutch Oil Pressure Regulating Valve Housing
- Group 15—Clutch Operating Piston Housing
- Group 20—PERMA CLUTCH™
- Group 25—QUAD-RANGE™ Planetary
- Group 30—Independent PTO
- Group 35—Torque Divider and Drive Shafts
- Group 40—QUAD-RANGE™ Transmission
- Group 45—Shift Lever Assembly
- Group 50—Front Differential
- Group 55—Rear Differential Housing
- Group 60—Differential Lock Valves
- Group 65—Final Drives
- Group 70—Transmission Oil Filter Relief Valve Housing
- Group 75—Transmission Oil Cooler and Thermal Relief Valve

SECTION 60—STEERING/BRAKES REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Remove/Install Power Steering Components
- Group 10—Steering Column
- Group 15—Metering Pump
- Group 20—Steering Valve
- Group 25—Steering and Feedback Cylinders
- Group 30—Remove/Install Brake Valve and Brake Accumulator
- Group 35—Brake Valve
- Group 40—Brake Accumulator
- Group 45—Bleeding Brakes and Testing Brake Assembly
- Group 50—Brake Pistons, Plates, and Disks

SECTION 70—HYDRAULIC REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Charge Pump Assembly
- Group 10—Remove/Install Main Hydraulic Pump
- Group 15—Main Hydraulic Pump

- Group 20—Remove/Install Charge Circuit Valves and Attenuator
- Group 25—Charge Pump Control Valve
- Group 30—Hydraulic Filter Relief Valve Housing
- Group 35—Remove/Install HYDRA-CUSHIONED™ Seat Valve Assembly and Accumulator
- Group 40—Seat Valve Assembly
- Group 45—Remove and Install Pressure Control Valve
- Group 50—Pressure Control Valve
- Group 55—Remove/Install Rockshaft Components
- Group 60—Rockshaft Components
- Group 65—Lift Assist Cylinders
- Group 70—Draft Sensing Cylinders
- Group 75—Hitch Components
- Group 80—Remove/Install Selective Control Valves and Controls
- Group 85—Selective Control Valve and Coupler
- Group 90—Remote Cylinder
- Group 95—Transmission-Hydraulic System Clean-up Procedure

SECTION 80—MISCELLANEOUS REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Wheels
- Group 10—Hinge Pins
- Group 15—Front Weight

SECTION 90—OPERATOR STATION REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Air Conditioning System
- Group 06—Air Conditioning System Service
- Group 10—Heating System
- Group 15—HYDRACUSHIONED Seat
- Group 20—Miscellaneous Components

SECTION 95—MISCELLANEOUS OPTIONS

- Group 00—Specifications and Special Tools
- Group 60—Auxiliary Steering System
- Group 61—Auxiliary Brakes System
- Group 62—Auxiliary Trailer Brake

Introduction and Safety Information

INTRODUCTION

This technical manual is part of a twin concept of service.

FOS Manuals - for reference

Technical Manuals - for actual service


The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic types of failures and their causes. They are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise service guides for specific machines. They are on-the-job guides containing the information needed by the service technician.

There are two technical manuals covering these machines:

- The repair manual, identified by green section tabs, and
- The operation and test manual, identified by yellow section tabs. These sections correspond respectively to the 2-digit repair sections.

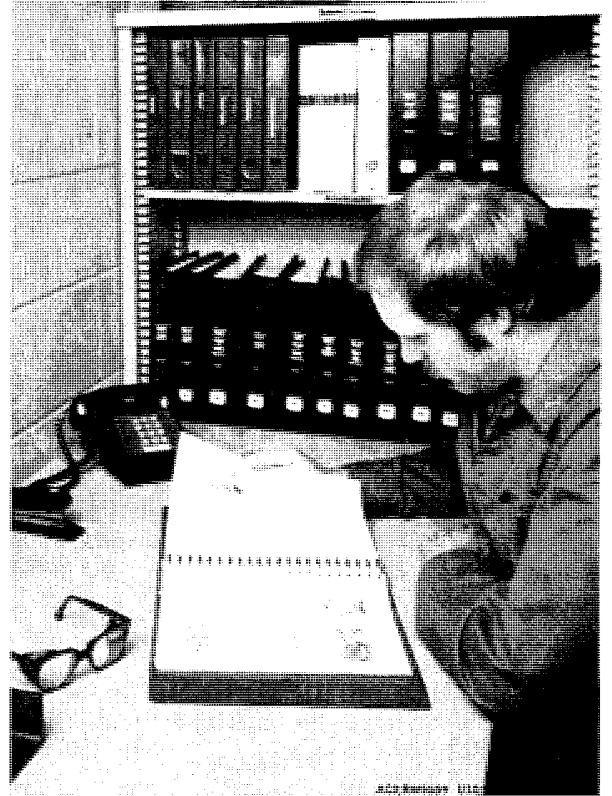


FEATURES OF THIS TECHNICAL MANUAL

- John Deere ILLUSTRATION format emphasizing more detailed pictures and fewer words.
- Instructions and illustrations grouped together in easy-to-use modules.
- Removal and Installation groups preceding some repair groups. These groups show how to remove and install components from the machine rather than from major components. They also show how to acquire access to major components of a machine.
- A section showing how to separate the tractor.

This technical manual was planned and written for you—an experienced service technician. Keep it in the shop where it is handy. Refer to it when you need to know correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.

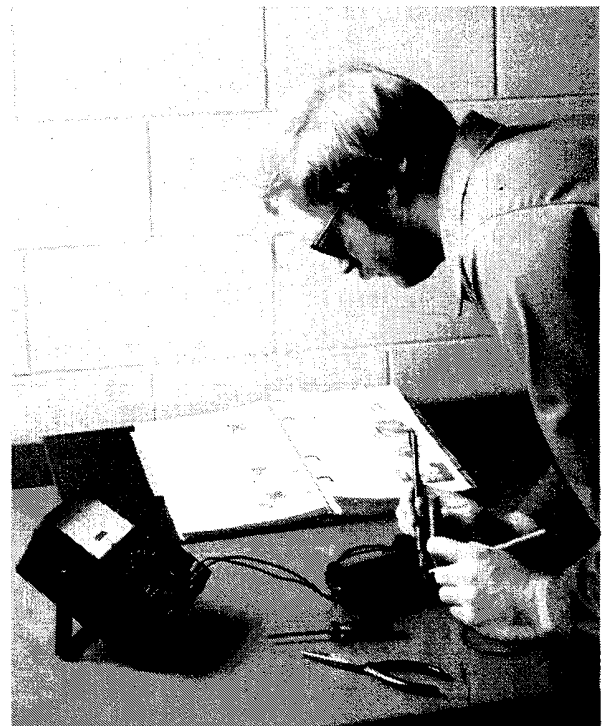



Thank you very much
for your reading.
Please click here
to get more information.