

990 Excavator



John Deere Dubuque Works
TM-1230 (May-87)

LITHO IN U.S.A.

990 EXCAVATOR TECHNICAL MANUAL TM-1230 (MAY-87)

SECTION AND GROUP CONTENTS

SECTION I—GENERAL INFORMATION

- Group I —Introduction and Safety Information
- Group II —General Specifications
- Group III—Cap Screw Torque Values
- Group IV—Lubrication

SECTION 01—TRACKS

- Group 0130—Track Systems

SECTION 2—AXLES AND SUSPENSION SYSTEMS

- Group 0250—Axle Shaft, Bearings, Reduction Gears
- Group 0260—Hydraulic Systems

SECTION 4—ENGINE

- Group 0400—Removal and Installation
- Group 0401—Crankshaft and Main Bearings
- Group 0402—Camshaft and Valve Actuating Means
- Group 0403—Connecting Rods and Pistons
- Group 0404—Cylinder Block
- Group 0407—Oiling System
- Group 0408—Ventilating System
- Group 0409—Cylinder Head and Valves
- Group 0410—Exhaust Manifold

SECTION 4—ENGINE—Continued

- Group 0413—Fuel Injection System
- Group 0416—Turbocharger
- Group 0417—Water Pump
- Group 0418—Thermostats, Housings, and Water Piping
- Group 0419—Oil Cooler
- Group 0420—Fuel Filter
- Group 0421—Fuel Transfer Pump
- Group 0422—Starting Motor and Fastenings
- Group 0429—Fan Drive
- Group 0433—Flywheel, Housing and Fastenings

SECTION 5—ENGINE AUXILIARY SYSTEMS

- Group 0505—Cold Weather Starting Aids
- Group 0510—Cooling Systems
- Group 0515—Speed Controls
- Group 0520—Intake System
- Group 0560—External Fuels Supply Systems

SECTION 16—ELECTRICAL SYSTEMS

- Group 1671—Batteries, Support, and Cables
- Group 1672—Alternator, Regulator and Charging System Wiring
- Group 1674—Wiring Harness and Switches
- Group 1676—Instruments and Indicators

Continued on next page

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1987
DEERE & COMPANY
Moline, Illinois
All rights reserved
A JOHN DEERE ILLUSTRATION
Previous Editions
Copyright© 1986 DEERE & COMPANY
Copyright© 1983 DEERE & COMPANY
Copyright© 1981 DEERE & COMPANY

T28;1230 K1 020787

SECTION AND GROUP CONTENTS - CONTINUED

SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1749 - Chassis Weights

SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1830 - Heating and Air Conditioning

SECTION 19 - SHEET METAL AND STYLING

- Group 1927 - Fenders

SECTION 33 - EXCAVATOR

- Group 3302 - Buckets
- Group 3340 - Frames
- Group 3360 - Hydraulic System

SECTION 43 - SWING, ROTATION OR PIVOTING SYSTEM

- Group 4311 - Brakes
- Group 4350 - Mechanical Drive Elements
- Group 4360 - Hydraulic System

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Diagnosis and Testing
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9025 - Hydraulic System
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning

SECTION 99 - SPECIAL TOOLS

INDEX

**COMPLETE PAGE LISTING
WITH LATEST DATE LINES**

01	(Jan-83)	1-0130-10	(Oct-81)	1-0130-57	(Oct-81)
02	(Jan-83)	1-0130-11	(Jan-83)	1-0130-58	(Oct-81)
03	(Jan-83)	1-0130-12	(Jan-83)	1-0130-59	(Oct-81)
04	(Jan-83)	1-0130-13	(Jan-83)	1-0130-60	(Oct-81)
05	(Jan-83)	1-0130-14	(Jan-83)	1-0130-61	(Oct-81)
06	(Jan-83)	1-0130-15	(Jan-83)	1-0130-62	(Oct-81)
07	(Jan-83)	1-0130-16	(Jan-83)	1-0130-63	(Jan-83)
08	(Jan-83)	1-0130-17	(Oct-81)	1-0130-64	(Jan-83)
09	(Jan-83)	1-0130-18	(Oct-81)	1-0130-65	(Jan-83)
10	(Jan-83)	1-0130-19	(Jan-83)	1-0130-66	(Jan-83)
11	(Jan-83)	1-0130-20	(Jan-83)	1-0130-67	(Oct-81)
12	(Jan-83)	1-0130-21	(Jan-83)	1-0130-68	(Oct-81)
13	(Jan-83)	1-0130-22	(Jan-83)	1-0130-69	(Jan-83)
14	(Jan-83)	1-0139-23	(Jan-83)	1-0130-70	(Jan-83)
		1-0130-24	(Jan-83)	1-0130-71	(Oct-81)
I-I-01	(Jan-83)	1-0130-25	(Jan-83)	1-0130-72	(Oct-81)
I-I-02	(Jan-83)	1-0130-26	(Jan-83)	1-0130-73	(Oct-81)
I-I-03	(Jan-83)	1-0130-27	(Jan-83)	1-0130-74	(Oct-81)
I-I-04	(Jan-83)	1-0130-28	(Jan-83)	1-0130-75	(Oct-81)
I-I-05	(Jan-83)	1-0130-29	(Oct-81)	1-0130-76	(Oct-81)
I-I-06	(Jan-83)	1-0130-30	(Oct-81)	1-0130-77	(Oct-81)
*I-I-07	(Oct-81)	1-0130-31	(Oct-81)	1-0130-78	(Oct-81)
*I-I-08	(Oct-81)	1-0130-32	(Oct-81)	1-0130-79	(Oct-81)
I-II-01	(Jan-83)	1-0130-33	(Oct-81)	1-0130-80	(Oct-81)
I-II-02	(Jan-83)	1-0130-34	(Oct-81)	1-0130-81	(Oct-81)
I-II-03	(Jan-83)	1-0130-35	(Oct-81)	1-0130-82	(Oct-81)
I-II-04	(Jan-83)	1-0130-36	(Oct-81)	1-0130-83	(Oct-81)
*I-II-05	(Oct-81)	1-0130-37	(Oct-81)	1-0130-84	(Oct-81)
*I-II-06	(Oct-81)	1-0130-38	(Oct-81)	1-0130-85	(Oct-81)
I-III-01	(Jan-83)	1-0130-39	(Oct-81)	1-0130-86	(Oct-81)
I-III-02	(Jan-83)	1-0130-40	(Oct-81)	1-0130-87	(Jan-83)
*I-III-03	(Oct-81)	1-0130-41	(Oct-81)	1-0130-88	(Jan-83)
*I-III-04	(Oct-81)	1-0130-42	(Oct-81)	1-0130-89	(Oct-81)
I-IV-01	(Oct-81)	1-0130-43	(Jan-83)	1-0130-90	(Oct-81)
I-IV-02	(Oct-81)	1-0130-44	(Jan-83)	1-0130-91	(Oct-81)
		1-0130-45	(Oct-81)	1-0130-92	(Oct-81)
1-0100-01	(Jan-83)	1-0130-46	(Oct-81)		
1-0100-02	(Jan-83)	1-0130-47	(Jan-83)	2-0200-01	(Jan-83)
1-0130-01	(Jan-83)	1-0130-48	(Jan-83)	2-0200-02	(Jan-83)
1-0130-02	(Jan-83)	1-0130-49	(Oct-81)	2-0250-01	(Jan-83)
1-0130-03	(Jan-83)	1-0130-50	(Oct-81)	2-0250-02	(Jan-83)
1-0130-04	(Jan-83)	1-0130-51	(Jan-83)	2-0250-03	(Jan-83)
1-0130-05	(Jan-83)	1-0130-52	(Jan-83)	2-0250-04	(Jan-83)
1-0130-06	(Jan-83)	1-0130-53	(Oct-81)	2-0250-05	(Oct-81)
1-0130-07	(Jan-83)	1-0130-54	(Oct-81)	2-0250-06	(Oct-81)
1-0130-08	(Jan-83)	1-0130-55	(Jan-83)	2-0250-07	(Oct-81)
1-0130-09	(Oct-81)	1-0130-56	(Jan-83)	2-0250-08	(Oct-81)

**Remove these pages from manual*



Thank you very much
for your reading.
Please click here
to get more information.