John Deere JD380, JD480-A, and JD480-B Forklifts





		į		

JD380, JD480-A and JD480-B Forklifts TECHNICAL MANUAL TM-1060 (Mar-84)

SECTION AND GROUP CONTENTS

Section 10 - GENERAL

Group 5 - Specifications

Group 10 - Predelivery, Delivery, and After-Sales

Services

Group 15 - Tune-Up and Adjustment

Group 20 - Lubrication

Group 25 - Tractor Separation

Group 30 - Specifications and Special Tools

Section 20 - ENGINE

Group 5 - Diagnosis

Group 10 - Basic Engine

Group 15 - Lubrication System

Group 20 - Governor and Speed Control Linkage

Group 25 - Cooling System

Group 30 - Specifications and Special Tools

Section 30 - FUEL SYSTEM

Group 5 - Diagnosis

Group 10 - Fuel Tank, Transfer Pump, and Filters

Group 15 - Air Intake System

Group 20 - Carburetor

Group 25 - Fuel Injection Pump

Group 30 - Specifications and Special Tools

Section 40 - ELECTRICAL SYSTEM

Group 5 - Information and Diagrams

Group 10 - Charging Circuit

Group 15 - Starting Circuit

Group 20 - Ignition Circuit

Group 25 - Lighting and Accessory Circuit

Group 30 - Specifications and Special Tools

The specifications and design information contained in this manual were correct at the time this machine was manufactured. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

Section 50 - POWER TRAIN

Group 5 - Diagnosis

Group 10 - Disconnect Clutch

Group 15 - Transmission

Group 20 - Reverser

Group 25 - Differential

Group 30 - Final Drives

Group 35 - Specifications and Special Tools

Section 60 - STEERING AND BRAKES

Group 5 - Steering System

Group 10 - Hydraulic Brakes

Group 15 - Specifications and Special Tools

Section 70 - HYDRAULIC SYSTEM

Group 5 - General Information, Diagnosis, and

Testing

Group 6 - System Testing (Analyzer)

Group 10 - Hydraulic Components

Group 15 - Hydraulic Pump

Group 20 - Cylinders

Group 25 - Specifications and Special Tools

Section 80 - MISCELLANEOUS COMPONENTS

Group 5 - Mast Assembly

Group 10 - Rear Support and Axle Assembly

Group 15 - Specifications and Special Tools


INDEX

Copyright © 1984
DEERE & COMPANY
Moline, Illinois
All rights reserved

Previous Editions

Copyright © 1979 Deere & Company Copyright © 1977 Deere & Company Copyright © 1974 Deere & Company Copyright © 1973 Deere & Company Copyright © 1972 Deere & Company

INTRODUCTION

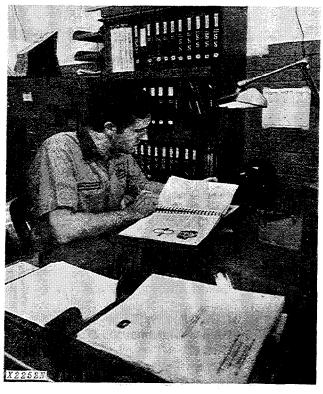

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

•FOS Manuals—for reference


Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of trouble shooting, general maintenance, and basic types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.



When a service technician should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the technical manual.

•Technical Manuals—for actual service

Technical Manuals are concise service guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.

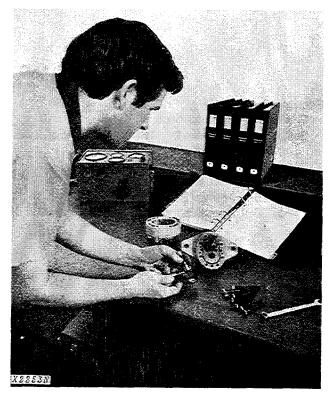

Use Technical Manuals for Actual Service

This technical manual was written for you—an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it when you need to know correct service procedures or specifications.

Some features of this manual:

- Inside front cover "Table of Contents" and "Maintenance Without Accident".
- Section 10 General specifications and services.
- Section 20 Engine
- Section 30 Fuel system
- Section 40 Electrical System
- Section 50 Power train
- Section 60 Steering and brakes
- Section 70 Hydraulic system
- Section 80 Miscellaneous components
- Inside rear cover Index

MAINTENANCE WITHOUT ACCIDENT WORK SAFELY




This safey alert symbol identifies important safety messages in this manual and on the tractor. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

EVERY EMPLOYER HAS A SAFETY PROGRAM. KNOW WHAT IT IS!



Consult your shop foreman for specific instructions on a job, and the safety equipment required.

For instance, you may need: Hard hat, safety shoes, safety goggles, heavy gloves, reflector vests, ear protectors, respirators.

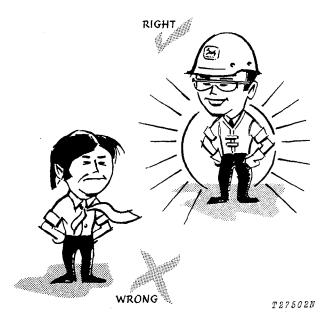

BE ALERT!

Plan ahead—work safely—know how to use a first-aid kit and a fire extinguisher—and where to get assistance.



Maintenance Area

Make sure the maintenance area is adequately vented.

Keep maintenance area CLEAN AND DRY. Oily and wet floors are slippery; greasy rags are a fire hazard; wet spots are dangerous when working with electrical equipment.

Store starting aids in a cool and well-ventilated place, out of the reach of unauthorized personnel.



Thank you very much for your reading.

Please click here to get more information.