


John Deere 762A Scraper

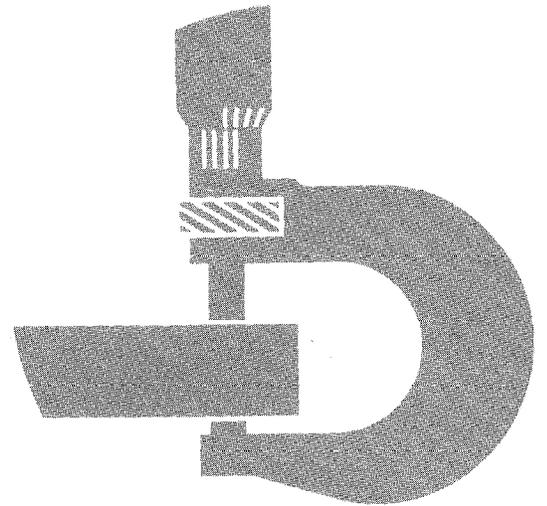

762A SCRAPER Technical Manual TM-1225 (Jul-84)

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents and Index
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery, and After-Sale Services
- Group V - Fuels and Lubricants

SECTION 1 - WHEELS

- Group 0110 - Powered Wheels and Fastenings
- Group 0120 - Non-Powered Wheels and Fastenings
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential or Bevel Drive
- Group 0225 - Input Drive Shafts and U-Joints
- Group 0230 - Non-Powered Wheel Axles
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0260 - Hydraulic System
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0325 - Input Drive Shafts and U-Joints
- Group 0341 - Housings and Covers
- Group 0342 - Mounting Parts
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Hydraulic System
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings, and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0422 - Starting Motor and Fastenings
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems, Radiator, Fan Shroud and Fan
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust System
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems

SECTION 6 - TORQUE CONVERTER

- Group 0641 - Housing and Cover
- Group 0651 - Turbine, Gears and Shaft
- Group 0660 - Hydraulic System
- Group 0699 - Specifications and Special Tools

Copyright © 1984
DEERE & COMPANY
Moline, Illinois
All Rights Reserved
Previous Editions
Copyright © 1982 Deere & Company
Copyright © 1980 Deere & Company

SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

SECTION 9 - STEERING SYSTEM

- Group 0920 - Power Steering
- Group 0960 - Hydraulic System
- Group 0999 - Specifications and Special Tools

SECTION 10 - SERVICE BRAKES

- Group 1011 - Active Elements
- Group 1015 - Controls Linkage
- Group 1060 - Hydraulic System
- Group 1099 - Specifications and Special Tools

SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

SECTION 13 - MISCELLANEOUS VEHICLE

- Group 1370 - Lubrication Systems

SECTION 16 - ELECTRICAL SYSTEM

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

SECTION 17 - FRAME, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1799 - Specifications and Special Tools

SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure
- Group 1921 - Grille and Grille Housing
- Group 1927 - Fenders

SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2002 - Mirror
- Group 2004 - Horn and Warning Devices
- Group 2006 - Cigar Lighter

SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

SECTION 35 - SCRAPER AND HAULAGE DEVICE

- Group 3501 - Blades or Cutting Edges
- Group 3540 - Frames
- Group 3560 - Hydraulic System
- Group 3599 - Specifications and Special Tools

SECTION 36 - CONVEYOR AND ELEVATING DEVICE

- Group 3612 - Conveyor or Mast
- Group 3640 - Frames
- Group 3650 - Gearbox
- Group 3660 - Hydraulic System
- Group 3699 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Testing and Diagnosis
- Group 9010 - Engine
- Group 9015 - Electrical
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

ALPHABETICAL INDEX

A	C
Air conditioning system testing	Canopy
Component location	C1 check valve
Diagnosis and testing	C1 clutch pads
General information	Camshaft
Operational test	Case, differential
Safety precautions	Central lubrication system
System service	Center adjusting idler
Accumulator, brake	Chain, elevator
After sale inspection	Charging system wiring
Air cleaner	Cigar lighter
Air conditioning system	Circuit board, elevator
Air filter element	Circuit breakers
Air filter restriction indicator	Circuit, elevator control
Alarm, reverse warning	Clutch coil and housing
Alternator	Coil and housing, clutch
Auxiliary bowl lower solenoid valve and check valve assembly	Cold weather starting aids
Axle bearings	Command potentiometer
Axle filter restriction indicator	Compressor
Axle housing, drive	Compressor hub and drive plate assembly
Axle shaft	Compressor, leak testing
Axles, non-powered wheel	Compressor oil
	Compressor pulley and bearing
B	Compressor relief valve
Batteries	Compressor shaft seal
Bearings, axle	Condenser
Bearings, main	Connecting rods
Belt, seat	Controller, transmission
Bevel drive	Control circuit, transmission
Blades and cutting edges	Controls linkage, parking - emergency brakes
Blower motor assembly	Coolant conditioner
Bowl and ejector gate switches	Coolant filter
Bowl control valve	Cooler, oil
Bowl lift cylinder	Cover, differential
Brake accumulator	Conveyor
Brake hydraulic system	Conveyor and elevating device
Brakes, parking-emergency	Conveyor and elevating device, hydraulic system
Brake pedal	Crankshaft
Brakes, scraper hydraulic	Cutting edges and blades
Brakes, service	Cylinder block
Brakes, tractor	Cylinder, bowl lift
Brake valve	Cylinder head and valves
	Cylinder, ejector gate
	Cylinder, sliding floor
	Cylinders, steering

Continued on next page



Thank you very much
for your reading.
Please click here
to get more information.