


John Deere JD862 Scraper

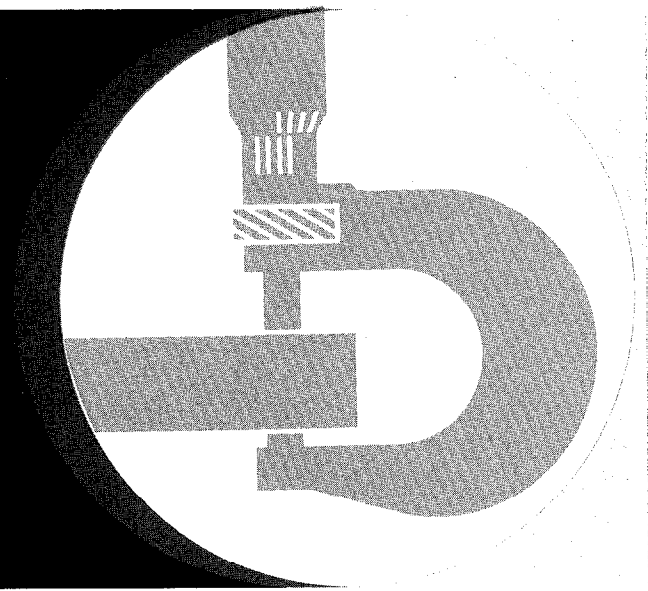

TECHNICAL MANUAL

PDF



DOWNLOAD



TM-1212

LITHO IN U.S.A. (T) New

JD862 SCRAPER Technical Manual TM-1212 (Sep-84)

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery, and After-Sale Services
- Group V - Fuels and Lubricants

SECTION 1 - WHEELS

- Group 0110 - Powered Wheels and Fastenings
- Group 0120 - Non-Powered Wheels and Fastenings
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential or Bevel Drive
- Group 0225 - Input Drive Shafts and U-Joints
- Group 0230 - Non-Powered Wheel Axles
- Group 0250 - Axle Shaft, Bearings, Reduction Gears
- Group 0260 - Hydraulic System
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0325 - Input Drive Shafts and U-Joints
- Group 0341 - Housings and Covers
- Group 0342 - Mounting Parts
- Group 0350 - Gears, Shafts, Bearings, and Power Shift Clutch
- Group 0360 - Hydraulic System
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings, and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0423 - Alternator and Generator Mounting
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust System
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

SECTION 6 - TORQUE CONVERTER

- Group 0641 - Housing and Cover
- Group 0651 - Turbine, Gears, Shaft, etc.
- Group 0660 - Hydraulic System
- Group 0699 - Specifications and Special Tools

Copyright © 1984
DEERE & COMPANY
Moline, Illinois
All Rights Reserved
Previous Edition
Copyright © 1979 DEERE & COMPANY

SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

- SECTION 9 - STEERING SYSTEM
Group 0960 - Hydraulic System
Group 0999 - Specifications and Special Tools
- SECTION 10 - SERVICE BRAKES
Group 1011 - Active Elements
Group 1015 - Controls Linkage
Group 1060 - Hydraulic System
Group 1099 - Specifications and Special Tools
- SECTION 11 - PARKING-EMERGENCY BRAKES
Group 1111 - Active Elements
Group 1115 - Controls Linkage
Group 1199 - Specifications and Special Tools
- SECTION 13 - MISCELLANEOUS VEHICLE
Group 1370 - Lubrication Systems
- SECTION 16 - ELECTRICAL SYSTEM
Group 1671 - Batteries, Support and Cables
Group 1672 - Alternator, Regulator and Charging System Wiring
Group 1673 - Lighting System
Group 1674 - Wiring Harness and Switches
Group 1675 - System Controls
Group 1676 - Instruments and Indicators
Group 1699 - Specifications and Special Tools
- SECTION 17 - FRAME, CHASSIS OR SUPPORTING STRUCTURE
Group 1740 - Frame Installation
Group 1746 - Frame Bottom Guards
Group 1799 - Specifications and Special Tools
- SECTION 18 - OPERATOR'S STATION
Group 1810 - Operator Enclosure
Group 1821 - Seat and Seat Belt
Group 1830 - Heating and Air Conditioning
Group 1899 - Specifications and Special Tools
- SECTION 19 - SHEET METAL AND STYLING
Group 1910 - Hood or Engine Enclosure
Group 1913 - Miscellaneous Shields
Group 1921 - Grille and Grille Housing
Group 1927 - Fenders
Group 1999 - Specifications and Special Tools
- SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS
Group 2004 - Horn
Group 2006 - Cigar Lighter
- SECTION 21 - MAIN HYDRAULIC SYSTEM
Group 2160 - Hydraulic System
Group 2199 - Specifications and Special Tools
- SECTION 35 - SCRAPER AND HAULAGE DEVICE
Group 3501 - Blades or Cutting Edges
Group 3540 - Frames
Group 3560 - Hydraulic System
Group 3599 - Specifications and Special Tools
- SECTION 36 - CONVEYOR AND ELEVATING DEVICE
Group 3612 - Conveyor or Mast
Group 3640 - Conveyor and Elevating Device Frame
Group 3650 - Gear Box
Group 3660 - Hydraulic System
Group 3699 - Specifications and Special Tools
- SECTION 90 - SYSTEM TESTING
Group 9005 - General Information - Seven Basic Steps of Testing and Diagnosis
Group 9010 - Engine
Group 9015 - Electrical
Group 9020 - Power Train
Group 9025 - Hydraulic System (Flow Meter)
Group 9030 - Miscellaneous Components
Group 9031 - Heating and Air Conditioning
Group 9035 - Specifications and Special Tools

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

ALPHABETICAL INDEX

- Accumulator, brake 1060-1
Adjusting idler 3612-10
After-sale inspection I-IV-17
Air cleaner 0520-2
Air cleaner service door 1910-5
Air conditioning system 1830-3
Air conditioning system testing:
 Air conditioning schematic 9031-5
 Diagnosis and testing 9031-7
 Diagnosis flow chart 9031-9
 General information 9031-5
 Operational diagnostic chart 9031-10
 Safety precautions 9031-11
 System service 9031-12
Air filter 0520-1
Air filter restriction indicator 1676-4
Alternator and generator mounting 0423-1
Alternator, regulator and charging system
 wiring 1672-1
Auxiliary systems, engine 0505-3
Axle and suspension system 0201-1
Axle hydraulic oil filter 0260-6
Axle hydraulic pump 0260-4
Axle, shaft, bearings and reduction gears 0250-1
Axles and suspension hydraulic systems 0260-1
Axles, non-powered wheel 0230-1
- B**
- Batteries 1671-3
Belly pan, transmission 1913-1
Blades 3501-3
Blower motor 1830-27
Bottom guards, frame 1746-1
Bowl control valve 3560-1
Bowl lift cylinders 3560-10
Brake accumulator 1060-1
Brake housings, transmission 0350-18, 0350-36
Brake, parking 1111-3
Brake pressure indicator 1676-10
Brake valve 1060-7
Brakes, scraper 1011-4
Brakes, tractor 1011-3
- C**
- Cable, engine shut-off 0515-3
Camshaft and valve actuating means 0402-1
Canopy 1810-4
Case differential 0210-2
Central lubrication system 1370-3
Chain, elevator 3612-7
Charging the battery 1671-7
Cigar lighter 2006-1
Circuit board, elevator 1675-1
Circuit breakers 1674-5
Circuit, elevator control 1675-1
Circuit, transmission control 1675-3
Clutch coil and housing 1830-13
Clutch pack assembly, transmission 0350-31
Cold weather starting aids 0505-3
Column, steering 0960-3
Command potentiometer 1675-1
Compressor 1830-3
Compressor hub 1830-6
Compressor pulley and bearing 1830-12
Compressor relief valve 1830-25
Compressor shaft seal 1830-8
Condenser 1830-19
Connecting rods and pistons 0403-1
Control box, transmission 1675-3
Control circuit relief valves 0960-12
Controls linkage, parking-emergency brakes 1115-1
Controls linkage, service brakes 1015-1
Controls, speed 0515-1
Converter, torque 0641-1
Conveyor 3612-3
Conveyor and elevating device hydraulic
 system 3660-1
Coolant filter/conditioner 0510-4
Cooling system 0510-1
Crankshaft and main bearings 0401-1
Cutting edges 3501-3
Cylinder block 0404-1
Cylinder head and valves 0409-1
Cylinder liner 0404-2
Cylinder, sliding floor 3560-10
Cylinders, bowl lift 3560-10
Cylinders, ejector gate 3560-10
Cylinders, follow-up control steering 0960-17
Cylinders, steering 0960-21
- D**
- Delivery service I-IV-17
Differential case 0210-2
Differential housing 0210-3
Differential lock check valve 0260-5
Differential lock valve 0260-1
Differential or bevel drive 0210-1
Differential spiral bevel pinion shaft
 and quill 0210-12
Dimensions I-III-3
Diodes 1676-11
Door, air cleaner service 1910-5
Door, engine service 1910-6
Draft frame 3540-2
Drive axle housing and support 0201-3



Thank you very much
for your reading.
Please click here
to get more information.