

Mechanical Front-Wheel-Drive Axles 1100 Series



JOHN DEERE

COMPONENT TECHNICAL MANUAL Mechanical Front-Wheel-Drive Axles 1100 Series

CTM 17 (01 APR89) English



John Deere Waterloo Works
CTM 17 (01 APR89)

Introduction

This component technical manual contains necessary instructions to repair John Deere Mechanical Front Wheel-Drive Axles (or MFWD). This manual also includes theory of operation.

Use this component technical manual in conjunction with the machine technical manual. See the machine technical manual for axle removal and installation.

ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

When you see this symbol on the machine or in this manual, be alert to the possibility of personal injury or death. Follow the instructions in the safety message.

All information, illustrations and specifications in this manual are based on the latent product information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT©1988. DEERE & COMPANY, Moline, Illinois. All rights reserved. A John Deere ILLUSTRATION Manual.

U23;INTRO 1 220888

MFWD Axies CTM-17 (4-89)

CONTENTS

	Page		Page
GROUP 00-Safety	00-1	Install King Pin Yoke to Knuckle-Spindle	
GROUP 01-General	01-1	Housing	10-10
		Install Wheel Hub and Knuckle-Spindle	
		Assembly	10-11
GROUP 05-Planetary Carrier		Adjust Steering Stops	10-11
Planetary Carrier			
Special Tools and Specifications	05-1	GROUP 15--Differential and Differential	
Remove Planetary Carrier	05-1	Drive Shaft	
Remove Planetary Gears	05-2	Differential and Differential Drive	
Remove-Install Ring Gear	05-3	Shaft	
Replace Wheel Hub, Oil Seal and		Special Tools and Specifications	15-1
Bearings	05-3	Replace Differential Drive Shaft	
Install Planetary Carrier	05-6	Oil Seal	15-2
		Install Differential Drive Shaft	15-4
GROUP 10-Wheel Hubs, Knuckle-Spindle		Diff. Drive Shaft Horizontal Adjusting	
and Axies		Procedure	15-5
Wheel Hubs, Knuckle-Spindle and		Remove Differential	15-6
Axies		Disassemble Differential	15-7
Special Tools and Specifications	10-1	Assemble Differential	15-8
Remove Hub and Knuckle-Spindle Assembly ...	10-2	Remove Ring Gear	15-9
10-2		Install Ring Gear	15-9
Remove King Pin Assemblies	10-2	Remove Differential Drive Shaft	15-9
Remove King Pin Yoke Bushing and		Install Differential Drive Shaft	15-10
Seal	10-3	Diff. Drive Shaft Vertical Adjusting	
Install King Pin Yoke Bushing and		Procedure	15-12
Oil Seal	10-3	Install Input Housing	15-13
Remove Ring Gear Retainer	10-4	Replace Axle Pivot Pin	15-14
Remove Wheel Hub	10-4	Replace Pivot Pin Bushing	15-15
Remove Wheel Hub Oil Seal, Bearing		Replace Oscillating Pivot Bracket	15-15
Cups and Cones	10-5		
Remove Seal and Bushing From Sleeve	10-5	GROUP 105-Theory of Operation	
Remove Knuckle-Spindle Oil Seal		Theory of Operation	105-1
and Bushing	10-6		
Separate Axle Shaft	10-6	GROUP 199--Special Tools	
Repair constant-Velocity Joint	10-7	Special Tools	199-1
Install Knuckle-Spindle Oil Seal			
and Bushing	10-7		
Install Sleeve Bushing and Oil Seal	10-8		
Install Oil Seal, Bearings and Wheel			
Hub Onto Knuckle-Spindle	10-8		

Mechanical Front-Wheel-Drive Axles 1100 Series

 


COMPONENT TECHNICAL MANUAL Mechanical Front-Wheel-Drive Axles 1100 Series

CTM17 (01APR89) English

John Deere Waterloo Works
CTM17 (01APR89)

LITHO IN U.S.A.
ENGLISH



Introduction

This component technical manual contains necessary instructions to repair John Deere Mechanical Front Wheel-Drive Axles (or MFWD). This manual also includes theory of operation.

Use this component technical manual in conjunction with the machine technical manual. See the machine technical manual for axle removal and installation.



This safety-alert symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

When you see this symbol on the machine or in this manual, be alert to the possibility of personal injury or death. Follow the instructions in the safety message.

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT® 1988. DEERE & COMPANY, Moline, Illinois. All rights reserved. A John Deere ILLUSTRATION™ Manual.

U23;INTRO 1 220888



Thank you very much
for your reading.
Please click here
to get more information.