 


# John Deere 850K Crawler Dozer (PIN: 1T0850KX\_ \_E178122-271265 ) Operators Manual (OMT284161)

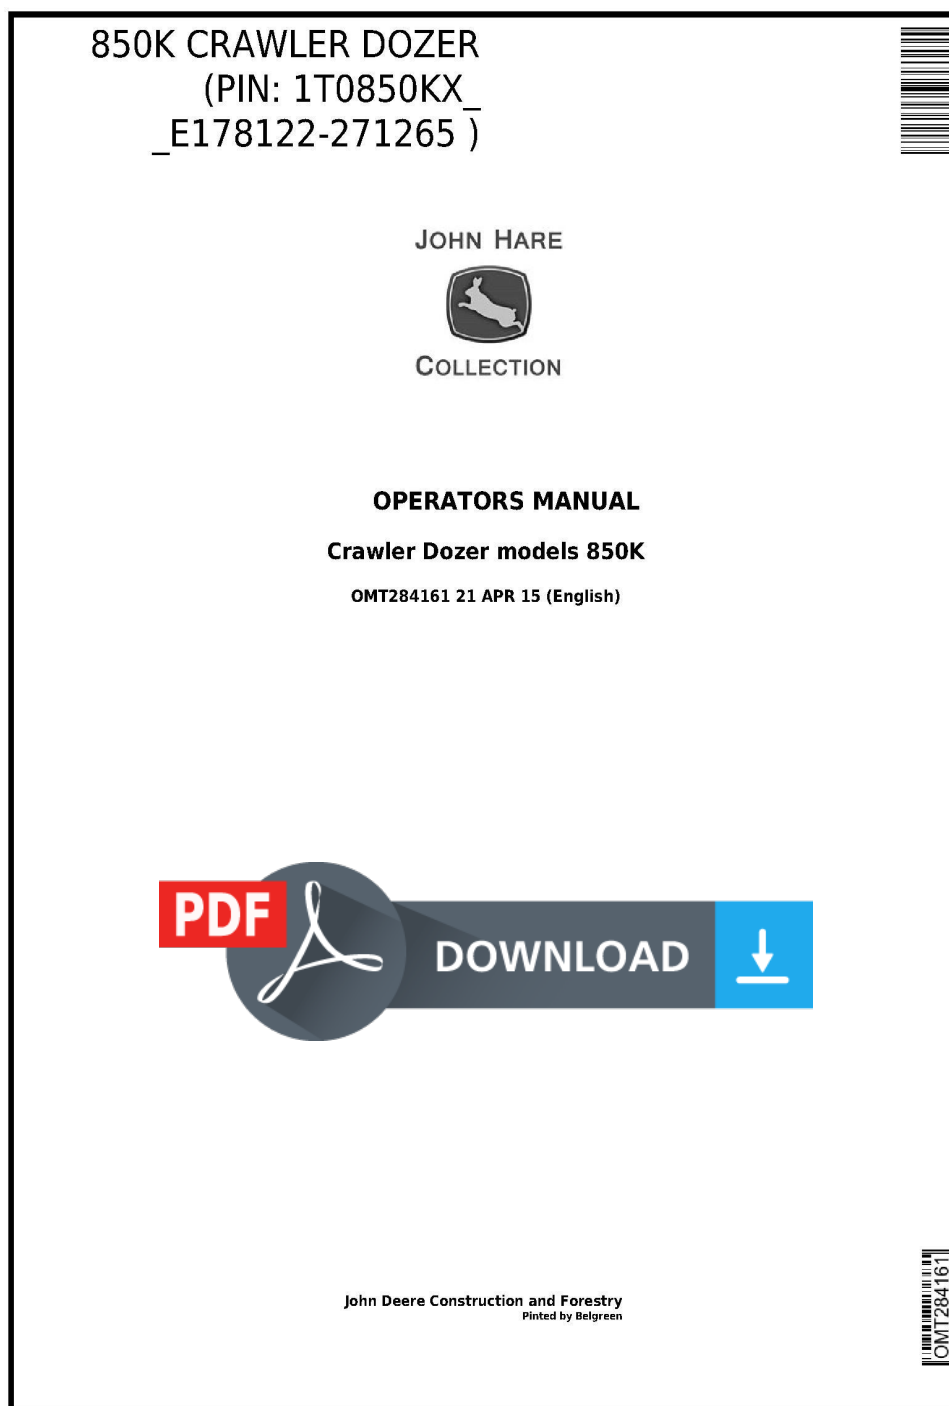

**Covers:** 850K,1T0850KX\_,\_E178122-271265

**Type:** Service Manual

**Language:** English

**Pages:** 295

**Format:** PDF

**Features:** Bookmarked, searchable, printable

**Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 850K Crawler Dozer (PIN: 1T0850KX\_E178122-271265 ) Operators Manual (OMT284161)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

 
 
 
 
 
**Contents:**

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

## Group 1.5 - Safety—Safety Signs

### Safety Signs

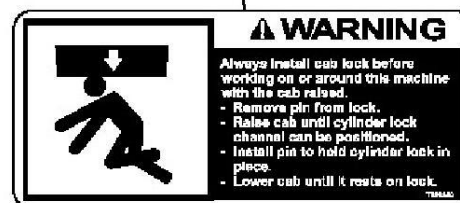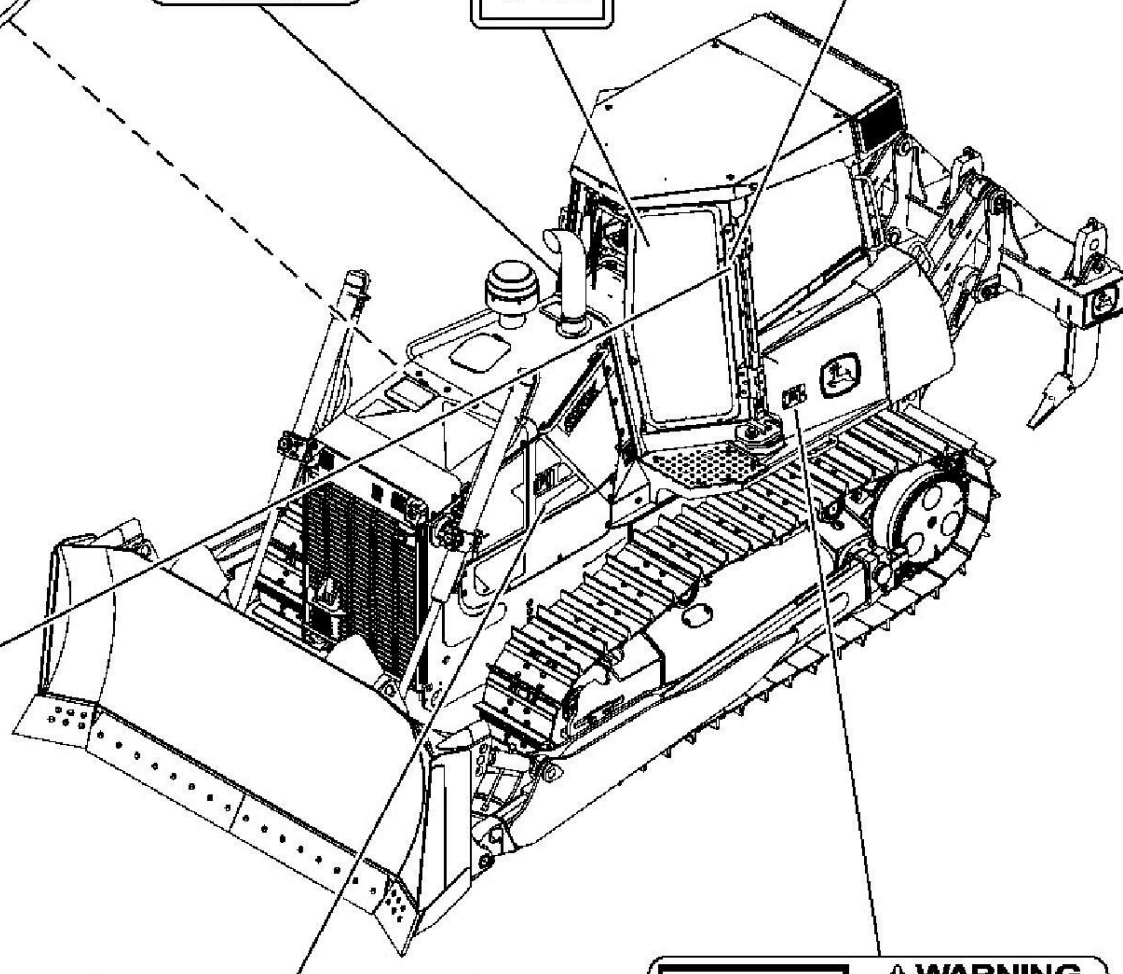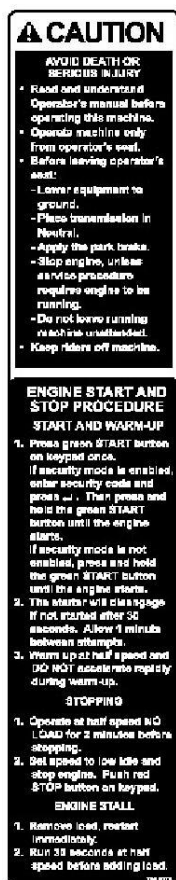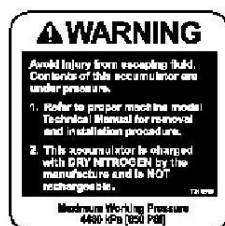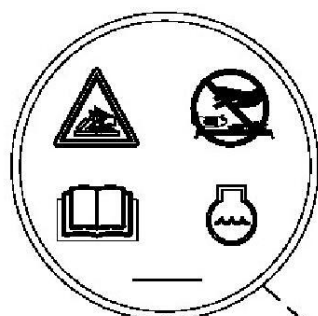

TX1089983

Safety Signs

**ELECTRICAL SYSTEM:** Check for worn or frayed wires and loose or corroded connections.

**HYDRAULIC SYSTEM:** Check for leaks, missing or loose clamps, kinked hoses, and lines or hoses that are making contact with each other or other machine parts.

**FUEL SYSTEM:** Drain fuel filter. See Drain Sediment From Fuel Tank. (Section 3-3.)

**HARDWARE:** Check for loose or missing parts.

**LUBRICATION:** Check lubrication points on Periodic Maintenance Chart. See Service Your Machine at Specified Intervals in the Maintenance—Periodic Maintenance section. (Section 3-2.)

**SHEET METAL AND TRACKS:** Check for bent, broken, loose, or missing parts.

**PROTECTIVE DEVICES:** Inspect guards, shields, ROPS, and seat belt.

**SAFETY:** Walk around machine to be sure all persons are away from machine area.


## Check Instruments Before Starting


 
### LEGEND:

- 1 Engine Start Switch
- 2 STOP Indicator
- 3 Park Brake Indicator
- 4 Engine Oil Pressure Gauge
- 5 Warning Indicator
- 6 Engine Alternator Warning Indicator

### Sealed Switch Monitor

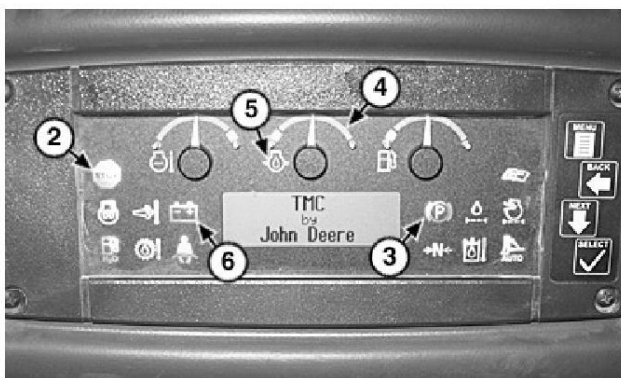

### Display Monitor

Press and release engine start switch (1). The alarm sounds briefly, John Deere screen is displayed momentarily, and all indicators on display monitor illuminate. All gauges will position gauge needle to the 12 o'clock position before positioning to current input values.

If security system has been enabled by owner, operator logon screen appears on display window. Operator must enter valid personal identification number (PIN) to access monitor screens.

Display window then populates with normal display items with gauge pointers positioned to current input values.

After the indicator check, the STOP indicator (2) and park brake indicator (3) remain illuminated (the STOP indicator flashes). The engine oil pressure gauge (4) and warning indicator (5) are highlighted in red and flash until engine is started. The engine alternator voltage indicator (6) will also remain on until engine is running and alternator is charging.



Thank you very much  
for your reading.  
Please click here  
to get more information.