

SERVICE MANUAL

**T9.390 / T9.450 / T9.505 /
T9.560 / T9.615 / T9.670**
Tier 4
Tractor



Part number 47488217
English
February 2013
Replaces part number 84354096





SERVICE MANUAL

T9.390 [ZBF200001 -], T9.390 [ZCF200001 -], T9.390 [ZDF200001 -], T9.450 [ZBF200001 -], T9.450 [ZCF200001 -], T9.450 [ZDF200001 -], T9.505 [ZBF200001 -], T9.505 [ZCF200001 -], T9.505 [ZDF200001 -], T9.560 [ZBF200001 -], T9.560 [ZCF200001 -], T9.560 [ZDF200001 -], T9.615 [ZBF200001 -], T9.615 [ZCF200001 -], T9.615 [ZDF200001 -], T9.670 [ZBF200001 -], T9.670 [ZCF200001 -], T9.670 [ZDF200001 -]

Link Product / Engine

Product	Market Product	Engine
null [ZBF200001 -]	North America	F2CFE613A*A
null [ZCF200001 -]	North America	F2CFE613A*A
null [ZDF200001 -]	North America	F2CFE613A*A
null [ZBF200001 -]	North America	F3BFE613A*A001
null [ZCF200001 -]	North America	F3BFE613A*A001
null [ZDF200001 -]	North America	F3BFE613A*A001
null [ZBF200001 -]	North America	F3BFE613A*A001
null [ZCF200001 -]	North America	F3BFE613A*A001
null [ZDF200001 -]	North America	F3BFE613A*A001
null [ZBF200001 -]	North America	F3BFE613A*A001
null [ZCF200001 -]	North America	F3BFE613A*A001
null [ZDF200001 -]	North America	F3BFE613A*A001
null [ZBF200001 -]	North America	F3DFE613A*A001
null [ZCF200001 -]	North America	F3DFE613A*A001
null [ZDF200001 -]	North America	F3DFE613A*A001
null [ZBF200001 -]	North America	F3DFE613A*A001
null [ZCF200001 -]	North America	F3DFE613A*A001
null [ZDF200001 -]	North America	F3DFE613A*A001

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.400] Engine cooling system	10.3
[10.414] Fan and drive	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
Transmission	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.220] Gearbox.....	31.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1

[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.105] Charge pump.....	35.3
[35.106] Variable displacement pump	35.4
[35.204] Remote control valves	35.5
[35.220] Auxiliary hydraulic pump and lines	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units	35.8
[35.600] High flow hydraulics	35.9
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
Frames and ballasting	39
[39.100] Frame	39.1
[39.110] Drawbar and hitch assembly	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump	41.3
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Tracks and track suspension	48
[48.100] Tracks	48.1
[48.130] Track frame and driving wheels	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4

Cab climate control	50
[50.104] Ventilation	50.1
[50.200] Air conditioning.....	50.2
[50.300] Cab pressurizing system	50.3
Electrical systems	55
[55.010] Fuel injection system.....	55.1
[55.014] Engine intake and exhaust system.....	55.2
[55.024] Transmission control system	55.3
[55.035] Remote control valve electric control	55.4
[55.045] Front axle control system	55.5
[55.046] Rear axle control system.....	55.6
[55.048] Rear Power Take-Off (PTO) control system	55.7
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.8
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.9
[55.100] Harnesses and connectors.....	55.10
[55.130] Rear three-point hitch electronic control system	55.11
[55.301] Alternator.....	55.12
[55.302] Battery.....	55.13
[55.404] External lighting	55.14
[55.522] Cab Power Take-Off (PTO) controls	55.15
[55.640] Electronic modules	55.16
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.17
[55.DTC] FAULT CODES.....	55.18
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.102] Engine shields, hood latches, and trims	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4

[90.151] Cab interior..... 90.5



INTRODUCTION

Contents

INTRODUCTION

Safety rules	3
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Personal safety - Do not operate tag	4
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Safety rules	5
T9.390 NA, T9.450 NA, T9.505 NA, T9.560 NA, T9.615 NA, T9.670 NA	
Foreword - Ecology and the environment	17
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Basic instructions - Important notice regarding equipment servicing	18
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Basic instructions - Shop and assembly	19
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Basic instructions - Product identification	21
T9.390 NA, T9.450 NA, T9.505 NA, T9.560 NA, T9.615 NA, T9.670 NA	
Torque - Minimum tightening torques for normal assembly	25
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Torque - Standard torque data for hydraulics	28
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Capacities - Product identification numbers ZCF and before	30
T9.390 [ZBF200001 -], T9.390 [ZCF200001 -], T9.450 [ZBF200001 -], T9.450 [ZCF200001 -], T9.505 [ZBF200001 -], T9.505 [ZCF200001 -], T9.560 [ZBF200001 -], T9.560 [ZCF200001 -], T9.615 [ZBF200001 -], T9.615 [ZCF200001 -], T9.670 [ZBF200001 -], T9.670 [ZCF200001 -]	
Definition - Important notice regarding equipment servicing	31
T9.390, T9.450, T9.505, T9.560, T9.615, T9.670	
Capacities - Product identification numbers ZDF and after	32
T9.390 [ZDF200001 -] NA, T9.450 [ZDF200001 -] NA, T9.505 [ZDF200001 -] NA, T9.560 [ZDF200001 -] NA, T9.615 [ZDF200001 -] NA, T9.670 [ZDF200001 -] NA	
Definition - Machine orientation	33
T9.390 NA, T9.450 NA, T9.505 NA, T9.560 NA, T9.615 NA, T9.670 NA	

Safety rules

T9.390, T9.450, T9.505, T9.560, T9.615, T9.670


Personal safety





This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

 WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

 CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation that, if not avoided, could result in machine or property damage.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information that clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.



Thank you very much
for your reading.
Please click here
to get more information.