

ORIGINAL INSTRUCTIONS

# OPERATOR'S MANUAL

---

**Workmaster™ 33**

**Workmaster™ 37**

Compact Tractor



**Part number 47832587**

1<sup>st</sup> edition English

July 2015



# Contents

---

## 1 GENERAL INFORMATION

Note to the Owner .....	1-1
Intended use .....	1-2
Electro-magnetic compatibility (EMC) .....	1-4
Manual scope and required training level .....	1-5
Metric and imperial units abbreviations .....	1-6
Product identification .....	1-8
Operator's manual storage .....	1-8
Machine orientation .....	1-9
Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment - Product overview .....	1-10

## 2 SAFETY INFORMATION

Precautionary statements .....	2-1
Safety rules .....	2-2
Do not operate tag .....	2-9
Roll Over Protection Structure (ROPS) .....	2-10
Ecology and the environment .....	2-11
Safety signs .....	2-12
Instructional signs .....	2-24
International symbols .....	2-32

## 3 CONTROLS AND INSTRUMENTS

### OPERATOR'S SEAT

Seat belt .....	3-1
Seat controls .....	3-2
Roll Over Protection Structure (ROPS) .....	3-3

### FORWARD CONTROLS

Instrument panel .....	3-5
Engine fault codes display .....	3-7
Cruise control .....	3-10
Transmission shuttle shift lever .....	3-11
Clutch pedal .....	3-12
Brake pedals .....	3-13
Foot throttle pedal .....	3-14
Hand throttle lever .....	3-15
Horn switch .....	3-16
Power Take-Off (PTO) switch .....	3-17
Key switch .....	3-18
Differential lock pedal .....	3-19
Hydrostatic Transmission (HST) control pedals .....	3-20
Tilt steering lever .....	3-21
Multifunction light switch .....	3-22
DPF switch .....	3-23

---

## LEFT-HAND SIDE CONTROLS

Transmission range lever .....	3-24
Park brake .....	3-25
Four wheel drive (4WD) lever .....	3-26
Mid Power Take Off (PTO) lever - optional .....	3-27

## RIGHT-HAND SIDE CONTROLS

Hydraulic power lift (HPL) .....	3-28
Rear remote control valve(s) - optional .....	3-29
Mid mount two spool control valve .....	3-30
Transmission main shift lever.....	3-32

## EXTERIOR CONTROLS

Hood release latch .....	3-33
--------------------------	------

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

Engine break-in procedure .....	4-1
Diesel Particulate Filter (DPF) regeneration.....	4-2
Power Take-Off (PTO) operation .....	4-8
Three-point linkage .....	4-10
Attaching three-point equipment .....	4-11
Extendible drawbar .....	4-14
Hydraulic lift rocker .....	4-15
Hydraulic Power Lift (HPL) drop rate control valve .....	4-16

### STARTING THE UNIT

Key switch .....	4-17
Cold starting aids .....	4-18
Starting the engine .....	4-19
Starting the tractor with jumper cables .....	4-22

### STOPPING THE UNIT

Stopping the engine .....	4-23
Emergency stopping .....	4-24
Brakes .....	4-25

### MOVING THE UNIT

Steering wheel adjustment .....	4-27
Steering operation .....	4-28
Transmission operation at low ambient temperatures.....	4-29
Hydrostatic Transmission (HST) operation .....	4-30
12 x 12 Synchronized transmission operation.....	4-32

---

## PARKING THE UNIT

Brakes and controls - Park .....	4-34
----------------------------------	------

## 5 TRANSPORT OPERATIONS

### ROAD TRANSPORT

External lighting - Identification .....	5-1
Hazard warning light operation .....	5-2
Turn signal operation .....	5-3
Road lights operation .....	5-4
Work lights operation .....	5-5
Rear work light (optional) .....	5-6
Driving the vehicle .....	5-7

### SHIPPING TRANSPORT

Carrying the tractor on a transporter .....	5-8
---	-----

### RECOVERY TRANSPORT

Towing .....	5-8
--------------	-----

## 6 WORKING OPERATIONS

### GENERAL INFORMATION

Tractor ballasting .....	6-1
Tractor ballasting weights .....	6-2
Liquid ballast .....	6-4

## 7 MAINTENANCE

### GENERAL INFORMATION

General information .....	7-1
Safety rules diesel fuel .....	7-3
Biodiesel fuel .....	7-3
Refueling the tractor .....	7-4
Organic Acid Technology (OAT) coolant.....	7-5
Change engine coolant to Organic Acid Technology (OAT) coolant.....	7-6
Fluids and lubricants .....	7-8
Capacities .....	7-8

### MAINTENANCE CHART

Maintenance chart .....	7-9
-------------------------	-----

#### Every 10 hours or daily

Engine oil level .....	7-10
Engine cooling system .....	7-12

#### After first 50 hours

Engine oil and filter .....	7-13
-----------------------------	------

---

Pre-fuel filter .....	7-15
Fuel filter .....	7-16
Hydraulic oil filter .....	7-17
Hydrostatic (HST) oil filter .....	7-17
Roll Over Protective Structure (ROPS) .....	7-18
Wheels bolt/nut .....	7-19

## Every 50 hours

Grease fittings .....	7-20
Transmission fluid level .....	7-22
Clutch pedal free play .....	7-23
Brake pedal free play .....	7-24
Hydrostatic transmission (HST) neutral adjustment .....	7-25
Engine belts .....	7-27
Tires and wheels .....	7-28
Front axle differential oil level .....	7-30
Air cleaner - outer element .....	7-31

## Every 100 hours

Fuel filter .....	7-32
-------------------	------

## Every 300 hours

Engine oil and filter .....	7-33
Hydraulic filter .....	7-33
Hydrostatic (HST) oil filter - HST system .....	7-33
Pre-fuel filter .....	7-33
Engine belts .....	7-33
Wheels bolt/nut .....	7-33
Air cleaner outer element .....	7-34

## Every 500 hours

Fuel filter .....	7-35
-------------------	------

## Every 600 hours

Front axle differential fluid .....	7-36
Transmission fluid .....	7-38

## Every 1000 hours

Air cleaner inner element .....	7-39
Engine coolant .....	7-40

## General maintenance

Fuel injection system - Bleed .....	7-42
Hydrostatic transmission (HST) neutral adjustment .....	7-44
Engine belts .....	7-44
Roll Over Protective Structure (ROPS) frame - Replace - Possible damage .....	7-44

---



Thank you very much  
for your reading.  
Please click here  
to get more information.