



Bobcat®

Trencher

LT112
MX112
LT113
LT213
LT313
LT414


Service Manual

(LT112) S/N 045200101 & Above
(MX112) S/N 045100101 & Above
(LT113) S/N 233800101 & Above
(LT213) S/N 045300101 & Above
(LT313) S/N 045400101 & Above
(LT414) S/N A0RS00101 & Above

PDF



DOWNLOAD

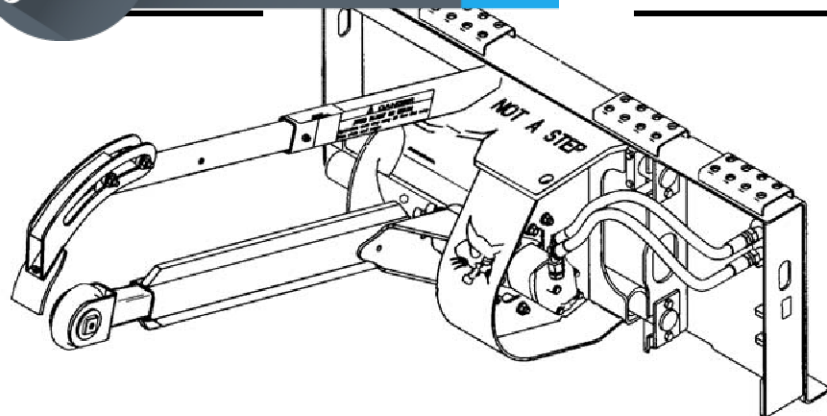

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.







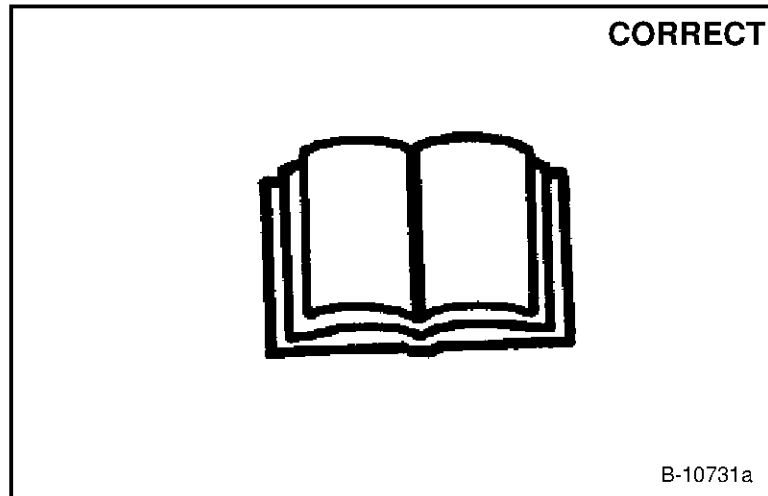

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



B-10731a

-  Never service attachments without instructions. See Operation & Maintenance Manual and Attachment Service Manual.
-  Cleaning and maintenance are required daily.
-  Never service or adjust attachment with the engine running unless instructed to do so in manual.
-  Always lower the attachment to the ground before lubricating or servicing.
-  Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
-  Stop, cool and clean engine of flammable materials before checking fluids.
-  Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.
-  Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.



Bobcat®

ALPHABETICAL INDEX

ATTACHMENT DELIVERY REPORT	III
AUGER	30-10-1
BOOM	30-50-1
BOOM END WHEEL (LT313 & LT414)	30-80-1
BOOM END WHEEL (LT112, MX112, LT113 & LT231)	30-90-1
DIGGING CHAIN	30-20-1
DRIVE SPROCKET	30-40-1
GLOSSARY OF HYDRAULIC SYMBOLS FOR ATTACHMENTS	SPEC-40-1
GREASE CYLINDER	30-60-1
HEAD SHAFT	30-30-1
HYDRAULIC MOTOR (LT112, MX112, MT113 & LT213)	20-20-1
HYDRAULIC MOTOR (LT313)	20-21-1
HYDRAULIC MOTOR (LT414)	20-22-1
HYDRAULIC SCHEMATIC	SPEC-30-1
INSPECTION	10-20-1
IDENTIFICATION	IV
SERIAL NUMBER LOCATION	III
SIDE SHIFT BARS	30-70-1
SIDE SHIFT CONTROL VALVE	20-30-1
SIDE SHIFT CYLINDER	20-10-1
SPECIFICATIONS	SPEC-10-1
TRENCH CLEANER	10-30-1
TROUBLESHOOTING	10-10-1



Thank you very much
for your reading.
Please click here
to get more information.