

8120, 8220, 8320, 8420 & 8520 Tractors (Worldwide Edition)

REPAIR TECHNICAL MANUAL 8120, 8220, 8320, 8420, 8520 TM1970 24JUL10 (ENGLISH)

For complete service information also see:

8120, 8220, 8320, 8420 & 8520 Tractors
Operation & Test TM1980

AMS Systems and Components Diagnosis and
Tests TM1909

Series 450, 6081 Diesel Engines CTM86

Alternators and Starting Motors

OEM Engine Accessories

PowerTech 8.1L Diesel Engines Level 5
Electronic Fuel System With Denso High
Pressure Common Rail CTM255



Table of contents

FOREWORD

DEALER PREDELIVERY INFORMATION FORM

Section 10 - GENERAL INFORMATION

Group 05 - Safety

Group 10 - General Information

Section 20 - ENGINE

Group 00 - Component Removal and Installation

Group 05 - Engine Repair

Section 30 - FUEL AND COOLING SYSTEMS

Group 05 - Diesel Fuel System

Group 10 - Air Intake System

Group 15 - Engine Cooling System

Group 20 - Coolers and Air Conditioning Condenser

Section 40 - ELECTRICAL

Group 05 - Connectors

Group 10 - Wiring Harness Routings

Group 15 - Charging Circuit

Group 20 - Starting Circuit

Group 25 - Relays, Fuses, Solenoids, and Switches

Group 30 - Monitoring Systems and Sensors

Group 35 - Armrest Control

Group 40 - Implement and Accessory Connectors

Group 45 - Convenience and Accessory Components

Section 50 - POWER SHIFT TRANSMISSION

Group 00 - Component Removal and Installation

Group 05 - Miscellaneous Repair

Group 10 - Transmission

Section 56 - DRIVE SYSTEMS

Group 00 - Component Removal and Installation

Group 05 - Rear Differential and Input Quill

Group 10 - Final Drives

Group 15 - Rear PTO

Group 20 - Hydraulic Pump Drive

Group 25 - MFWD Clutch

Group 30 - Drivelines

Section 57 - MFWD AXLES

Group 00 - Component Removal and Installation

Group 05 - Final Drives

Group 10 - Axle Housing

Group 15 - Differential

Group 20 - Input Gear Train

Group 25 - Oscillation

Group 30 - Secondary Brake

Section 58 - INDEPENDENT LINK SUSPENSION™ AXLE

Group 00 - Component Removal and Installation

Group 05 - Controls

Group 10 - Final Drives

Group 15 - Drive Shafts

Group 20 - Brakes

Group 25 - Differential

Group 30 - Steering

Group 35 - Suspension

Section 60 - STEERING AND BRAKES

- Group 05 - Steering Column
- Group 10 - Steering Control Assembly
- Group 15 - Steering Cylinders
- Group 20 - Brake Valve
- Group 25 - Brake Components
- Group 30 - Trailer Brakes

Section 70 - HYDRAULICS

- Group 00 - Component Removal and Installation
- Group 05 - Hydraulic System Repair and Cleanup
- Group 10 - Tandem Hydraulic Pump (Steering-Brakes-Charge)
- Group 15 - Secondary Hydraulic Pump (Hitch-SCV)
- Group 20 - Filter Bypass
- Group 25 - Hitch Valve, Selective Control Valves, and Couplers
- Group 30 - Hitch

Section 80 - MISCELLANEOUS

- Group 05 - Hood
- Group 10 - Front Axle (Two-Wheel Drive)
- Group 15 - Wagon and Pick-Up Hitch

Section 90 - OPERATOR STATION

- Group 00 - Component Removal and Installation
- Group 05 - Heating, Ventilating, and Air Conditioning (HVAC)
- Group 10 - Air Conditioning System
- Group 15 - Air Suspension Seat
- Group 20 - ACTIVE SEAT™
- Group 25 - Armrest
- Group 30 - Cab Door and Windshield

Section 99 - DEALER FABRICATED TOOLS

- Group 05 - Fabricated Tools



Thank you very much
for your reading.
Please click here
to get more information.