

**John Deere
690D Excavator
693D Feller-Buncher/
Delimber
Repair**



**TECHNICAL
MANUAL**



**John Deere Davenport Works
TM-1388 (Oct-87)**

Litho in U.S.A.

690D EXCAVATOR 693D FELLER-BUNCHER/DELIMBER TECHNICAL MANUAL TM-1388 (SEP-87)

SECTION AND GROUP CONTENTS

NOTE: This manual covers machine Repair (gray tabs).

SECTION I—GENERAL INFORMATION

- Group I—Introduction and Safety Information
- Group II—General Specifications
- Group III—Torque Values
- Group IV—Fuels and Lubricants
- Group V—Inspection Procedure

SECTION 01—TRACKS

- Group 0130—Track Systems
 - Track Roller, Track Chain,
 - Sprocket, Front Idler, Recoil
 - Spring, Relief Valve and Adjusting
 - Cylinder

SECTION 02—AXLES AND SUSPENSION SYSTEMS (PROPEL)

- Group 0250—Axle Shafts, Bearings and Reduction Gears
 - Tow Excavator and Propel
 - Gearbox
- Group 0260—Hydraulic Systems
 - Propel Motor, Propel Brake,
 - Propel Brake Valve with
 - Counterbalance Valve, Hydraulic
 - Lines, and Rotary Manifold

SECTION 04—ENGINE

- 6414 Engine—See CTM-4
- Group 0400—Removal and Installation
 - Engine, Oil Pan, Fuel Injection
 - Pump, Injection Nozzles, Bleed
 - Fuel System, Turbocharger and
 - Water Pump, Oil Cooler, Fuel
 - Transfer Pump, and Thermostat

SECTION 05—ENGINE AUXILIARY SYSTEMS

- Group 0505—Cold Weather Starting Aids
 - Fluid Starting Aid Solenoid,
 - Nozzle, Engine Coolant Heater
- Group 0510—Cooling Systems
 - Fan, Shroud and Guards, Fan Belt,
 - Radiator
- Group 0515—Speed Controls
 - Speed Control Assembly (Auto
 - Idle), Linkage
- Group 0520—Intake System
 - Air Cleaner, Air Intake System
 - Leakage Test
- Group 0530—External Exhaust Systems
 - Muffler and Bracket
- Group 0560—External Fuel Supply Systems
 - Fuel Tank

SECTION 07—DAMPENER DRIVE (FLEX COUPLING)

- Group 0752—Elements

SECTION 16—ELECTRICAL SYSTEMS

- Group 1671—Batteries, Support and Cables
- Group 1672—Alternator, Regulator and Charging System Wiring
- Group 1673—Lighting System
- Group 1674—Wiring Harness and Switches
- Group 1677—Motors and Actuators
 - Starting Motor

SECTION 17—FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1740—Frame Installation
 - Welding Repair
- Group 1749—Chassis Weights

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 1987
DEERE & COMPANY
Moline, Illinois
All rights reserved
A JOHN DEERE ILLUSTRATION

/1388 CC1 040987

SECTION AND GROUP CONTENTS—Continued

SECTION 18—OPERATOR'S STATION

- Group 1800—Removal and Installation
Cab or Canopy
- Group 1810—Operator Enclosure
Windowpanes, Cab Door and
Latch, Door Lock, Windshield
Wiper
- Group 1821—Seat
- Group 1830—Heating and Air Conditioning
Compressor, High Pressure
Switch, Condenser, Evaporator,
Expansion Valve, Receiver-Dryer,
Low Pressure Switch, Air
Conditioning Switches, Resistor,
Blower Motor, Heater, Controls

SECTION 99—DEALER FABRICATED TOOLS

SECTION 19—SHEET METAL AND STYLING

- Group 1910—Hood or Engine Enclosure

SECTION 33—EXCAVATOR

- Group 3302—Buckets
Bucket, Linkage, Bushings, Tooth
Tip, Tooth Shank
- Group 3340—Frames
Arm, Boom, Bushings
- Group 3360—Hydraulic System
Hydraulic Pump, Pilot System
Pump, Pilot System Pressure
Regulating Valve, Hydraulic
Control Valve, Relief Valve Block,
Hydraulic Control Valve Return
Restrictors, Reservoir, Return
Filter, Reservoir Relief Valve, Oil
Cooler Bypass Valve, Oil Cooler,
Cylinders, Propel Function Pilot
Controller Valve, Propel Pilot
System Check Valve Block, Dig
Function Pilot Controller Valve,
Pilot System Shut-off Valve, Pilot
System Filter, Flow Control Valve

SECTION 43—SWING, ROTATION OR PIVOTING SYSTEM

- Group 4311—Brakes (Swing Lock)
- Group 4350—Mechanical Drive Elements
Swing Gearbox, Swing Bearing,
Seals
- Group 4360—Hydraulic System
Swing Motor, Crossover Relief
Valves, Swing Lock Release Valves

/1388 CC2 040987

INTRODUCTION

This manual is part of a total service support program.

FOS Manuals—reference


Technical Manuals—machine service

Component Manuals—component service

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise service guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand alone manuals covering multiple machine applications.

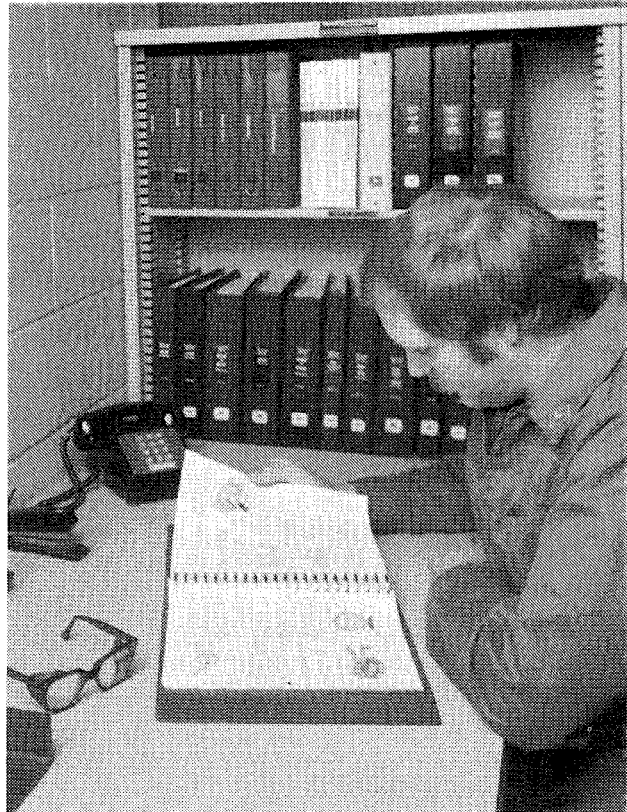

AB6;RW5559 053;INTR02 030785

FEATURES OF THIS TECHNICAL MANUAL

John Deere ILLUSTRATION format emphasizing illustrations and concise instructions in easy-to-use modules.

Emphasis on diagnosis, analysis, and testing so you can understand the problem and correct it.

Diagnostic information presented with the most logical and easiest to isolate problems first to help you identify the majority of routine failures quickly.

Step-by-step instructions for teardown and assembly.

Summary listing at the beginning of each group of all applicable specifications, wear tolerances, torque values, essential tools, and materials needed to do the job.

An emphasis throughout on safety—so you do the job right without getting hurt.

This technical manual was planned and written for you—an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it when you need to know correct service procedures or specifications.



AB6;RW5560 053;INTR03 071085



Thank you very much
for your reading.
Please click here
to get more information.