


70D Excavator Repair

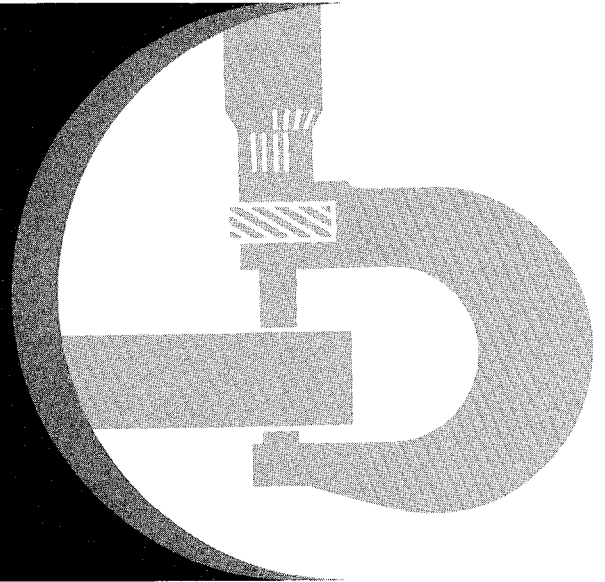

TECHNICAL MA  **PDF** DOWNLOAD 

TM1408 (14NOV89)



LITHO IN U.S.A.

Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and diagnostics. Repair sections tell how to repair the components. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

FOS MANUALS—REFERENCE

TECHNICAL MANUALS—MACHINE SERVICE

COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

Dealer Presentation Sheet

JOHN DEERE DEALERS

IMPORTANT: Please remove this page and route through your service department.

This is a complete revision for TM1408, 70D Excavator.

Listed below is a brief explanation of "WHAT" was changed and "WHY" it was changed.

This manual was revised:

1. To include additional information on disassembly and assembly of track recoil spring using ST4920 Track Recoil Spring Disassembly and Assembly Tool, and DFT1087 Track Recoil Spring Disassembly and Assembly Guard Tool.
2. To include miscellaneous changes and updates.

Dealer Presentation Sheet

Contents

SECTION I—GENERAL INFORMATION

- Group I—Safety
- Group II—General Specifications
- Group III—Torque Values
- Group IV—Fuels and Lubricants
- Group V—Inspection Procedures

SECTION 01—TRACKS

- Group 0130—Track System

SECTION 02—AXLES AND SUSPENSION SYSTEM

- Group 0250—Axle Shaft, Bearings, and Reduction Gears
- Group 0260—Hydraulic System

SECTION 04—ENGINE

- Group 0400—Removal and Installation

SECTION 05—ENGINE AUXILIARY SYSTEMS

- Group 0505—Cold Weather Starting Aids
- Group 0510—Cooling System
- Group 0515—Speed Controls
- Group 0520—Intake System
- Group 0530—External Exhaust Systems
- Group 0560—External Fuel Supply Systems

SECTION 07—DAMPENER DRIVE (FLEX COUPLING)

- Group 0752—Elements

SECTION 16—ELECTRICAL SYSTEM

- Group 1671—Batteries, Support, and Cables
- Group 1672—Alternator, Regulator, and Charging System Wiring
- Group 1674—Wiring Harness and Switches
- Group 1677—Motors and Actuators

SECTION 17—FRAME or SUPPORTING STRUCTURE

- Group 1740—Frame Installation
- Group 1749—Chassis Weights

SECTION 18—OPERATOR'S STATION

- Group 1800—Removal and Installation
- Group 1810—Operator Enclosure
- Group 1821—Seat
- Group 1830—Heating and Air Conditioning

SECTION 32—BULLDOZERS

- Group 3200—Removal and Installation
- Group 3215—Controls Linkage
- Group 3260—Hydraulic System

SECTION 33—EXCAVATOR

- Group 3302—Buckets, Teeth, Shanks, and Sidecutters
- Group 3340—Frames
- Group 3360—Hydraulic System

SECTION 43—SWING OR PIVOTING SYSTEM

- Group 4311—Brakes
- Group 4350—Mechanical Drive Elements
- Group 4360—Hydraulic System

SECTION 99—DEALER FABRICATED TOOLS

- Group 9900—Dealer Fabricated Tools

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1408-19-14NOV89

COPYRIGHT® 1989
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright® 1987 Deere & Company



Thank you very much
for your reading.
Please click here
to get more information.