


John Deere JD540-B Skidder and Grapple Skidder Repair

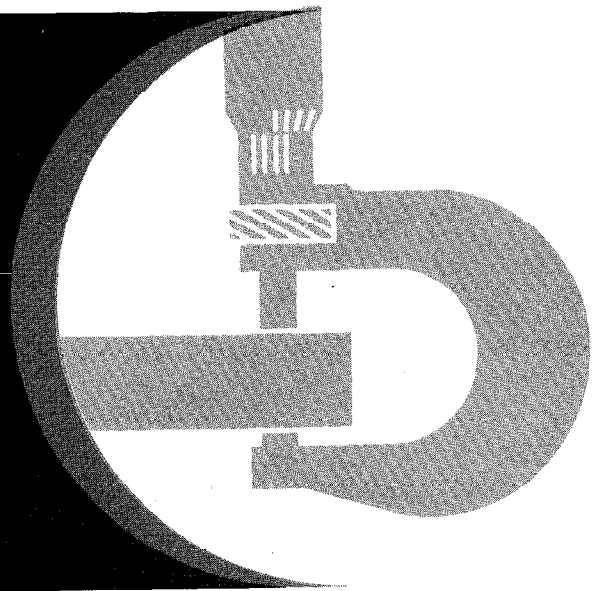

TECHNICAL MANUAL

PDF



DOWNLOAD



TM-1139 (Oct-87)

TO JOHN DEERE DEALERS

IMPORTANT: PLEASE REMOVE THIS PAGE AND ROUTE THROUGH YOUR SERVICE DEPARTMENT.

This is a complete revision for TM-1139, 540B Skidder--Grapple Skidder.

Binder and tabs from old manual may be saved and used with this bound manual.

The new pages are dated (Oct-87). Listed below is a brief explanation of "WHAT" was changed and "WHY" it was changed.

This manual was revised to clarify installation of plates in C1 and C2 clutches. The flat plate must be installed against the piston. The wavy plates must be installed in pack so the punch marked side is installed alternately.

JD540-B SKIDDER - GRAPPLE SKIDDER

Technical Manual
TM-1139 (Oct-87)

SECTION AND GROUP CONTENTS

SECTION I - GENERAL INFORMATION

- Group I - Contents
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sale Services
- Group V - Lubrication

SECTION 1 - WHEELS

- Group 0110 - Powered Wheels and Fastenings
- Group 0149 - Weights
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential or Bevel Drive
- Group 0225 - Input Drive Shafts and U-Joints
- Group 0250 - Axle Shaft, Bearings, Reduction Gears
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0341 - Housing and Covers
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Hydraulic System
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0415 - Engine Balancer
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Hsgs. and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust Systems
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

Continued on next page

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice.

Copyright© 1987
DEERE & COMPANY
Moline, Illinois
All Rights Reserved

Previous Editions
Copyright© 1983 Deere & Company
Copyright© 1980 Deere & Company
Copyright© 1979 Deere & Company
Copyright© 1977 Deere & Company
Copyright© 1976 Deere & Company



Thank you very much
for your reading.
Please click here
to get more information.