

9935 Cotton Picker

For complete service information, also see:

6068 Engine
Engine Fuel Injection
Starting Motors and Alternators

PDF  **DOWNLOAD** 

John Deere Des Moines Works
TM1613 (18SEP01)

LITHO IN U.S.A.
ENGLISH

Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Contents

SECTION 10—GENERAL

- Group 05 —Safety
- Group 09 —General Specifications
- Group 15 —Fuels and Lubricants
- Group 20 —Welding Repair

SECTION 20—ENGINE REPAIR

- Group 05 —Remove and Install Engine
- Group 10 —Cooling System Repair

SECTION 30—FUEL AND AIR REPAIR

- Group 05 —Diesel Fuel System
- Group 10 —Control Linkage

SECTION 40—ELECTRICAL REPAIR

- Group 05 —Charging Circuit
- Group 10 —Starting Circuit
- Group 15 —Monitor and Gauges
- Group 20 —Accessory Circuit
- Group 25 —Connector Repair

SECTION 50—POWER TRAIN REPAIR

- Group 05 —Hydrostatic Drive
 - Components—Remove and Install
- Group 06 —Hydrostatic Drive
 - Components—Repair
- Group 10 —Transmission
- Group 15 —Final Drive
- Group 20 —Control Linkage

SECTION 60—STEERING AND BRAKES REPAIR

- Group 05 —Remove and Install Steering
 - Components
- Group 06 —Steering Column Repair
- Group 07 —Steering Metering Pump Repair
- Group 08 —Steering Cylinder Repair
- Group 10 —Brake Repair

SECTION 70—HYDRAULIC SYSTEM REPAIR

- Group 05 —Hydraulic Pump
- Group 10 —Solenoid Control Valve Repair
- Group 15A —Basket Lift Cylinder Repair
- Group 15B —Picking Unit Lift Cylinder Repair

- Group 15C —Vane Dump Control Cylinder Repair
- Group 15D —Steering Cylinder
- Group 20 —Compactor Hydraulic Motor Repair
- Group 25 —Height Control Valve Repair

SECTION 80—GUIDE AXLE AND WHEEL HUB REPAIR

- Group 05 —Axle and Wheel Hub Repair

SECTION 90—OPERATOR'S STATION REPAIR

- Group 05 —Air Conditioning System Repair
- Group 10 —Heating System
- Group 15 —Seat Repair
- Group 20 —Cab Repair

SECTION 100—PICKING UNIT REPAIR—IN-LINE UNITS

- Group 05 —Remove and Install
- Group 10 —Grid Bar and Pressure Plate
- Group 15 —Spindle and Picker Bar
- Group 20 —Drums, Drive Shafts, and Gear
- Group 25 —Idler Gear
- Group 30 —Doffer Columns
- Group 35 —Moistener Column
- Group 40 —Gear Cases and Countershafts
- Group 45 —Cabinet and Cam Track Alignment

SECTION 105—Picking Unit Repair—PRO 12 Units

- Group 04 —Picking Unit—Remove and Install
- Group 10 —Grid Bar and Pressure Plate
- Group 15 —Spindle and Picker Bar
- Group 20 —Drums, Drive Shafts, and Gear
- Group 25 —Idler Gear
- Group 30 —Doffer Columns
- Group 35 —Moistener Column
- Group 40 —Gear Cases and Countershaft
- Group 45 —Cabinet and Cam Track Alignment

SECTION 110—LUBRICATION SYSTEM REPAIR

- Group 05 —Lubrication System Pump Repair
- Group 09 —Solenoid Control Valve Repair
- Group 15 —Transfer Pump Repair

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1613-19-18SEP01

COPYRIGHT© 1996
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright 1997 Deere & Company

SECTION 120—SOLUTION SYSTEM REPAIR

Group 05 —Water System Components

SECTION 130—AIR SYSTEM REPAIR

Group 05 —Cotton Fan Repair

SECTION 210—OPERATIONAL CHECKOUT PROCEDURE

Group 05 —Machine Operational Checkout
 Group 09 —Diagnostic/Testing Procedures
 Group 15 —Tune-Up and Adjustments

SECTION 220—ENGINE OPERATION AND TESTS

Group 05 —System Operational Checks
 Group 10 —Diagnostic Information
 Group 15 —Engine System Operation and Tests
 Group 19 —Theory of Operation

SECTION 230—FUEL/AIR OPERATION AND TESTS

Group 05 —System Operational Checks
 Group 10 —Diagnostic Information
 Group 15 —System Tests
 Group 20 —System Adjustments
 Group 25 —Theory of Operation

SECTION 240—ELECTRICAL OPERATION AND TESTS

Group 05 —System Information
 Group 10 —System Diagnosis
 Group 15 —Sub-System Diagnostics
 Group 15A —Power Circuit
 Group 15B —Start Circuit
 Group 15C —Charging Circuit
 Group 15D —Lighting System Circuit
 Group 15E —Horn Circuit
 Group 15F —Monitor System Circuit
 Group 15G —Gauges Circuit
 Group 15H —Tachometer Circuit (P.I.N. —2000)
 Group 15I —Tachometer Circuit (P.I.N. 2001—)
 Group 15J —Windshield Wiper Circuit
 Group 15K —Dome and Console Light Circuit
 Group 15L —Lighter Circuit
 Group 15M —Radio Circuit (P.I.N. 2001—)
 Group 15N —Cab Blower and Air Conditioning Circuit
 Group 15O —Auxiliary Plug Circuit
 Group 15P —Basket Electro-Hydraulic Controls Circuit

Group 15Q —Units Electro-Hydraulic Controls Circuit
 Group 15R —Fan Actuator Circuit
 Group 15S —Destroke, Tether and Lube Circuit

SECTION 250—POWER TRAIN OPERATION AND TESTS

Group 05 —System Operational Checks
 Group 10 —System Diagnostic Checks
 Group 15 —System Tests
 Group 20 —System Adjustments
 Group 25 —Theory of Operation

SECTION 260—STEERING AND BRAKES OPERATIONS AND TESTS

Group 05 —System Operational Checks
 Group 10 —System Diagnostics
 Group 15 —System Tests
 Group 20 —System Adjustments
 Group 25 —Theory of Operation

SECTION 270—HYDRAULIC SYSTEM OPERATION AND TESTS

Group 05 —Operational Checks
 Group 10 —Hydraulic System Diagnosis
 Group 10A —Hydraulic Pump Diagnostics
 Group 10B —Solenoid Control Valve Diagnostics
 Group 10C —Hydraulic Cylinder Diagnostics
 Group 10D —Height Sensing System Diagnostics
 Group 15 —Hydraulic System Tests
 Group 20 —Hydraulic System Adjustments
 Group 25A —Theory of Operation
 Group 25B —Hydraulic Pump Operation
 Group 25C —Solenoid Control Valve Operation
 Group 25D —Hydraulic Cylinder Operation
 Group 25E —Hydraulic Motor Operation
 Group 25F —Height Control Operation

SECTION 290—OPERATOR'S STATION OPERATION AND TESTS

Group 05 —Operator's Station Operational Checks
 Group 10 —Operator's Station Diagnostics
 Group 15A —Air Conditioning System Tests
 Group 20 —Operator's Station Tests
 Group 25 —Operator's Station Theory of Operation

SECTION 300—IN-LINE PICKING UNIT OPERATION AND TESTS

Group 05 —Picking Unit Diagnostics
 Group 10 —Picking Unit Adjustments
 Group 15 —Picking Unit Theory of Operation

Continued on next page

**SECTION 305—PRO-12 PICKING UNITS
OPERATION AND TESTS**

- Group 04 —Diagnostics
- Group 10 —PRO-12 Picking Units Adjustments
- Group 15 —Picking Unit Theory of Operation

105

**SECTION 310—PICKING UNIT LUBRICATION
SYSTEM OPERATION AND
TESTS**

- Group 05 —Lubrication System Operational Checks
- Group 09 —Lubrication System Diagnostics
- Group 15 —Lubrication System Tests
- Group 25 —Lubrication System Theory of Operation

110

**SECTION 320—SOLUTION SYSTEM OPERATION
AND TEST**

- Group 05 —Solution System Operational Checks
- Group 10 —Solution System Diagnostics
- Group 15 —Solution System Adjustments
- Group 25 —Solution System Theory of Operation

120

**SECTION 330—AIR SYSTEM OPERATION AND
TEST**

- Group 05 —Air System Operational Checks
- Group 10 —Air System Diagnostics
- Group 15 —Air System Adjustments
- Group 20 —Air System Theory of Operation

130

**SECTION 399—DEALER FABRICATED SPECIAL
TOOLS**

- Group 05 —Fabricated Tools

210

Index

220

230

240

250

260



Thank you very much
for your reading.
Please click here
to get more information.