

 **Dealer Nation**

DealerNation@aol.com

DDE

INDEX

SECTION 1 - ENGINE SYSTEMS

Air inlet manifold removal	1-9	Fuel injector assembly	1-43
Air intake manifold assembly	1-42	Fuel injector removal	1-6
Alternator assembly	1-44	Fuel piping	1-44
Alternator removal	1-7	Fuel shutoff solenoid removal	1-10
Backplate and oil seal	1-15	General information	1-2
Backplate assembly	1-35	Glow plug assembly	1-43
Bolt torque values	1-82	Glow plug removal	1-6
Camshaft	1-11	Head gasket selection	1-40
Camshaft assembly	1-33, 1-38	Idler gear assembly	1-38
Camshaft disassembly	1-33	Injection timing	1-38
Camshaft inspection	1-33	Main bearing and thrust washer removal and inspection	1-29
Camshaft removal	1-13	Main bearings removal	1-15
Compression test and tools	1-84	Metric bolt torque specifications	1-83
Connecting rod assembly	1-28	Oil consumption	1-51
Connecting rod bearing oil clearance check	1-27	Oil filter construction and function	1-48
Connecting rod bearings removal	1-14	Oil filter maintenance	1-48
Connecting rods disassembly and inspection	1-25	Oil pressure relief valve inspection	1-51
Connecting rods removal	1-14	Oil pressure relief valve removal	1-51
Coolant	1-54	Oil pressure switch	1-7
Cooling fan	1-55	Oil pump adjustment	1-49
Cooling fan assembly	1-42	Oil pump assembly	1-38
Cooling system	1-52	Oil pump inspection	1-48
Cooling system description and operation	1-52	Oil pump installation	1-49
Cooling system maintenance	1-54	Oil pump removal	1-48
Cooling system overhaul	1-56	Oil strainer removal	1-14
Cooling system specifications	1-82	Oil suction pipe and oil strainer	1-37
Crankshaft	1-29	Oil suction pipe removal	1-14
Crankshaft bearing (bushing) inspection	1-30	Oil sump	1-37
Crankshaft bearing (bushing) replacement	1-31	Oil sump removal	1-13
Crankshaft inspection	1-29	Piston rings assembly	1-28
Crankshaft main bearing assembly	1-31	Piston rings disassembly and inspection	1-25
Crankshaft pulley	1-39	Piston rings removal	1-14
Crankshaft removal	1-15	Pistons and connecting rods	1-36
Cylinder block	1-22	Pistons assembly	1-28
Cylinder block assembly	1-3	Pistons disassembly and inspection	1-23
Cylinder head assembly	1-22, 1-40	Pistons removal	1-14
Cylinder head components	1-3	Port block installation	1-32
Cylinder head disassembly	1-16	Port block removal	1-32
Cylinder head inspection and repair	1-16	Power steering pump	1-39
Cylinder head removal	1-10	Push rods	1-21
Description and operation	1-2	Radiator cap	1-54
Engine disassembly	1-5	Radiator inspection	1-58
Engine identification	1-2	Radiator installation	1-58
Engine lubrication system	1-45	Radiator removal	1-56
Engine lubrication system description	1-45	Radiator repair	1-58
Engine oil pressure check	1-50	Rear oil seal assembly	1-35
Engine overhaul	1-5	Rocker arms	1-20
Engine reassembly	1-35	Rocker arm shaft removal	1-9
Engine timing gear cover	1-11	Special tools	1-84
Exhaust manifold assembly	1-44	Specifications	1-68
External oil tube assembly	1-43	Steering pump seal replacement	1-34
External oil tube removal	1-8	Support bracket removal	1-9
Fan removal	1-8	Temperature sending switch	1-7
Flywheel	1-34, 1-36	Temperature sending switch assembly	1-44
Flywheel removal	1-15	Thermostat	1-55
Front oil seal replacement	1-34	Thermostat inspection	1-63
Fuel injection pump assembly	1-39	Thermostat installation	1-63

Thermostat removal	1-62
Thermostat repair	1-63
Timing gear	1-32
Timing gear cover assembly	1-38
Timing gear cover removal	1-11
Timing gear housing	1-34
Timing gears	1-11
Timing gears assembly	1-38
Timing gears removal	1-13
Troubleshooting	1-64
Valve clearance adjustment	1-41
Valve cover assembly	1-42
Valve cover removal	1-9
Valve guides	1-19
Valves	1-18
Valve seats	1-17
Valve springs	1-20
Valve tappet removal	1-10
Valve train components	1-3
Water pump	1-55
Water pump assembly	1-42
Water pump inspection	1-61
Water pump installation	1-61
Water pump removal	1-8, 1-60
Water pump repair	1-61

SECTION 2 - FUEL SYSTEM

Bleeding procedure	2-22
Bleeding the fuel system	2-21
Compact timing device (CDT) mechanism	2-4
Delivery valve assembly	2-4
Delivery valves	2-10
Fuel injection pump specifications	2-39
Fuel variation mechanism	2-3
Governor	2-24
Governor assembly	2-27
Governor description and operation	2-24
Governor disassembly	2-26
Governor system troubleshooting	2-29
High idle adjustment	2-23
Injection pump	2-2
Injection pump description and operation	2-2
Injection pump installation	2-14
Injection pump removal	2-12
Injection pump repair	2-13
Injectors	2-30
Injectors assembly and adjustment	2-33
Injectors description and operation	2-30
Injectors disassembly	2-33
Injectors removal	2-32
Installation using a new pump or drive component	2-16
Installation using original pump and drive components	2-15
Pumping elements	2-7
Smoke screw adjustment	2-23
Special tools	2-40
Specifications	2-38
Specifications - fuel injection pump	2-39
Spill timing procedure	2-17
Stop control knob	2-6

Timing and governor adjustment	2-15
Troubleshooting - fuel injectors	2-37
Troubleshooting - general	2-34
Troubleshooting - governor system	2-29

SECTION 3 - ELECTRICAL SYSTEM

Alternator	3-3, 3-143
Alternator assembly	3-156
Alternator bench check	3-157
Alternator disassembly	3-148
Alternator installation	3-158
Alternator removal	3-148, 3-148, 3-148
Alternator specifications	3-159
Alternator troubleshooting	3-160
Armature inspection	3-166
Battery	3-2
Battery and fuses	3-4
Battery description	3-4
Battery installation	3-5
Battery removal	3-5
Bearing inspection	3-154
Brake release switch	3-3
Brush inspection	3-168
Brush, springs, and holder inspection	3-154
Charging circuit	3-144
Charging system	3-143
Charging system description and operation	3-143
Charging system preliminary checks and electrical tests	3-146
Component location and function	3-2
Cruise control brake release switch description	3-22
Cruise control brake release switch testing	3-22
Cruise control magnet description	3-32
Cruise control magnet testing	3-33
Cruise control relay	3-2
Description	3-2
Diodes description	3-23
Diodes testing	3-24
Electrical schematic	3-46, 3-92
Electrical system components-description and testing	3-8
Electrolyte checking	3-4
Engine coolant temperature circuit	3-80, 3-114, 3-116
Engine coolant temperature circuit troubleshooting	3-80
Engine coolant temperature sender	3-37
Engine coolant temperature sender testing	3-37
Engine coolant temperature sending unit	3-2
Engine coolant temperature switch	3-36
Engine oil pressure circuit	3-76, 3-110
Engine oil pressure circuit troubleshooting	3-76
Engine oil pressure sender	3-36
Engine oil pressure sensor unit	3-2
Engine sensors	3-36
Flasher relay	3-2
Flasher warning light	3-41, 3-42
Flasher warning/taillight rear lights	3-43, 3-44
Front bracket inspection	3-170
Fuel gauge removal	3-136

Fuel gauge testing	3-136	Light switch removal	3-12
Fuel level circuit	3-72, 3-106	Light switch testing	3-13
Fuel level circuit troubleshooting	3-72	Main fuse	3-2
Fuel level sender description	3-37	Main fuse description	3-7
Fuel level sender testing	3-38	Main fuse replacing	3-7
Fuel level sending unit	3-3	Mid PTO safety switch description	3-19
Fuel shutoff solenoid	3-3	Mid PTO safety switch testing	3-20
Fuel shutoff solenoid circuit	3-118	Monitoring circuits	3-72
Fuel shutoff solenoid description	3-39	No-load test	3-174
Fuel shutoff solenoid removal	3-39	Orbital gear and planetary gear inspection ..	3-170
Fuel shutoff solenoid testing	3-39	Overrunning clutch and pinion inspection ..	3-170
Fuse block	3-2	Parking brake circuit	3-130
Fuse block description	3-6	Parking brake switch	3-3
Glow plug circuit	3-56, 3-58, 3-98, 3-100	Parking brake switch description	3-21
Glow plug circuit troubleshooting	3-56, 3-58	Parking brake switch testing	3-21
Glow plug indicator light controller description	3-31	Permanent magnet inspection	3-167
Glow plug indicator light controller testing ...	3-31	Pinion position adjustment	3-174
Glow plugs	3-3	PTO indicator light circuit	3-88, 3-128
Glow plugs description	3-35	PTO indicator light circuit troubleshooting ...	3-90
Glow plugs testing	3-35	PTO speed indicator adjustment	3-140
Hazard flasher light relay description ..	3-28, 3-30	Rear bracket inspection	3-170
Hazard flasher light relay terminal identification	3-29	Rear PTO safety switch description	3-18
Hazard flasher light relay testing	3-29, 3-30	Rear PTO safety switch testing	3-19
Hazard flashing lights	3-2	Rear work light	3-3, 3-45
Hazard light switch description	3-13, 3-15	Rectifier assembly inspection	3-153
Hazard light switch removal	3-14, 3-16	Relay/diode panel	3-2
Hazard light switch testing	3-15, 3-16	Relays description and location	3-25
Hazard switch	3-2	Relay testing	3-27
Head lamp	3-40	Rotor inspection	3-150
Headlights	3-2	Safety start switch	3-2
Housing inspection	3-154	Solenoid inspection	3-171
HST control magnet	3-3	Starter	3-2
HST speed control	3-33	Starter motor assembly	3-162
HST speed control switch	3-3	Starter motor specifications	3-175
HST speed control switch testing	3-34	Starter motor troubleshooting	3-176
HST cruise control circuit	3-68, 3-126	Starter solenoid	3-162
HST cruise control circuit troubleshooting ...	3-70	Starting circuit	3-48, 3-52, 3-94, 3-96
IC regulator	3-144	Starting circuit troubleshooting	3-50, 3-54
Individual circuit schematics	3-46	Starting motor disassembly	3-164
Individual electrical circuits	3-48	Starting motor reassembly and adjustment ..	3-172
Instrument lights	3-141	Starting motor removal	3-164
Instrument panel	3-2	Starting system	3-162
Instrument panel-component operation and servicing	3-133	Starting system description and operation ..	3-162
Instrument panel disassembly	3-136	Starting system overhaul	3-164
Instrument panel removal	3-136	Stator inspection	3-152
Introduction	3-2	Tachometer circuit	3-84, 3-122
Key switch	3-2	Tachometer circuit troubleshooting	3-84
Key switch description	3-8	Tachometer removal	3-139
Key switch terminal and connector wiring identification	3-9	Tachometer testing	3-140
Key switch testing	3-10	Taillight	3-41
Lighting	3-40	Taillights	3-2
Lighting circuit	3-60, 3-64 3-102, 3-104	Temperature gauge removal	3-138
Lighting circuit troubleshooting	3-62, 3-66	Temperature gauge testing	3-138
Light switch	3-2	Transmission range safety switch adjustment	3-17
Light switch description	3-11	Transmission range safety switch description	3-16
		Transmission range safety switch testing ...	3-18
		Wiring harnesses	3-3

SECTION 4 - CLUTCHES

Clutch cross shaft bushings assembly	4-17
Clutch cross shaft bushings removal	4-17
Clutch linkage components	4-17
Clutch pedal bushings assembly	4-18
Clutch pedal bushings removal	4-18
Clutch pilot bearing description	4-15
Clutch pilot bearing installation	4-15
Clutch pilot bearing removal	4-15
Clutch release bearing assembly	4-17
Clutch release bearing description	4-16
Clutch release bearing inspection	4-16
Clutch release bearing removal	4-16
Double clutch adjustment	4-11, 4-14
Double clutch assembly	4-13
Double clutch description	4-10
Double clutch disassembly	4-12
Double clutch inspection	4-13
Double clutch overhaul	4-12
Free-play adjustment	4-5, 4-11
Release lever height adjustment	4-8
Servicing clutch-related components	4-15
Single clutch adjustment	4-5
Single clutch description	4-2
Single clutch inspection	4-6
Single clutch installation	4-7
Single clutch removal	4-6
Single clutch operation	4-4
Single clutch overhaul	4-6
Special tools	4-21
Specifications	4-20
Troubleshooting	4-19

SECTION 5 - TRANSMISSION SYSTEMS

Adjustment of shift arms	5-19
Bolt torque specifications	5-70
Charge pump relief valve	5-43
Charge pump relief valve assembly	5-43
Charge pump relief valve disassembly	5-43
Charge pump relief valve inspection	5-43
Charge pump relief valve test	5-49
Charge pump removal	5-35
Check valve	5-47
Check valve assembly	5-47
Check valve disassembly	5-47
Check valve inspection	5-47
Countershaft assembly	5-18
Countershaft removal	5-12
Cruise control adjustment	5-67
Drive pinion assembly	5-16, 5-62
Drive pinion removal	5-14, 5-60
Fixed displacement motor operation	5-25
Fluid flow forward position	5-27
Fluid flow neutral position	5-26
Fluid flow reverse position	5-28
FWD drive shaft assembly	5-17
FWD drive shaft removal	5-13, 5-59
FWD main shaft	5-63
FWD shift rod assembly	5-17, 5-63
FWD shift rod removal	5-13, 5-58
9 x 3 Gear transmission	5-2
9 x 3 Gear transmission assembly	5-15

9 x 3 Gear transmission description and operation	5-2
9 x 3 Gear transmission disassembly	5-10
9 x 3 Gear transmission inspection	5-15
9 x 3 Gear transmission power flow	5-5
9 x 3 Gear transmission removal	5-10
High pressure relief valve	5-44
High pressure relief valve installation	5-44
High pressure relief valve removal	5-44
High pressure relief valve test	5-48
Hydrostatic motor disassembly	5-33
Hydrostatic motor shaft removal	5-35
Hydrostatic pump and port block assembly	5-44
Hydrostatic pump assembly	5-38
Hydrostatic pump disassembly	5-32
Hydrostatic transmission assembly	5-37
Hydrostatic transmission description and operation	5-22
Hydrostatic transmission disassembly	5-31
Hydrostatic transmission gearbox adjustments	5-65
Hydrostatic transmission gearbox assembly	5-62
Hydrostatic transmission gearbox description and operation	5-51
Hydrostatic transmission gearbox inspection	5-61
Hydrostatic transmission gearbox overhaul	5-56
Hydrostatic transmission gearbox power flow	5-52
Hydrostatic transmission gearbox disassembly	5-56
Hydrostatic transmission gearbox removal	5-56
Hydrostatic transmission inspection	5-36
Hydrostatic transmission overhaul	5-29
Hydrostatic transmission removal	5-29
Hydrostatic unit removal	5-29
HST	5-52
HST motor cylinder block assembly	5-41
HST neutral adjustment	5-66
HST neutralizer adjustment	5-67
HST neutralizer (spring holder)	5-67
HST piston pump cylinder block assembly	5-40
Input shaft assembly (double clutch)	5-21
Input shaft assembly (single clutch)	5-21
Input shaft removal (single clutch)	5-10
Input shaft removal (double clutch)	5-10
Main gear shifter rod assembly	5-19
Main gear shifter rod removal	5-11
Main shaft assembly	5-18
Main shaft removal	5-12
Main transmission shift lever	5-20
Mid-PTO link adjustment	5-65
Motor and port block assembly	5-46
Port block	5-42
Port block assembly	5-43
Port block disassembly	5-42
Port block inspection	5-42
Port block neutral and feed valves	5-42
Pressure tests	5-48
PTO countershaft assembly	5-17, 5-62
PTO countershaft removal	5-13, 5-60
PTO input shaft assembly	5-64
PTO input shaft removal	5-57

You've

our rea

click

ore info