



Bobcat®

Service Manual

**S/N 519611001 & Above
S/N 519711001 & Above**

 
PDF



DOWNLOAD



Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or its service marks, logos, or other proprietary identifying marks to Ingersoll-Rand Company in this manual is historical in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

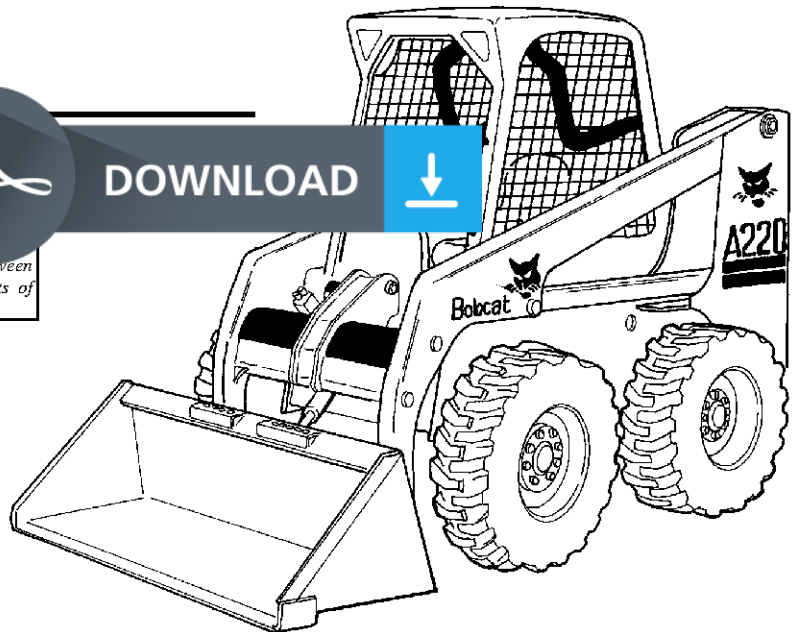

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

6901245 (6-12)

Printed in U.S.A.

© Bobcat Company 2010

MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

 
CORRECT



P-90216

- Never service the Bobcat Skid-Steer Loader without instructions.


CORRECT

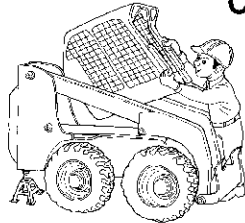

B-15590

- Use the correct procedure to lift or lower operator cab.

 
CORRECT

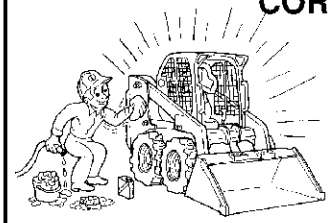

B-15591

- Cleaning and maintenance are required daily.

 
WRONG

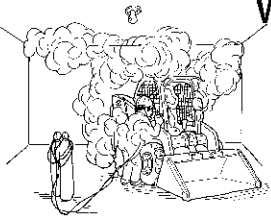

B-15592

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 
WRONG

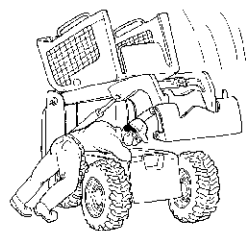

B-15593

- Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

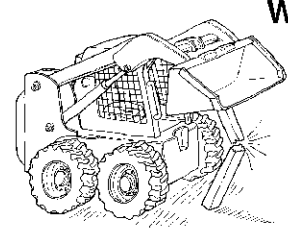

B-15599

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

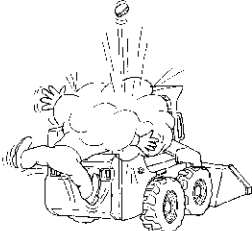

B-15600

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

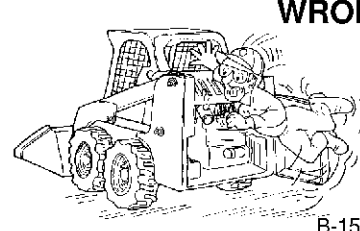

B-15601

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW08-0409



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	70-01	FRONT AUXILIARY HYDRAULIC COUPLER	
AIR CLEANER SERVICE	10-01	BLOCK (S/N 519611124 & Above)	10-01
AIR CONDITIONING SERVICE	80-01	FUEL SYSTEM	10-01
AIR CONDITIONING SYSTEM FLOW	80-01	FUEL TANK	50-01
ALTERNATOR	60-01		
AUXILIARY PRESSURE RELEASE		GENERAL AIR CONDITIONING	
(ACCUMULATOR) (EARLY MODELS)	20-01	SERVICE GUIDELINES	80-01
AWS CONTROLLER	60-01		
		HEATER COIL	80-01
BASIC TROUBLESHOOTING	80-01	HEATER/AC FAN	80-01
BATTERY	60-01	HEATER VALVE	80-01
BICS™ SYSTEM	60-01	HUB	40-01
BOBCAT CONTROLLER	60-01	HYDRAULIC CONNECTION SPECS	SPEC-01
BOBCAT 2001 CONTROLLER (EARLY MODELS)	60-01	HYDRAULIC CONTROL VALVE	20-01
BOB-TACH	10-01, 50-01	HYDRAULIC FLUID RESERVOIR	20-01
BRAKE	40-01	HYDRAULIC/HYDROSTATIC FILTER	20-01
BRAKE (TWO-SPEED) (EARLY MODLES)	40-01	HYDRAULIC/HYDROSTATIC FLUID	
BRAKE (TWO-SPEED) (LATER MODLES)	40-01	SPECIFICATIONS	SPEC-01
BUCKET POSITION VALVE	20-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
		HYDRAULIC PUMP	20-01
CHAINCASE	40-01	HYDRAULIC PUMP (HI FLOW)	20-01
CHARGE PRESSURE	30-01	HYDRAULIC SYSTEM INFORMATION	20-01
COOLING FAN	70-01	HYDROSTATIC MOTOR	30-01
COMPONENTS	80-01	HYDROSTATIC MOTOR (CARRIER)	30-01
COMPRESSOR	80-01	HYDROSTATIC MOTOR (TWO-SPEED)	30-01
CONDENSER	80-01	HYDROSTATIC PUMP	30-01
CONTROL PANEL	50-01	HYDROSTATIC SYSTEM INFORMATION	30-01
CONTROL	50-01		
CONVERSIONS	SPEC-01	INSIDE ACCESS PANEL (EARLY MODLES)	50-01
CYLINDER (LIFT)	20-01	INSIDE ACCESS PANEL (LATER MODLES)	50-01
CYLINDER (POWER BOB-TACH)	20-01	INSTRUMENT PANEL	60-01
CYLINDER (STEERING)	20-01		
CYLINDER (TILT)	20-01	LIFT ARMS	50-01
		LIFT ARM BYPASS CONTROL VALVE	20-01
DIAGNOSTICS SERVICE CODES	60-01	LIFT ARM SUPPORT DEVICE	10-01
DRIVE BELT	30-01	LIFT AND TILT ACTUATOR CALIBRATION	60-01
DRIVE COMPONENTS	40-01	LIFTING AND BLOCKING THE LOADER	10-01
		LIGHTS	60-01
ELECTRICAL/HYDRAULIC CONTROLS		LOADER SPECIFICATIONS	SPEC-01
REFERENCE	60-01	LOADER TORQUE	SPEC-01
ELECTRICAL SYSTEM INFORMATION	60-01	LUBRICATING THE LOADER	10-01
ENGINE	70-01		
ENGINE COMPONENTS AND TESTS	70-01	MAIN RELIEF VALVE	20-01
ENGINE COOLING SYSTEM	10-01	MUFFLER	70-01
ENGINE LUBRICATION SYSTEM	10-01		
ENGINE SPECIFICATIONS	SPEC-01	OIL COOLER (SEAL TO CONNECT) (STC)	30-01
ENGINE SPEED CONTROL (EARLY MODELS) ...	70-01	OPERATOR CAB	10-01, 50-01
ENGINE SPEED CONTROL (LATER MODELS)....	70-01	OPERATOR SEAT (STANDARD)	50-01
EVAPORATOR	80-01	OPERATOR SEAT (SUSPENSION)	50-01
EVAPORATOR/HEATER UNIT	80-01		
EXPANSION VALVE	80-01	POWER BOB-TACH (OPTION)	10-01, 50-01
		POWER BOB-TACH BLOCK (EARLY MODLES) ...	20-01
FAN GEARBOX	10-01	POWER BOB-TACH BLOCK (LATER MODLES)....	20-01
FINAL DRIVE TRANSMISSION (CHAINCASE) ..	10-01	PRESSURE RELIEF VALVE	80-01
FLYWHEEL AND HOUSING	70-01	PRESSURE SWITCH	80-01



Thank you very much
for your reading.
Please click here
to get more information.