



# Service Manual

## 500 Series

From m/c No. 561001

This Service Manual covers the following Machines:-

505-19 - Serial Number 561001 - 579365

505-22 - Serial Number 561001 - 579365

508-40 - Serial Number 562601 - 579365

506-36 - Serial Number 563359 - 579999

510-40 - Serial Number 564542 - 579365

508-40, 508-40 Ace

505-19,

506-36, 508-

506B - Serial Number 570000 - 579766



Information covers two stage and three stage boom machines.

JCB INC. 10939 Philadelphia Road, White Marsh, MD 21162-0209, USA (410) 335-2800

JCB EXCAVATORS Ltd. 3375, North Service Road, Unit 6, Burlington, Ontario L7N, CANADA (905) 335-3441

**Publication No. 9803/3600U Issue 16**

Published by the Technical Publications Dept. of JCB Service, Rocester, Staffordshire, England.

# Contents

---

---

General	1
Hydraulics	2
Body and Framework	3
PlaceAce Control System	4
Servo Control System	4A
Engine	5
Transmission	6
Axles	7
Brakes	8
Hydraulic Steering	9
Electrics	10
Service Tools	11
<u>Boom Float, Return to Dig Option</u>	<u>12</u>



Thank you very much  
for your reading.  
Please click here  
to get more information.