

# **3025D, 3035D and 3043D Tractors, Technical Manual (North American Edition)**

## **TECHNICAL MANUAL 3025D, 3035D and 3043D Tractors (North American Edition)**

**TM902719 15MAY19 (ENGLISH)**




# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-15APR14-1/1

# Contents

## Section 10—Safety

Group 05—Safety

## Section 20—Specifications and Information

Group 05—General Specifications  
Group 10—Fuel and Lubricants  
Group 15—Serial Number Locations

## Section 30—Engine

Group 05—Specifications  
Group 10—Component Location  
Group 15—Tests and Adjustments  
Group 20—Repair

## Section 40—Electrical System

Group 05—General Information and Specification  
Group 10—Electrical System Component  
Group 15—Theory Of Operation  
Group 25—Electrical Repair  
Group 30—Electrical Schematics  
Group 35—Electrical Wiring Harnesses  
Group 40—Electrical Components and Connectors

## Section 40A—Diagnostic Trouble Codes

Group 05—General References  
Group ICC—Instrument Cluster Control (ICC)  
Diagnostic Trouble Codes  
Group ECU—Engine Control Unit (ECU) Diagnostic  
Trouble Codes

## Section 40B—Observable Symptoms and System Diagnostics

Group 05—General References  
Group 20—Engine System Diagnostics  
Group 30—Fuel, Air Intake, Exhaust, and Cooling  
System Diagnostics  
Group 40—Electrical System Diagnostics  
Group 45—Electronic Control Unit System Diagnostics

## Section 40C—Electrical Tests and Adjustments

Group 05—General References  
Group 50—Tests and Adjustments

## Section 40D—Electronic Control Units

Group 05—General References

Group 10—Calibrations, Preliminary Checks and  
Operational Checks  
Group 20—Theory of Operation  
Group 50—Test and Adjustments  
Group ICC—Instrument Cluster Control (ICC)  
Group ECU—Engine Control Unit (ECU)

## Section 50—Power Train—SyncReverser™

Group 05A—General References  
Group 05—Specifications  
Group 10—Component Location  
Group 15—Theory of Operation  
Group 20—Diagnosis, Tests and Adjustments  
Group 25—Repair

## Section 60—Power Train—Final Drives

Group 05—Specifications  
Group 10—Component Location  
Group 15—Theory of Operation  
Group 20—Diagnosis, Tests and Adjustments  
Group 25—Repair

## Section 70—Hydraulic System

Group 05—Specification  
Group 10—Hydraulic System Components  
Group 15—Theory of Operation  
Group 20—Diagnosis, Tests and Adjustments  
Group 25—Hydraulic Schematics  
Group 30—Hydraulic Repair

## Section 80—Steering System

Group 05—Specifications  
Group 10—Steering System Component  
Group 15—Theory of Operation  
Group 20—Diagnosis, Tests and Adjustments  
Group 25—Repair

## Section 90—Brake System

Group 05—Specifications  
Group 10—Component Location  
Group 15—Theory of Operation  
Group 20—Diagnosis, Tests and Adjustments  
Group 25—Repair

## Section 100—Miscellaneous

Group 05—Specifications  
Group 10—Front Axle Repair  
Group 15—Wheels Repair

Continued on next page

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2019  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright © 2018

Group 20—Cowl  
Group 30—3-Point Hitch

**Section 110—Operational Checkout  
Procedures**

Group 05—Operational Checkout Procedures

**Section 120—Operator Station**

Group 05—Seat and Support  
Group 10—Operator Platform  
Group 15—Fenders  
Group 20—Hood  
Group 25—Roll-Gard™

**Section 130—Special Tools**

Group 05—Dealer Fabricated Tools

# Section 10 Safety

## Contents

	Page		Page
<b>Group 05—Safety</b>			
Recognize Safety Information .....	10-05-1	Service Cooling System Safely .....	10-05-20
Understand Signal Words.....	10-05-1	Service Accumulator Systems	
Follow Safety Instructions.....	10-05-1	Safely.....	10-05-21
Prepare for Emergencies.....	10-05-2	Service Tires Safely.....	10-05-21
Wear Protective Clothing.....	10-05-2	Service Front-Wheel Drive Tractor	
Protect Against Noise.....	10-05-2	Safely.....	10-05-21
Handle Fuel Safely—Avoid Fires.....	10-05-3	Tightening Wheel Retaining	
Handle Starting Fluid Safely.....	10-05-3	Bolts/Nuts .....	10-05-22
Fire Prevention .....	10-05-3	Avoid High-Pressure Fluids.....	10-05-22
In Case of Fire.....	10-05-4	Do Not Open High-Pressure Fuel	
Avoid Static Electricity Risk When		System.....	10-05-22
Refueling .....	10-05-4	Store Attachments Safely.....	10-05-23
Keep ROPS Installed Properly .....	10-05-5	Decommissioning — Proper	
Use Foldable ROPS and Seat Belt		Recycling and Disposal of Fluids	
Properly .....	10-05-5	and Components .....	10-05-23
Stay Clear of Rotating Drivelines.....	10-05-6		
Use Steps and Handholds			
Correctly .....	10-05-6		
Read Operator’s Manuals for			
ISOBUS Controllers.....	10-05-7		
Use Seat Belt Properly.....	10-05-7		
Operating the Tractor Safely .....	10-05-8		
Avoid Backover Accidents .....	10-05-9		
Limited Use in Forestry Operation.....	10-05-9		
Operating the Loader Tractor			
Safely.....	10-05-9		
Keep Riders Off Machine .....	10-05-10		
Instructional Seat.....	10-05-10		
Use Safety Lights and Devices.....	10-05-10		
Transport Towed Equipment at			
Safe Speeds .....	10-05-11		
Use Caution on Slopes, Uneven			
Terrain, and Rough Ground.....	10-05-12		
Freeing a Mired Machine.....	10-05-12		
Avoid Contact with Agricultural			
Chemicals.....	10-05-13		
Handle Agricultural Chemicals			
Safely.....	10-05-14		
Handling Batteries Safely .....	10-05-15		
Avoid Heating Near Pressurized			
Fluid Lines .....	10-05-15		
Remove Paint Before Welding or			
Heating .....	10-05-16		
Handle Electronic Components			
and Brackets Safely.....	10-05-16		
Practice Safe Maintenance.....	10-05-17		
Avoid Hot Exhaust.....	10-05-17		
Clean Exhaust Filter Safely .....	10-05-18		
Work In Ventilated Area.....	10-05-19		
Support Machine Properly .....	10-05-19		
Prevent Machine Runaway.....	10-05-19		
Park Machine Safely.....	10-05-20		
Transport Tractor Safely .....	10-05-20		



Thank you very much  
for your reading.  
Please click here  
to get more information.