

Backhoe Loader

[Section 1 - General Information](#)

[Section 2 - Operator Manual](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)

[Section M - Electronic Control Systems](#)



Publication No.
9813/0250-07



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rokester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support

Section 1



General Information

Service Manual - Backhoe Loader

[Section 1 - General Information](#)

[Section 2 - Operator Manual](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)

[Section M - Electronic Control Systems](#)



Publication No.
9813/0250-07



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rokester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support

Notes:

Contents	Page No.
Introduction	
Identifying Your Machine	1-1-1
Safety	
Introduction	1-2-1
Use	
Introduction	1-3-1
Scope	1-3-2
Personnel	1-3-2
Applications	1-3-2
Newest Data	1-3-2
Format	1-3-3
Left and Right Sides	1-3-4
Left Side, Right Side	1-3-4
Hydraulic Schematic Codes	1-3-5
Colour Codes	1-3-5
Routine Maintenance	
Maintenance Schedules	1-4-1
General Procedures	
Introduction	1-5-1
Parking the Machine and Making it Safe	1-5-2
Venting the Hydraulic Pressure	1-5-3
Connecting/Disconnecting Hydraulic Hoses	1-5-4
Venting the Brake System Pressure	1-5-5
Hammer Option - Advanced EasyControl	1-5-5
Battery Disconnection/Connection	1-5-6
Removing and Replacing Components	1-5-7
Preparation	1-5-7
Original Components	1-5-7
New Components	1-5-7
Torques and Fixings	1-5-7
Battery Charging System Precautions	1-5-8
Gas Hydraulic Bladder Accumulators	1-5-9
Replacement	1-5-9
Charging	1-5-9
'Quick-Connect' Hoses	1-5-11
Disconnecting	1-5-11
Connecting	1-5-11
Hydraulic Contamination	1-5-12
Hydraulic Fluid Quality	1-5-12
Effects of Contamination	1-5-12
Cleaning Operation	1-5-12
Contaminant Standards	1-5-13
Filters	1-5-13
Hydraulic Rams	1-5-14
Installation	1-5-14
Caution During Use	1-5-14
Maintenance, Inspection Points	1-5-14
Service Consumables	
Introduction	1-6-1
Sealing and Retaining Compounds	1-6-2



Thank you very much
for your reading.
Please click here
to get more information.