5403, 5600, 5605, 5700, 5705 Tractor

TECHNICAL MANUAL

5600, 5700, 5403, 5605, 5705 (S.N. 000001-080728, 000001-080941)

TM4812 20DEC04 (ENGLISH)

For complete service information also see:

PowerTech 4.5L & 6.8L Diesel Engines Tier 1/Stage I, Tier 2/Stage III, Tier 3/Stage IIIA, Tier 3/Stage IIIA Tier 3/Stage III, (Base Engine)



John Deere Agriculture

Table of contents

FOREWORD

Section 10 - GENERAL INFORMATION

Group 05 - Safety

Section 40 - REPAIRING THE ELECTRIC SYSTEM

Group 05 - Battery, Starter Motor and Alternator

Group 10 - Electric System Components

Group 15 - Electric Wiring Harness

Section 50 - REPAIRING THE POWER TRAIN

Group 05 - Clutch - TSS Transmission

Group 10 - Carraro Clutch Assembly - (up to series 13693)

Group 11 - LUK Clutch Assembly - (as from series 13694)

Group 15 - TSS Transmission

Group 20 - PTO Drive Shaft

Group 25 - Differential

Group 30 - Final Drive

Group 35 - Mechanical Front Wheel Drive

Section 60 - REPAIRING THE STEERING AND BRAKES

Group 05 - Steering Repair

Group 10 - Brakes Repair

Group 15 - Steering Cylinder - 2WD Axle

Section 70 - HYDRAULIC REPAIR

Group 05 - Hydraulic Pump and Filter

Group 05A - Bosch Hydraulic Pump

Group 06 - Hydraulic Oil Cooler

Group 10 - Rockshaft

Group 15 - Selective Control Valve

Group 16 - Third Remote Control Valve

Section 80 - MECHANICAL FRONT WHEEL DRIVE

Group 05 - MFWD Special Tools

Group 10 - Technical Data and Adjustment Values

Group 15 - Disassembly

Group 20 - Assembling the Differential

Group 25 - Pinion Depth

Group 30 - Adjusting Backlash

Group 35 - Housing Assemble

Group 40 - Assemble MFWD Axle Shaft

Group 45 - Planetary Gear

Group 50 - Assemble Hydraulic Cylinder

Group 55 - Toe-In Adjustment

Section 90 - ROPS

Group 10 - Roll Over Protection Structure - ROPS

Section 240 - ELECTRIC SYSTEM: OPERATION AND TESTS

Group 05 - Location of the Components

Group 06 - Multitest Identification

Group 10 - Electrical System Theory of Operation

Group 15 - Diagnosing, Checking and Adjusting the Electrical System

Group 20 - General Electric Schematic

Section 250 - TRANSMISSION: OPERATION, TESTS AND ADJUSTMENTS.

Group 05 - Location of Components - Transmission TSS

Group 10 A - Carraro Clutch - Theory of Operation

Group 10 B - Eaton Clutch and Transmission TSS -Theory of Operation -

Group 15 - Diagnostics, Tests and Adjustments - TSS Transmission

Section 260 - BRAKE AND STEERING: OPERATION, TESTS AND ADJUSTMENTS.

- Group 05 Location of the Components
- Group 10 Steering and Brake -Theory of Operation
- Group 15 Steering and Brake Diagnosis, Tests and Adjustments

Section 270 - HYDRAULICS: OPERATION, TESTS AND ADJUSTMENTS.

- Group 05 Location of the Components
- Group 06 Digital Temperature and Presure Analyzer
- Group 10 Hydraulic System Theory of Operation
- Group 15 Hydraulic System Diagnosis
- Group 16 Hydraulic Tests-Without SCV
- Group 17 Hydraulic Tests-With SCV
- Group 18 Hydraulic Tests-All
- Group 19 Adjustments
- Group 20 Hydraulic Schematics
- Group 25 Others

<- Go to Global Table of contents
5403, 5600, 5605, 5700, 5705 Tractor



Thank you very much for your reading.

Please click here to get more information.