

 
# BL-275

## B Series



# Service Manual

S/N 572411001 & Above

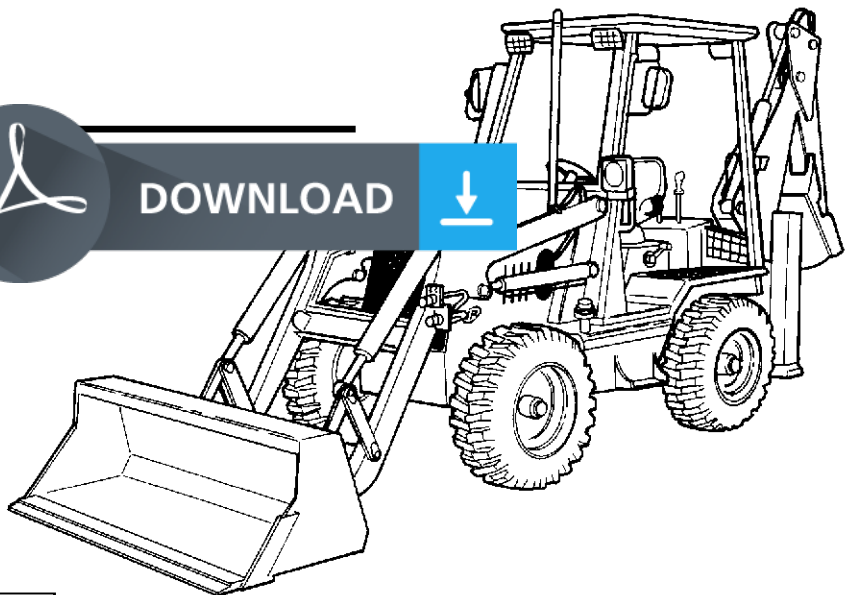

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.





# MAINTENANCE SAFETY



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

 
### CORRECT



B-10731A

- Never service the Ingersoll-Rand Compact Excavator without instructions.


### CORRECT

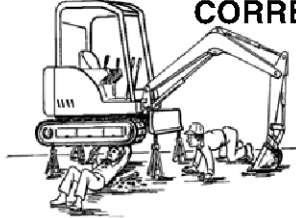

B-19964

- Use the correct procedure to lift and support the Excavator.

### CORRECT

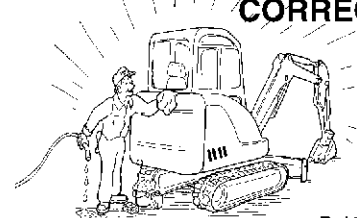 

B-19959

- Cleaning and maintenance are required daily.


### WRONG



 B-19965

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.


### WRONG

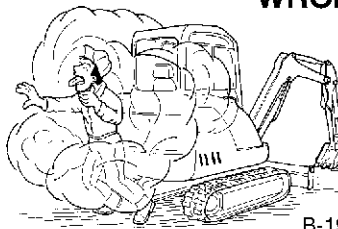

B-19960

- Vent exhaust to outside when engine must be run for service.
- Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.


### WRONG

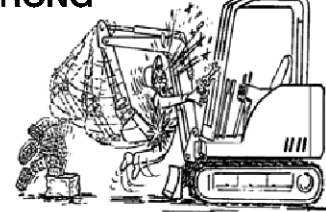 

B-19966

- Always lower the bucket and blade to the ground before doing any maintenance.
- Never modify equipment or add attachments not approved by Ingersoll-Rand Company.


### WRONG

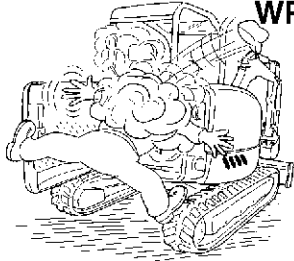 

B-19962

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust machine with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking, or when near open flame.

### WRONG

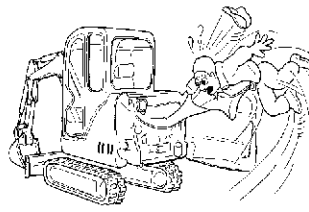 

B-19958

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the Excavator.

### WRONG



B-19798

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact.
- Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

MSW28-1003

Maintenance procedures which are given in the Operation & Maintenance manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance manual must be performed **ONLY BY QUALIFIED Ingersoll-Rand SERVICE PERSONNEL**. Always use genuine Ingersoll-Rand replacement parts. The Service Safety Training course is available from your Ingersoll-Rand dealer.



## ALPHABETICAL INDEX

AIR CLEANER .....	70-01	HEATER FAN .....	80-01
AIR CLEANER SERVICE .....	10-01	HEATER UNIT .....	80-01
ALTERNATOR .....	60-01	HYDRAULIC FILTER HOUSING .....	20-01
ALTERNATOR BELT .....	10-01	HYDRAULIC FLUID RESERVOIR .....	20-01
ARM CYLINDER .....	20-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
ARM .....	50-01	HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS .....	SPEC-01
AXLE AND DIFFERENTIAL (FRONT) .....	40-01	HYDRAULIC/HYDROSTATIC SYSTEM .....	10-01
AXLE AND DIFFERENTIAL (REAR) .....	40-01	HYDROSTATIC DRIVE MOTOR .....	30-01
AXLE TOE-IN .....	10-01	HYDROSTATIC PUMP .....	30-01
		HYDROSTATIC SYSTEM INFORMATION .....	30-01
		HYDROSTATIC TESTING .....	30-01
BACKHOE BOOM LOCK .....	10-01		
BACKHOE CONTROL VALVE .....	20-01	INSTRUMENT PANEL .....	60-01
BATTERY .....	60-01		
BOB-TACH .....	50-01	LOADER BACKHOE SPECIFICATIONS .....	SPEC-01
BOB-TACH HAND LEVER .....	10-01	LOADER BACKHOE TORQUE .....	SPEC-01
BOOM .....	50-01	LOADER CONTROL VALVE .....	20-01
BOOM CYLINDER .....	20-01	LIFT ARMS .....	50-01
BRAKE CALIPER .....	40-01	LIFT ARM SUPPORT DEVICE .....	10-01
BUCKET .....	50-01	LIFT CYLINDER .....	20-01
BUCKET CYLINDER .....	20-01	LIFTING AND BLOCKING THE LOADER BACKHOE .....	10-01
		LUBRICATING THE LOADER BACKHOE .....	10-01
CAB DOOR .....	50-01		
CAB LIGHTS .....	60-01	MAIN RELIEF VALVE .....	20-01
COMPONENTS .....	80-01	MUFFLER .....	70-01
CONVERSIONS .....	SPEC-01		
		OIL COOLER .....	30-01
DRIVESHAFT .....	40-01	OPERATOR CAB .....	50-01
DROP BOX .....	40-01	OPERATOR SEAT .....	50-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	PARKING BRAKE .....	40-01
ENCLOSED CAB .....	50-01	PORT RELIEF VALVE (BACKHOE CONTROL VALVE) .....	20-01
ENGINE .....	70-01	PORT RELIEF VALVE (LOADER CONTROL VALVE) .....	20-01
ENGINE COMPONENTS AND TESTING .....	70-01		
ENGINE COOLING SYSTEM .....	10-01	RADIATOR .....	70-01
ENGINE COVER .....	10-01, 50-01	REAR AXLE .....	10-01, 40-01
ENGINE LUBRICATION SYSTEM .....	10-01	REAR WINDOW .....	50-01
ENGINE SIDE COVERS .....	50-01	REAR WIPER .....	60-01
ENGINE SPECIFICATIONS .....	SPEC-01	RECONDITIONING THE ENGINE .....	70-01
ENGINE SPEED CONTROL .....	70-01	RUBBER DRIVE COUPLER .....	70-01
FENDER .....	50-01	SAPR BRAKE CONTROL VALVE .....	20-01
FLOOR PANELS .....	50-01	SAPR BRAKE CYLINDER .....	20-01
FLYWHEEL .....	70-01	SERVICE SCHEDULE .....	10-01
FLYWHEEL HOUSING .....	70-01	SIDE SHIFT LOCK CYLINDER .....	20-01
FRONT AXLE .....	10-01, 40-01	STABILIZER FRAME .....	50-01
FRONT AXLE PIVOT FRAME .....	50-01	STABILIZER CYLINDER .....	20-01
FRONT LIGHTS .....	60-01	STEERING ANGLE ADJUSTMENT (FRONT AXLE) .....	40-01
FRONT WIPER .....	60-01	STEERING ANGLE ADJUSTMENT (REAR AXLE) .....	40-01
FUEL LEVEL SENDER .....	60-01	STEERING CYLINDER (FRONT) .....	20-01
FUEL SYSTEM .....	10-01	STEERING CYLINDER (REAR) .....	20-01
FUEL TANK .....	50-01		
GEAR PUMP .....	20-01		
GRILL .....	50-01		
GRILL FRAME .....	50-01		



Thank you very much  
for your reading.  
Please click here  
to get more information.