

REPAIR MANUAL

NEW HOLLAND


TD60D

TD70D

TD80D

TD90D

TD95D

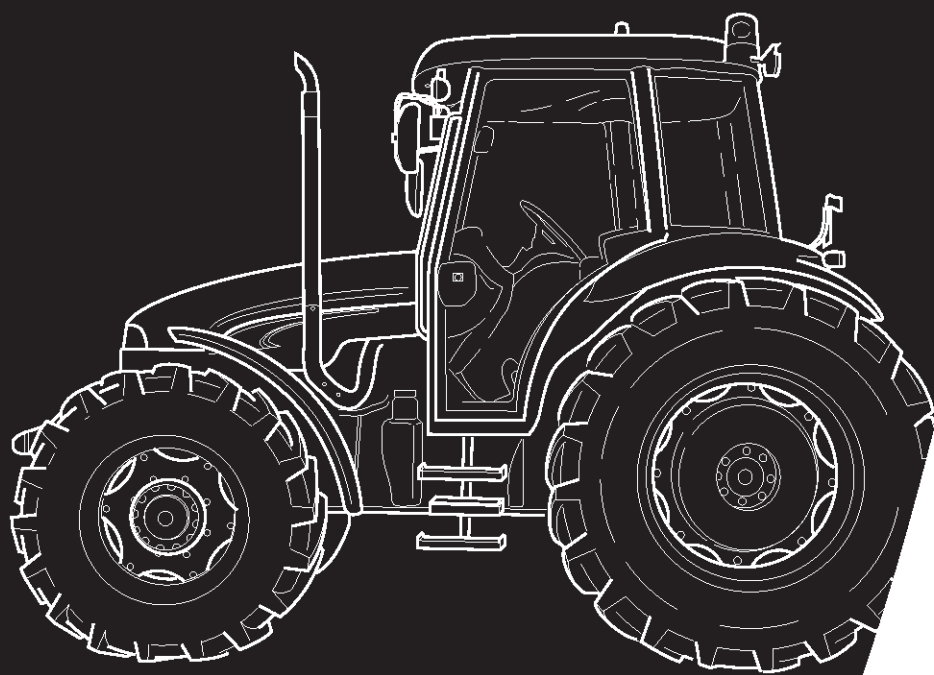

NEW HOLLAND



NEW HOLLAND



TD60D - TD70D - TD80D - TD90D - TD95D MODEL TRACTORS SERVICE MANUAL

SECTIONS

GENERAL	00
ENGINE	10
CLUTCH	18
GEARBOX	21
TRANSMISSION OF MOTION	23
FRONT MECHANICAL TRANSMISSION	25
REAR MECHANICAL TRANSMISSION	27
POWER TAKE-OFF	31
BRAKES	33
HYDRAULIC SYSTEMS	35
STEERING	41
AXLE AND WHEELS	44
AIR CONDITIONING SYSTEM	50
ELECTRICAL SYSTEM	55
CAB	90

S E R V I C E

INTRODUCTION

- ◇ *This manual is divided into sections identified by two-figure numbers. Each section has independent page numbering.
For ease of reference, these sections have the same numbers and names as the Repairs Rate Book sections.*
- ◇ *The different sections can easily be found by consulting the table of contents on the following pages.*
- ◇ *The document number of the manual and the edition/update dates are given at the bottom of each page.*
- ◇ *Pages updated in the future will be identified by the same document number followed by a two-figure update number (for example: 1st update 603.54.471.01; 2nd update 603.54.471.02; etc.) and the corresponding issue date.
These pages will be supplemented by a reprint of the updated contents page.*
- ◇ *The information contained in this manual was current on the date printed on each section. As NEW HOLLAND constantly improves its product range, some information may be out of date subsequent to modifications implemented for technical or commercial reasons or to meet legal requirements in different countries.
In the event of conflicting information, consult the NEW HOLLAND Sales and Service Departments.*

IMPORTANT WARNINGS

- ◇ *All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians in strict accordance with the instructions given and using any specific tools necessary.*
- ◇ *Anyone who performs the operations described herein without strictly following the instructions is personally responsible for resulting injury or damage to property.*
- ◇ *The Manufacturer and all organisations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer.
In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.*

TEXT AND ILLUSTRATIONS ARE THE PROPERTY
OF CNH ITALIA S.p.a.



No part of the text or illustrations
may be reproduced

PRINTED IN ITALY

CNH ITALIA S.p.a. - Viale delle Nazioni, 55 - 41100 MODENA - Italia
TECHNICAL SUPPORT - Technical Information
Print no. **603.54.471.00** - 11 - 2004

NEW HOLLAND

Repair Manual – TD Series Tractors

CONTENTS

GENERAL

SECTION 00

General Instructions and Health and Safety

Chapter 1

Section	Description	Page
00 000	General instructions	1
	Notes for spare parts	2
	Notes for equipment	2
	Safety rules	3
	Consumables	6

ENGINE

SECTION 10

Engine System

Chapter 1

Section	Description	Page
10 000	General specifications	2
	Injection pump calibration data	6
	General specifications	16
	Torque settings	24
	Tools	25
	Cross-sectional views	28
	Lubrication and cooling system diagrams	32
	Fault diagnosis	35
10 001 10	Engine <i>Removal-Installation</i>	39
10 001 54	Engine <i>Bench overhaul</i>	53
	Checks, measurements and repairs	78
10 406 10	Radiator <i>Removal-Installation</i>	103
10 102 70	Crankshaft front oil seal <i>removal installation</i>	106
10 402 10	Coolant pump <i>removal installation</i>	112
10 402 30	Cooling system thermostat	115
10 206 14	Bosch injection pump <i>removal installation</i>	118
	Bosch injection pump <i>timing</i>	121
	Bosch injection pump <i>air bleeding</i>	123
10 218 30	Injectors <i>removal installation</i>	124
10 106 12	Valve clearance adjustment	126
10 402 28	Coolant pump overhaul	129
10 001 30	Compression test	130

CLUTCH**SECTION 18****Clutches****Chapter 1**

Section	Description	Page
18 000	General specifications	1
	Tightening torques	2
	Tools	3
	Cross-sectional views	4
	Clutch Troubleshooting	5
18 110 10	Removal – Installation	6
	Overhaul	14
	Minimum permissible dimensions after refacing	18
	Adjustments	19
18 100 40	Adjustment of the main and PTO clutch control linkage	21

GEARBOX**SECTION 21****Mechanical Transmission (12x4)****Chapter 1**

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	5
	Description and operation	8
	Fault diagnosis	8
21 110	Removal – Refitting	see sect 27

Reverser (12x12)**Chapter 2**

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	3
	Description and operation	5
	Fault diagnosis	5
21 110	Removal–Refitting	6

Reverser and creeper unit (20x12)**Chapter 3**

Section	Description	Page
21 000	Main data	1
	Tightening torques	2
	Tools	3
	Section views	4
	Description and operation	6
	Fault diagnosis	6
21 110	Removal–Refitting	7

DRIVE LINES**SECTION 23****Drive Lines****Chapter 1**

Section	Description	Page
23 000	Main specification	1
	Torque settings and Tools	2
	Cross-Sectional views	3
23 101 26	Transmission shafts and guard (Disassembly – Assembly)	4
23 101 40	Drive gear housing (Removal – Installation)	5
23 101 42	Drive gear housing removed (Disassembly – Assembly)	7

FRONT AXLE MECHANICAL TRANSMISSION**SECTION 25****Front Axle Mechanical Transmission****Chapter 1**

Section	Description	Page
25 000	Main data	1
	Tightening torques	4
	Tools	6
	Cross-sectional views	7
	Description and operation	10
25 100 30	Complete front axle. Removal – Installation	10
25 100 38	Front axle. Removal – Installation	14
25 108 46–47	Steering knuckle bearing pins. Replacement	24
	Stub axle adjustment	25
	Wheel hub bearing adjustment	27
	Bevel drive adjustment	29
25 102 24	Front axle differential. Overhaul	36
25 100 27	Front axle differential with LIM–SLIP. Overhaul	37
	Front axle differential with NO SPIN. Overhaul	39
44 511 80	Leading drive wheels toe-in check	42

REAR AXLE AND TRANSMISSION**SECTION 27****Rear Axle And Transmission****Chapter 1**

Section	Description	Page
27 000	Main data	1
	Tightening torques	3
	Special tools	5
	Cross-sectional views	7
	Description and operation and troubleshooting	10
21.118.10 – 12	Transmission–gearbox casing Removal–Installation	11
21.118.85	Transmission–gearbox casing Disassembly–Overhaul	29
	Gearbox driven shaft end float adjustment	37
	Differential lock engagement sleeve adjustment	38
	Determining the bevel pinion positioning adjustment ring	39
	Adjusting the taper roller bearings for the bevel pinion shaft	41
	Adjusting the bearings and checking the backlash	42
	Differential pinion and side gear backlash adjustment	46

POWER TAKE-OFF**SECTION 31****Mechanical Power Take – Off****Chapter 1**

Section	Description	Page
31 000	Main specifications	1
	Tools	3
	Tightening torques	4
	Cross-sectional views	5
	Description and Operation	9
	Troubleshooting	10
31.112.20	540/750 Power take-off – Removal – Installation	11
31.112.45–48	540/750 Power take-off – Overhaul on bench	14
31.114	540/750 Power take-off – Overhaul on bench	17

BRAKES**SECTION 33****Braking System****Chapter 1**

Section	Description	Page
33 000	Main data	1
	Tightening torques	2
	Cross-sectional views	3
	Description & Operation	7
	Tools – Troubleshooting	8
33.206	Front brake assembly mod. TD60D and TD70D removal and refitting – overhauling on the bench	9
33.202.60	Service brake removal and refitting	12
33.202.50	Removal–Refitting of front brake pumps	17
33.202.40	Bleeding air from the front braking system	19
33.120.08	Adjusting service brake pedals travel	20
33.110.08	Parking brake travel adjustment	20

HYDRAULIC SYSTEM**SECTION 35****Rear Mechanical Hydraulic Lift****Chapter 1**

Section	Description	Page
35 000	Main specification	1
	Tightening torques	5
	Tools	6
	Cross-sectional views	7
	Description & Operation	9
	Hydraulic circuit	10
	Description and operation of lift phases	11
	Fault diagnosis	14
35 110.30	Hydraulic lift – disassembly reassembly	16
35.110.40–42–46	Hydraulic lift – bench overhaul	23
	Adjusting the lift	28
35.110.08	Linkage adjustment	34
35.110.30	Pressure relief valve – disassembly reassembly	36
35.110.32	Pressure relief valve – setting	36
35.110.14	Lift control valve – disassembly assembly and overhaul on bench	37
35.0101.10	Lift pump	41

Open Centre System Auxiliary Control Valves**Chapter 2**

Section	Description	Page
35 000	Main data – Tools	1
	Cross-sectional views	2
	Description & Operation	3
	Diagram of a convertible single/double-acting control valve with automatic release and detent in float	4
	Diagram of a convertible single/double-acting control valve	7
	Diagram of a convertible single/double-acting control valve with automatic release	9
35 204 46	Additional control valve – disassembly and reassembly	10
	Hydraulic Tests	11

Trailer Brake Auxiliary Control Valve**Chapter 3**

Section	Description	Page
35 000	Section views	1
	Hydraulic diagram	2
	Description and operation of valve phases	3
	Trailer brake auxiliary control valve linkage adjustment	5

STEERING**SECTION 41****Steering****Chapter 1**

Section	Description	Page
41 000	Principal data	1
	Tightening torques	3
	Hydraulic diagram	4
	Operation	5
	Section	8
	Fault diagnosis	9
	Tools	10
41 204.30	Removal–Installation – hydrostatic steering control valve	11
41.204.34	Hydrostatic steering control valve – Overhaul on bench	14
41.204.38	Hydrostatic steering control valve – Bench test	28
	Hydrostatic steering pump	30
41.216.20	Steering cylinder (two-wheel drive axle) – removal and installation	32
	Steering cylinder (four-wheel drive axle) – removal and installation	33

FRONT AXLE AND WHEELS**SECTION 44****Front Axle And Wheels****Chapter 1**

Section	Description	Page
44 000	Principal data	1
	Sectional views	3
	Torque settings	4
	Equipment – Fault diagnosis	5
44 101.30	Removal–Refitting–Overhaul	6
44 101.22	Wheel hub disassembly–assembly	9
44 101.46	Stub axle overhaul	12
44 511.80	Checking wheel alignment	16

CAB AIR CONDITIONING SYSTEM**SECTION 50****Cab air conditioning system****Chapter 1**

Section	Description	Page
50 000	Safety instructions	2
	General characteristics	3
	Equipment	4
	Operating principles	5
	Fault diagnosis	7
	Cab controls	11
	Use	14
	Main components of the cab air conditioning system	15
	Refrigerant recovery–recycling and evacuation–charging stations	20
50.200.04	Drying recharging and checking cooling	22
50.200.03	Air–conditioning functional testing	27
	Summary of the cab air–conditioning system charging operations	28
	Checking for refrigerant leaks using an electronic leak detector	30
	Summary of fault diagnosis and maintenance	31
	Air conditioning and heating pipes – Replacement	33
50.200.04–74	Receiver–dryer – Replacement	36
50.200.04–72	Condenser – Replacement	38
50.200.04–26	Compressor – Removal–Refitting	39
50.200.10	Compressor drive belt tension adjustment	41

ELECTRICAL SYSTEM**SECTION 55****Instruments****Chapter 1**

Section	Description	Page
	Analogue instruments Introduction	1
	Transmitter and switch	4

Components**Chapter 2**

Section	Description	Page
55 500	Introduction	1
	Component description	1

Starting System**Chapter 3**

Section	Description	Page
55 000	Specifications	1
	Tightening torques	1
	Description and Operation	2
	System testing	4
55.201.50	Removal and re–installation of starter motor	7
	Section	8
55.201.54	Overhaul – disassembly and reassembly	8
	Bench tests	10

Charging System**Chapter 4**

Section	Description	Page
55 000	Technical information	1
	Tightening torques	1
	Description and operation	2
	System testing and trouble-shooting	4
55.301.10	Removal, re-installation and servicing	10

Battery**Chapter 5**

Section	Description	Page
55 000	Technical information	1
	Description and operation	1
55.301.040	Removal and re-installation	2
	Battery checking and maintenance	3
	Charging the battery	4
	Battery problems – Frequent causes	8

Electrical Circuits**Chapter 6**

Section	Description	Page
55 100	Content	1
	Fuses and Relays	2
	Electrical wire colour coding	4
	key to circuit symbols	5
	General diagram of tractor in non-cab version	6
	Starter switch system diagram	7
	Fuses and relays system diagram	8
	General diagram of tractor in cab/non-cab version	9
	Frame system diagram	9
	General diagram of tractor in cab version	10
	Starter switch system diagram	10
	Fuses and relays system diagram	12
	Cab system diagram	13
	Partial and connector diagrams	14
	Analog instrument circuit	14
	Starting circuit	16
	Direction indicator and hazard warning light circuit	21
	Windscreen and rear window wiper/washer circuit	28
	Brake warning light circuit	32
	Air conditioning and heating system circuit	37
	Work lights circuit (models without cab)	40
	Work lights circuit (models with cab)	42
	Sidelights, full beam, dipped beam and parking lights circuit	47

CAB**SECTION 90****Removing parts****Chapter 1**

Section	Description	Page
90 160 42 – 43		
90 120 10	Control levers, seat and electrical controls – disassembly and reassembly	2
90 156 52	Rear window, handle and lock – disassembly and reassembly	10
90 154 30	Left-hand door exterior handle and lock – disassembly and reassembly	11
90 154 10	Left-hand door – disassembly and reassembly	12
90 160 60		
55 518 52	Windscreen wiper motor – disassembly and reassembly	13
90 154 24		
90 156 10 – 14		
90 156 28	Cab windows – replacement	15

GENERAL INSTRUCTIONS

IMPORTANT NOTICE

All maintenance and repair operations described in this manual should be carried out exclusively by the NEW HOLLAND authorised workshops. All instructions detailed should be carefully observed and special equipment indicated should be used if necessary.

Everyone who carries out service operations described without carefully observing these prescriptions will be directly responsible of deriving damages.

SHIMMING

At each adjustment, select adjusting shims, measure them individually using a micrometer and then sum up recorded values. Do not rely on measuring the whole shimming set, which may be incorrect, or on rated value indicated for each shim.

ROTATING SHAFT SEALS

To correctly install rotating shaft seals, observe the following instructions:

- Let the seal soak into the same oil as it will seal for at least half an hour before mounting;
- Thoroughly clean the shaft and ensure that the shaft working surface is not damaged;
- Place the sealing lip towards the fluid. In case of a hydrodynamic lip, consider the shaft rotation direction and orient grooves in order that they deviate the fluid towards the inner side of the seal;
- Coat the sealing lip with a thin layer of lubricant (oil rather than grease) and fill with grease the gap between the sealing lip and the dust lip of double lip seals;
- Insert the seal into its seat and press it down using a flat punch. Do not tap the seal with a hammer or a drift;
- Take care to insert the seal perpendicularly to its seat while you are pressing it. Once the seal is settled, ensure that it contacts the thrust element if required.;
- To prevent damaging the sealing lip against the shaft, place a suitable protection during installation.

O RINGS

Lubricate the O rings before inserting them into their seats. This will prevent the O rings from rolling over and twine during mounting which will jeopardise sealing.

SEALERS

Apply one of the following sealers: RTV SILMATE, RHODORSIL CAF 1, or LOCTITE PLASTIC GASKET over the mating surfaces marked with an X.

Before applying the sealer, prepare the surface as follows:

- remove possible scales using a metal brush;
- thoroughly degrease the surfaces using one of the following cleaning agent: trichlorethylene, petrol or a water and soda solution.

BEARINGS

It is advisable to heat the bearings to 80 to 90°C before mounting them on their shafts and cool them down before inserting them into their seats with external tapping.

ROLL PINS

When fitting straight roll pins, ensure that the pin notch is oriented in the direction of the effort to stress the pin. Coil roll pins can be installed in any position.

NOTES FOR SPARE PARTS

Use exclusively **genuine NEW HOLLAND spare parts**, the only ones that guarantee same quality, life, safety as original components as they are the same as mounted in production.

Only **genuine spare parts** can offer this guarantee.

All spare parts orders should be complete with the following data:

- tractor model (commercial name) and frame number;
- engine type and number;
- part number of the ordered part, which can be found on the “Microfiches” or the “Spare Parts Catalogue”, which is the base for order processing.

NOTES FOR EQUIPMENT

Equipment which NEW HOLLAND proposes and shows in this manual are as follows:

- studied and designed expressly for use on NEW HOLLAND tractors;
- necessary to make a reliable repair;
- accurately built and strictly tested to offer efficient and long-lasting working means.

We also remind the Repair Personnel that having these equipment means:

- work in optimal technical conditions;
- obtain best results;
- save time and effort;
- work more safely.

NOTICES

Wear limits indicated for some details should be intended as advised, but not binding values. The words “front”, “rear”, “right hand”, and “left hand” referred to the different parts should be intended as seen from the operator's seat oriented to the normal sense of movement of the tractor.

HOW TO MOVE THE TRACTOR WITH THE BATTERY REMOVED

Cables from the external power supply should be connected exclusively to the respective terminals of the tractor positive and negative cables using pliers in good condition which allow proper and steady contact.

Disconnect all services (lights, wind-shield wipers, etc.) before starting the tractor.

If it is necessary to check the tractor electrical system, check it only with the power supply connected. At check end, disconnect all services and switch the power supply off before disconnecting the cables.

SAFETY RULES

PAY ATTENTION TO THIS SYMBOL



This warning symbol points out important messages involving personal safety. Carefully read the safety rules contained herein and follow advised precautions to avoid potential hazards and safeguard your safety and personal integrity.

In this manual you will find this symbol together with the following key-words:

WARNING – it gives warning about improper repair operations and deriving potential consequences affecting the service technician's personal safety.

DANGER – it gives specific warning about potential dangers for personal safety of the operator or other persons directly or indirectly involved.



TO PREVENT ACCIDENTS

Most accidents and personal injuries taking place in workshops are due from non-observance of some simple and essential prudential rule and safety precautions. For this reason, **IN MOST CASES THEY CAN BE AVOIDED**. It suffices to foresee possible causes and act consequently with necessary caution and care.

The possibility that an accident might occur with any type of machines should not be disregarded, no matter how well the machine in question was designed and built.

A wise and careful service technician is the best precautions against accidents.

Careful observance of this only basic precaution would be enough to avoid many severe accidents.

DANGER: Never carry out any cleaning, lubrication or maintenance operations when the engine is running.

if they are certified operators to assist in the operation to be carried out.

SAFETY RULES

GENERALITIES

- ◇ Carefully follow specified repair and maintenance procedures.
- ◇ Do not wear rings, wristwatches, jewels, unbuttoned or flapping clothing such as ties, torn clothes, scarves, open jackets or shirts with open zips which could get hold into moving parts. We advise to use approved safety clothing such as anti-slipping footwear, gloves, safety goggles, helmets, etc.
- ◇ Never carry out any repair on the machine if someone is sitting on the operator's seat, except

- ◇ if they are certified operators to assist in the operation to be carried out.
- ◇ Never operate the machine or use attachments from a place other than sitting at the operator's seat.
- ◇ Never carry out any operation on the machine when the engine is running, except when specifically indicated.
- ◇ Stop the engine and ensure that all pressure is relieved from hydraulic circuits before removing caps, covers, valves, etc.
- ◇ All repair and maintenance operations should be carried out with the greatest care and attention.
- ◇ Service stairs and platforms used in a workshop or in the field should be built in compliance with the safety rules in force.
- ◇ Disconnect the batteries and label all controls to warn that the tractor is being serviced. Block the machine and all equipment which should be raised.
- ◇ Never check or fill fuel tanks and accumulator batteries, nor use starting liquid if you are smoking or near open flames as such fluids are flammable.
- ◇ Brakes are inoperative when they are manually released for maintenance purposes. In such cases, the machine should be kept constantly under control using blocks or similar devices.
- ◇ The fuel filling gun should remain always in contact with the filler neck. Maintain this contact until the fuel stops flowing into the tank to avoid possible sparks due to static electricity buildup.

- ◇ Use exclusively specified towing points for towing the tractor. Connect parts carefully. Ensure that foreseen pins and/or locks are steadily fixed before applying traction. Do not stop near towing bars, cables or chains working under load.
- ◇ To transfer a failed tractor, use a trailer or a low loading platform trolley if available.
- ◇ To load and unload the machine from the transportation mean, select a flat area providing a firm support to the trailer or truck wheels. Firmly tie the machine to the truck or trailer platform and block wheels as required by the forwarder.
- ◇ For electrical heaters, battery–chargers and similar equipment use exclusive auxiliary power supplies with a efficient ground to avoid electrical shock hazard.
- ◇ Always use lifting equipment and similar of appropriate capacity to lift or move heavy components.
- ◇ Pay special attention to bystanders.
- ◇ Never pour gasoline or diesel oil into open, wide and low containers.
- ◇ Never use gasoline, diesel oil or other flammable liquids as cleaning agents. Use non–flammable non–toxic proprietary solvents.
- ◇ Wear protection goggles with side guards when cleaning parts using compressed air.
- ◇ Do not exceed a pressure of 2.1 bar, in accordance with local regulations.
- ◇ Do not run the engine in a closed building without proper ventilation.
- ◇ Do not smoke, use open flames, cause sparks in the nearby area when filling fuel or handling highly flammable liquids.
- ◇ Do not use flames as light sources when working on a machine or checking for leaks.
- ◇ Move with caution when working under a tractor, and also on or near a tractor. Wear proper safety accessories: helmets, goggles and special footwear.
- ◇ During checks which should be carried out with the engine running, ask an assistant to seat at the operator's seat and keep the service technician under visual control at any moment.
- ◇ In case of operations outside the workshop, drive the tractor to a flat area and block it. If working on an incline cannot be avoided, first block the tractor carefully. Move it to a flat area as soon as possible with a certain extent of safety.
- ◇ Ruined or plied cables and chains are unreliable. Do not use them for lifting or trailing. Always handle them wearing gloves of proper thickness.
- ◇ Chains should always be safely fastened. Ensure that fastening device is strong enough to hold the load foreseen. No persons should stop near the fastening point, trailing chains or cables.
- ◇ The working area should be always kept CLEAN and DRY. Immediately clean any spillage of water or oil.
- ◇ Do not pile up grease or oil soaked rags, as they constitute a great fire hazard. Always place them into a metal container.
Before starting the tractor or its attachments, check, adjust and block the operator's seat. Also ensure that there are no persons within the tractor or attachment operating range.
- ◇ Do not keep into your pockets any object which might fall unobserved into the tractor's inner compartments.
- ◇ Whenever there is the possibility of being reached by ejected metal parts or similar, use protection eye mask or goggles with side guards, helmets, special footwear and heavy gloves.
- ◇ Wear suitable protection such as tinted eye protection, helmets, special clothing, gloves and footwear whenever it is necessary to carry out welding procedures. All persons standing in the vicinity of the welding process should wear tinted eye protection. NEVER LOOK AT THE WELDING ARC IF YOUR EYES ARE NOT SUITABLY PROTECTED.
- ◇ Metal cables with the use get frayed. Always wear adequate protections (heavy gloves, eye protection, etc.)
- ◇ Handle all parts with the greatest caution. Keep your hands and fingers far from gaps, moving gears and similar. Always use approved protective equipment, such as eye protection, heavy gloves and protective footwear.

START UP

- ◇ Never run the engine in confined spaces which are not equipped with adequate ventilation for exhaust gas extraction.
- ◇ Never bring your head, body, arms, legs, feet, hands, fingers near fans or rotating belts.

ENGINE

- ◇ Always loosen the radiator cap very slowly before removing it to allow pressure in the system to dissipate. Coolant should be topped up only when the engine is stopped or idle if hot.
- ◇ Do not fill up fuel tank when the engine is running, mainly if it is hot, to avoid ignition of fires in case of fuel spilling.
- ◇ Never check or adjust the fan belt tension when the engine is running.
Never adjust the fuel injection pump when the tractor is moving.
- ◇ Never lubricate the tractor when the engine is running.

ELECTRICAL SYSTEMS

- ◇ If it is necessary to use auxiliary batteries, cables must be connected at both sides as follows: (+) to (+) and (–) to (–). Avoid short-circuiting the terminals. **GAS RELEASED FROM BATTERIES IS HIGHLY FLAMMABLE.** During charging, leave the battery compartment uncovered to improve ventilation. Avoid checking the battery charge by means of “jumpers” made by placing metallic objects across the terminals. Avoid sparks or flames near the battery area. Do not smoke to prevent explosion hazards.
- ◇ Prior to any service, check for fuel or current leaks. Remove these leaks before going on with the work.
- ◇ Do not charge batteries in confined spaces. Ensure that ventilation is appropriate to prevent accidental explosion hazard due to build-up of gases released during charging.
- ◇ Always disconnect the batteries before performing any type of service on the electrical system.

HYDRAULIC SYSTEMS

- ◇ Some fluid slowly coming out from a very small port can be almost invisible and be strong enough to penetrate the skin. For this reason, **NEVER USE YOUR HANDS TO CHECK FOR LEAKS**, but use a piece of cardboard or a piece of wood to this purpose. If any fluid is injected into the skin, seek medical aid immediately. Lack of immediate medical attention, serious infections or dermatosis may result.
- ◇ Always take system pressure readings using the appropriate gauges.

WHEELS AND TYRES

- ◇ Check that the tyres are correctly inflated at the pressure specified by the manufacturer. Periodically check possible damages to the rims and tyres.
- ◇ Keep off and stay at the tyre side when correcting the inflation pressure.
- ◇ Check the pressure only when the tractor is unloaded and tyres are cold to avoid wrong readings due to over-pressure. Do not reuse parts of recovered wheels as improper welding, brazing or heating may weaken the wheel and make it fail.
- ◇ Never cut, nor weld a rim with the inflated tyre assembled.
- ◇ To remove the wheels, block both front and rear tractor wheels. Raise the tractor and install safe and stable supports under the tractor in accordance with regulations in force.
- ◇ Deflate the tyre before removing any object caught into the tyre tread.
- ◇ Never inflate tyres using flammable gases as they may originate explosions and cause injuries to bystanders.

REMOVAL AND INSTALLATION

- ◇ Lift and handle all heavy components using lifting equipment of adequate capacity. Ensure that parts are supported by appropriate slings and hooks. Use lifting eyes provided to this purpose. Take care of the persons near the loads to be lifted.
- ◇ Handle all parts with great care. Do not place your hands or fingers between two parts. Wear approved protective clothing such as safety goggles, gloves and footwear.
- ◇ Do not twine chains or metal cables. Always wear protection gloves to handle cables or chains.

CONSUMABLES

COMPONENT TO BE FILLED OR TOPPED UP	QTY dm ³ (litres)	QUANTITY US gal	NEW HOLLAND RECOMMENDED PRODUCT	INTERNATIONAL SPECIFICATION
Cooling system : TD60D, TD70D models TD80D, TD90D, TD95D models . with cab: TD60D, TD70D models TD80D, TD90D, TD95D models .	12 14 14 16	3.2 3.7 3.7 4.2	Water & liquid AMBRA AGRIFLU 50% + 50% (NH 900 A)	–
Windscreen washer bottle	2	0.5	Water & cleaning liquid	–
Fuel tank	92	24.3	Decanted, filtered diesel fuel	–
Engine sump: without filter: TD60D, TD70D models TD80D, TD90D, TD95D models . with filter TD60D, TD70D models TD80D, TD90D, TD95D models	6.8 10.7 7.5 11.4	1.8 2.8 2.0 3.0	AMBRA Supergold SAE 15W – 40 (NH 330G) AMBRA Supergold SAE 10W – 30 (NH 324G)	API CF-4/SG CCMC D4 MIL-L-2104E
Brake control circuit	0.4	0.1	AMBRA BRAKE LHM Oil (NH 610 A)	ISO 7308
Hydrostatic steering circuit	2.0	0.5	Oil AMBRA MULTI F (NH 420 A)	API GL4 ISO 46/68 SAE 20W-30
Front axle : – axle housing : TD60D, TD70D models TD80D, TD90D, TD95D models . final drives (each) : TD60D, TD70D models TD80D, TD90D, TD95D models .	4.5 7.0 0.8 1.25	1.2 1.8 0.2 0.3		
Rear axle (bevel drive, final drives and brakes), transmission, hydraulic lift, power take-off and hydrostatic steering : TD60D, TD70D models TD80D, TD90D, TD95D models . – with synchro-reverser : All models	49 55 55	12.9 13.1 13.1		
Front wheel hubs	–			
Grease fittings	–		Grease AMBRA GR9 (NH 710 A)	NLGI 2

SECTION 10 – ENGINE

Chapter 1 – Engine

CONTENTS

Section	Description	Page
10 000	General specifications	2
	Injection pump calibration data	6
	General specifications	16
	Torque settings	24
	Tools	25
	Cross-sectional views	28
	Lubrication and cooling system diagrams	32
	Fault diagnosis	35
10 001 10	Engine <i>Removal–Installation</i>	39
10 001 54	Engine <i>Bench overhaul</i>	53
	Checks, measurements and repairs	78
10 406 10	Radiator <i>Removal–Installation</i>	103
10 102 70	Crankshaft front oil seal <i>removal installation</i>	106
10 402 10	Coolant pump <i>removal installation</i>	112
10 402 30	Cooling system thermostat	115
10 206 14	Bosch injection pump <i>removal installation</i>	118
	Bosch injection pump <i>timing</i>	121
	Bosch injection pump <i>air bleeding</i>	123
10 218 30	Injectors <i>removal installation</i>	124
10 106 12	Valve clearance adjustment	126
10 402 28	Coolant pump overhaul	129
10 001 30	Compression test	130

GENERAL SPECIFICATIONS	3 cylinders	4 cylinders
Engine type:		
– mod. TD60D normally aspirated – type 8035.05D.939 (BOSCH pump)	see data pages 6–7	–
– mod. TD70D turbocharged – type 8035.25C.939 (BOSCH pump)	see data pages 8–9	–
– mod. TD80D normally aspirated – type 8045.05R.939 (BOSCH pump)	–	see data pages 10–11
– mod. TD90D turbocharged – type 8045.25.939 (BOSCH pump)	–	see data pages 12–13
– mod. TD95D turbocharged – type 8045.25L.939 (BOSCH pump)	–	see data pages 14–15
Cycle	Diesel, 4–stroke	
Fuel injection	Direct	
Number of cylinders in line	3	4
Cylinder liners		dry force–fitted in cylinder block
Piston diameter		
– mod. TD60D	104 mm (4.0945 in.)	–
– mod. TD70D	104 mm (4.0945 in.)	–
– mod. TD80D	–	104 mm (4.0945 in.)
– mod. TD90D	–	104 mm (4.0945 in.)
– mod. TD95D	–	104 mm (4.0945 in.)
Piston stroke	115 mm (4.5276 in.)	
Total displacement:		
– mod. TD60D–TD70D	2931 cm ³ (178.8496 in. ³)	–
– mod. TD80D–TD90D–TD95D	–	3908 cm ³ (238.4662 in. ³)
Compression ratio	17 to 1 normally aspirated 16.5 to 1 turbocharged	
Maximum power 2000/25 EC at 2500 rpm:		
– mod. TD60D	43.4 kW (59 hp)	–
– mod. TD70D	50.7 kW (69 hp)	–
– mod. TD80D	–	58.8 kW (80 hp)
– mod. TD90D	–	65.5 kW (89 hp)
– mod. TD95D	–	69.1 kW (94 hp)
Maximum power ECE R 24 at 2500 rpm:		
– mod. TD60D	41.2 kW (56 hp)	–
– mod. TD70D	47.8 kW (65 hp)	–
– mod. TD80D	–	55.9 kW (76 hp)
– mod. TD90D	–	63.3 kW (86 hp)
– mod. TD95D	–	66.9 kW (91 hp)
Fast idling speed	2500 rpm.	
Maximum torque (daNm) at 1500 rpm: TD60D model	20.7 (152.6753 ft lb)	–
Maximum torque (daNm) at 1500 rpm: TD70D model	25.0 (184.3905 ft lb)	–
Maximum torque (daNm) at 1500 rpm: TD80D model	–	27.9 (205.9778 ft lb)
Maximum torque (daNm) at 1500 rpm: TD90D model	–	32.0 (236.0194 ft lb)
Maximum torque (daNm) at 1500 rpm: TD95D model	–	33.7 (248.5584 ft lb)
Number of main bearings	4	5
Sump	Structural, cast iron	

(Continued)

