


Service Manual Three-Point PTO Sprayer

(3 PT Sprayer) S/N ABKT00101 & Above

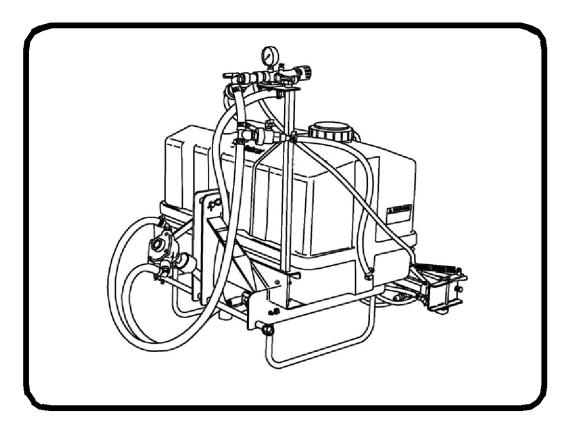



MAINTENANCE SAFETY




Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

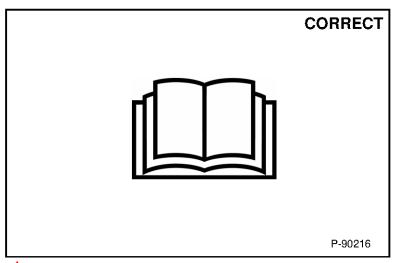

- Never service attachments / implements without instructions. See Operation & Maintenance Manual and Attachment / Implement Service Manual.
- A Cleaning and maintenance are required daily.
- Never service or adjust attachment / implement with the engine running unless instructed to do so in manual.
- Always lower the attachment / implement to the ground before lubricating or servicing.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
- A Stop, cool and clean engine of flammable materials before checking fluids.
- Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.
- A Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.

MSW30-0409



CONTENTS

SAFETY & MAINTENANCE	
MAIN FRAME	
SPECIFICATIONS	SPEC-01
ALPHARETICAL INDEX	INDEX-01



FOREWORD


SERIAL NUMBER LOCATION	
DELIVERY REPORT	1-7
IMPLEMENT IDENTIFICATION	1-8
IMPLEMENT SIGNS (DECALS)	1-9



SERIAL NUMBER LOCATION

Implement Serial Number Location


Figure 1

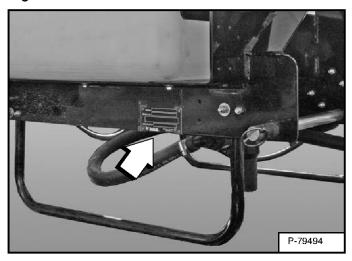

Always use the serial number of the three-point PTO sprayer when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation [Figure 1].


DELIVERY REPORT


Figure 2

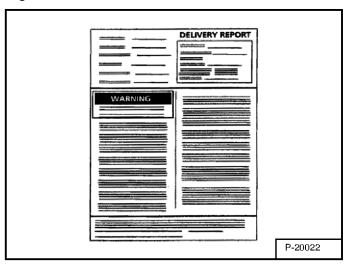

The delivery report must be filled out by the dealer and signed by the owner or operator when the three-point PTO sprayer is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 2].

IMPLEMENT IDENTIFICATION

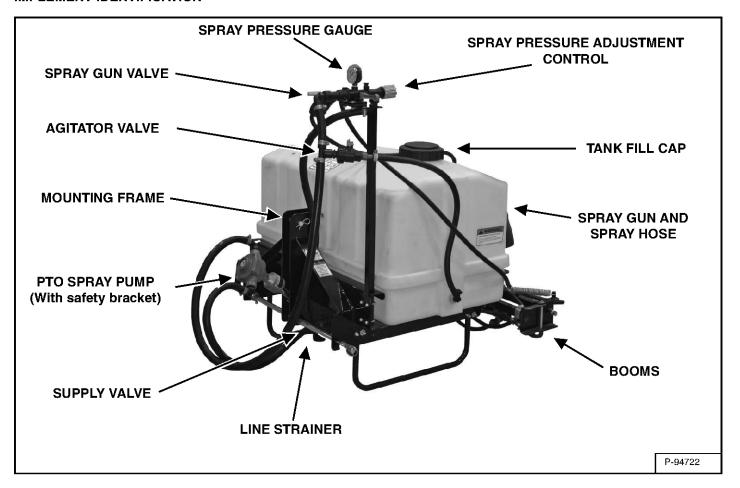

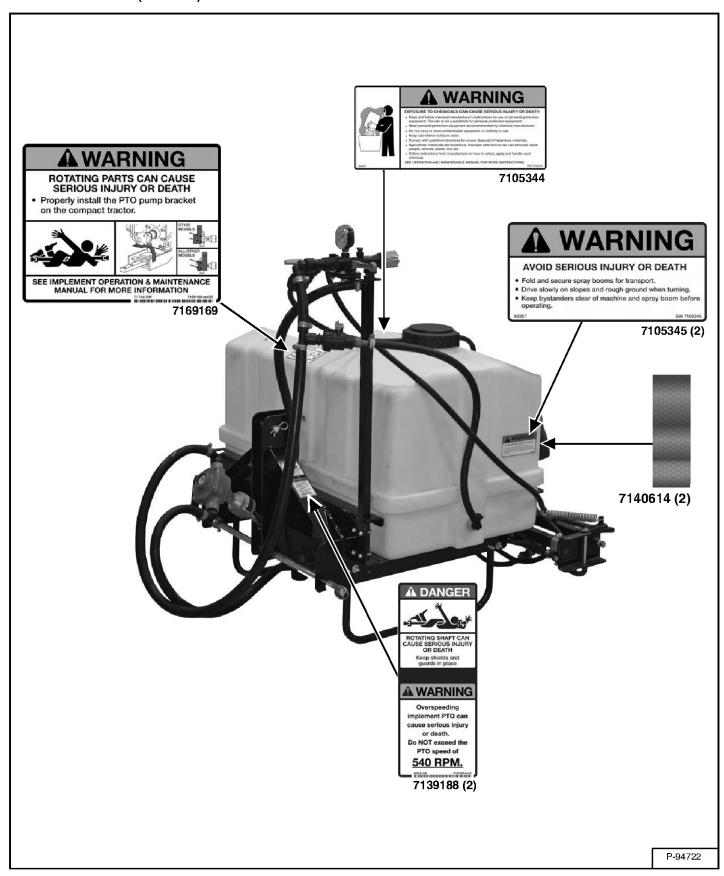



SAFETY & MAINTENANCE

TROUBLESHOOTING	10-10-1 10-10-1
REMOVAL AND INSTALLATION	10-20-1 10-20-1
IMPLEMENT STORAGE AND RETURN TO SERVICE	10-30-1
DAILY INSPECTION Implement Mounting Frame Three-Point Hitch Hoses Nozzles	10-40-1 10-40-1 10-40-2



TROUBLESHOOTING

Chart

PROBLEM	CAUSE	CORRECTION
Low Pressure	Plugged filter.	Clean filter.
Pump Does Not Start	Rear PTO not engaged.	Engage rear PTO.
	Tank empty.	Fill tank.
Spray Gun Does Not Work	Valve not ON.	Turn valve ON.
	Plugged filter.	Clean filter.



Line Strainer

WARNING

The spray tank and system must be emptied of chemical mixture and flushed with clean water before servicing the spray system or spraying components.

W-2213-1095

WARNING

Do not spill chemicals on skin or clothing. If chemicals are spilled, remove contaminated clothing immediately and wash skin (and clothing) thoroughly with soap and water. Wash hands and face with soap and water and change clothing after spraying.


W-2208-0995

WARNING

Always read the label before using chemicals. Follow the instructions from the chemical manufacturer on how to select, use and handle each chemical. Note protection information each time before opening the container.

W-2209-0995


Figure 10-20-1

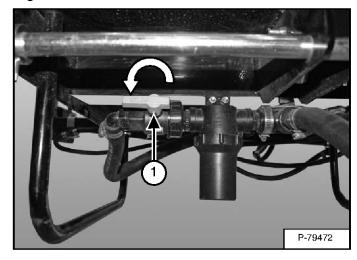

Before servicing or replacing the strainer, turn valve (Item 1) [Figure 10-20-1] to the close position to keep the water in the tank when the cup is removed.

NOTE: Product contained in the hoses will empty through the strainer housing when the cup is removed.

Figure 10-20-2

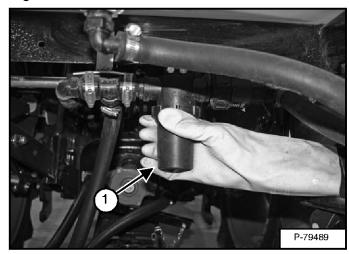

Remove the cup (Item 1) [Figure 10-20-2] and screen. Clean thoroughly and replace after everyday use.

NOTE: When reassembling the screen and cup on the housing, slide the screen in position prior to installing the cup. Use the same procedure when the O-ring seal is replaced.



IMPLEMENT STORAGE AND RETURN TO SERVICE

Storage

Sometimes it may be necessary to store your Bobcat implement for an extended period of time. Below is a list of items to perform before storage.

- · Thoroughly clean and wash the implement.
- Check for damaged or missing decals. Replace if necessary.
- Check for loose hardware, missing or damaged parts.
- Replace worn or damaged parts.
- Lubricate the implement (if applicable).
- Place the implement on flat ground in a dry protected shelter.

NOTE: In muddy conditions or to prevent the implement from freezing to the ground, put the implement on planks or blocks before removing the implement from the machine.

Return to Service

After the Bobcat implement has been in storage, it is necessary to follow a list of items to return the implement to service.

- Check for damaged or missing decals. Replace if necessary.
- · Check for loose hardware, missing or damaged parts.
- Replace worn or damaged parts.
- Lubricate the implement (if applicable).



