 


ZX 75

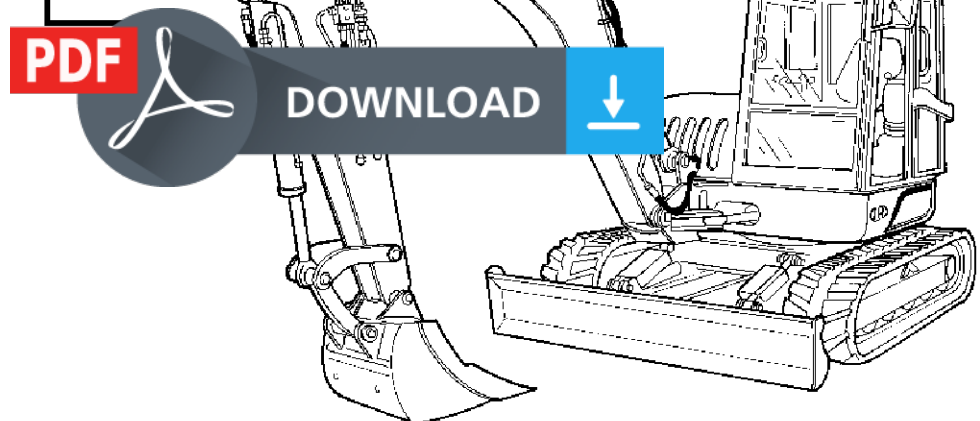

Service Manual



CONTENTS

FOREWORD.....	III
SAFETY INSTRUCTIONS	V
DELIVERY REPORT.....	X
SERIAL NUMBER LOCATIONS	IX
INGERSOLL RAND EXCAVATOR IDENTIFICATION	XI
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
UNDERCARRIAGE.....	30-01
UPPERSTRUCTURE & SWING SECTION	40-01
ELECTRICAL SYSTEM AND ANALYSIS	50-01
ENGINE SERVICE	60-01
HEATING, VENTILATION, AIR CONDITIONING	70-01
SPECIFICATIONS.....	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**UNDER-
CARRIAGE**

**UPPER-
STRUCTURE &
SWING SECTION**

**ELECTRICAL
SYSTEM AND
ANALYSIS**

**ENGINE
SERVICE**

HVAC

SPECIFICATIONS

 


FOREWORD


This manual is for the Ingersoll Rand Hydraulic Excavator mechanic. It provides necessary servicing and adjustment procedures for the hydraulic excavator and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the hydraulic excavator has had service or repair:


1. Check that the ROPS/TOPS/FOPS is in good condition and is NOT modified.

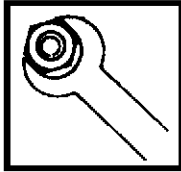

 2. Check that ROPS mounting hardware is tightened and is Ingersoll Rand approved.

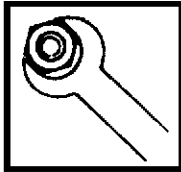

 3. The seat belt must be correctly installed, functional and in good condition.

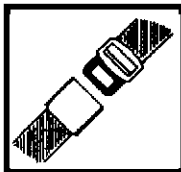


4. Inspect for loose or broken parts or connections.




5. Machine signs must be legible and in the correct location.



 
6. Steering levers, control levers and foot pedals must return to neutral. Check that foot pedals lock and control lever locks are in working order.

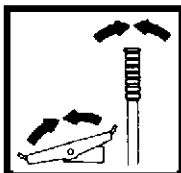

 
7. Inspect the air cleaner for damage or leaks. Check the condition of the element.

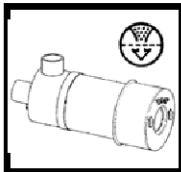

 
8. Check the electrical charging system.

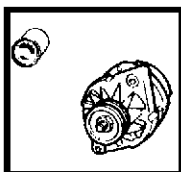

 9. Safety treads must be in good condition.

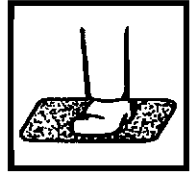

 
10. Check for correct function of indicator lamps (Optional on some models).

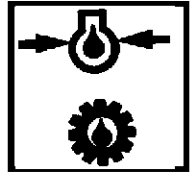

11. Check hydraulic fluid level, engine oil level and fuel supply.



 
12. Inspect for fuel, oil or hydraulic fluid leaks.

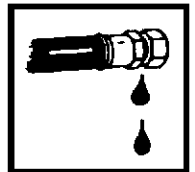

13. Lubricate the excavator.



 14. Check the condition of the battery and cables.

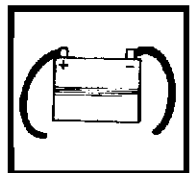

Recommend to the owner that all necessary corrections be made before the machine is returned to service.



**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.



Thank you very much
for your reading.
Please click here
to get more information.