


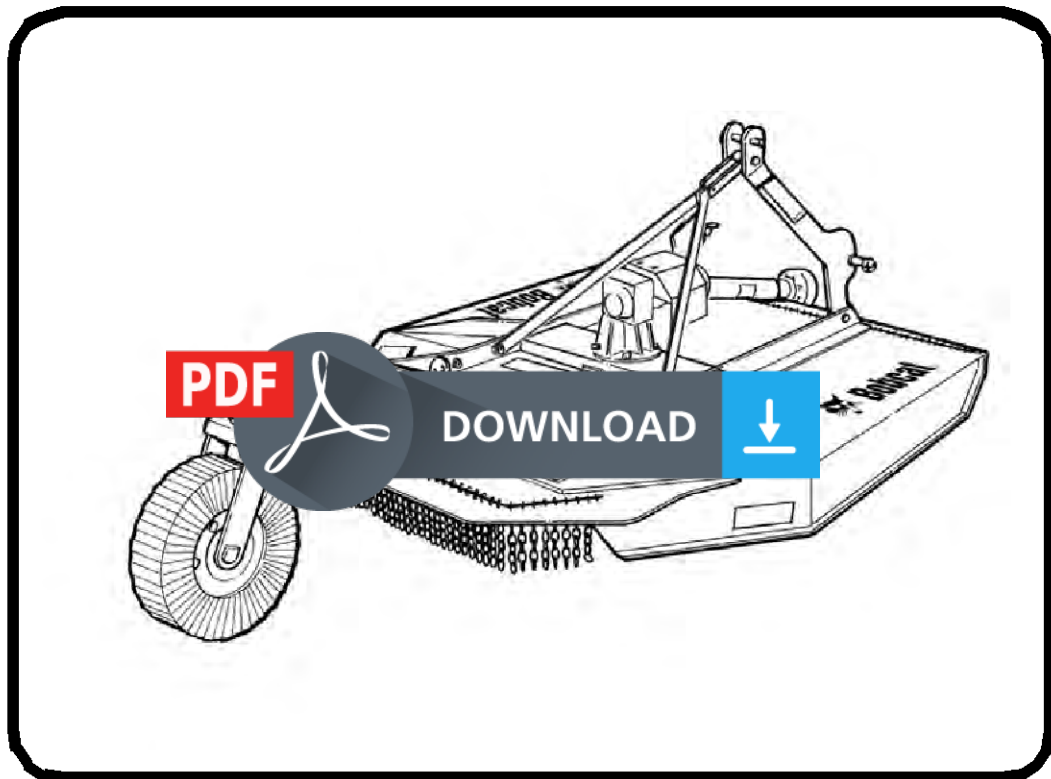

Bobcat®

Service Manual Three-Point Rotary Cutter

(3RC60) S/N A7RR00101 & Above
(3RC70) S/N A7RS00101 & Above



MAINTENANCE SAFETY




WARNING







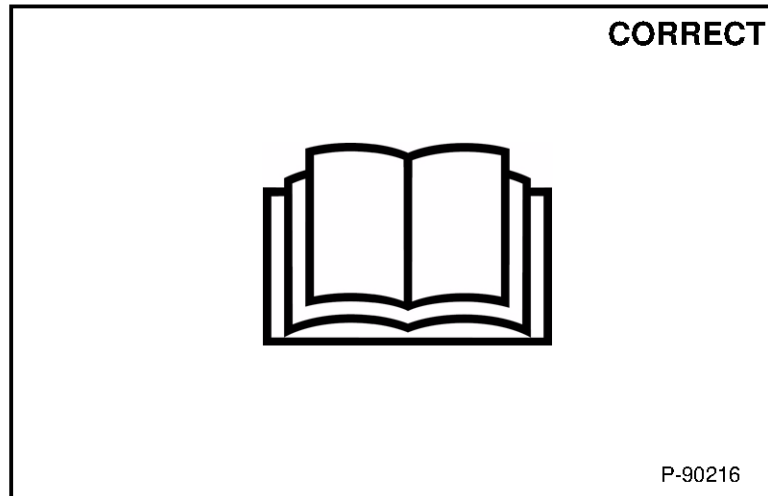

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



-  **Never service attachments / implements without instructions. See Operation & Maintenance Manual and Attachment / Implement Service Manual.**
-  **Cleaning and maintenance are required daily.**
-  **Never service or adjust attachment / implement with the engine running unless instructed to do so in manual.**
-  **Always lower the attachment / implement to the ground before lubricating or servicing.**
-  **Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.**
-  **Stop, cool and clean engine of flammable materials before checking fluids.**
-  **Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.**
-  **Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.**



Bobcat®

ALPHABETICAL INDEX

(3RC60, 3RC70) SPECIFICATIONS.....	SPEC-10-1
ATTACHMENT STORAGE AND RETURN TO SERVICE	10-60-1
CASTER WHEEL	20-20-1
CUTTING BLADES	20-10-1
DELIVERY REPORT.....	III
GEARBOX.....	20-40-1
IDENTIFICATION AND MACHINE SIGNS (DECALS)	IV
LUBRICATING THE ATTACHMENT.....	10-30-1
MANUAL STORAGE.....	III
PTO DRIVELINE.....	20-30-1
REGULAR MAINTENANCE ITEMS	10-70-1
REMOVAL AND INSTALLATION OF CHAIN GUARDS	10-40-1
REMOVAL AND INSTALLATION OF SHEAR BOLT (GRADE 2) ..	10-50-1
SERIAL NUMBER LOCATION	III
SERVICE SCHEDULE	10-20-1
TROUBLESHOOTING	10-10-1



Thank you very much
for your reading.
Please click here
to get more information.