

Brushcat™ Rotary Cutter

60 Inch
72 Inch
90 Inch



Bobcat®


Service Manual

60 Inch S/N 467002282 & Above
60 Inch S/N 467200101 & Above
60 Inch S/N A01900101 & Above
60 Inch HF S/N A01A00101 & Above
72 Inch S/N A00800101 & Above
72 Inch HF S/N A01B00101 & Above
72 Inch X S/N A01C00101 & Above
90 Inch S/N 467100101 & Above

PDF



DOWNLOAD

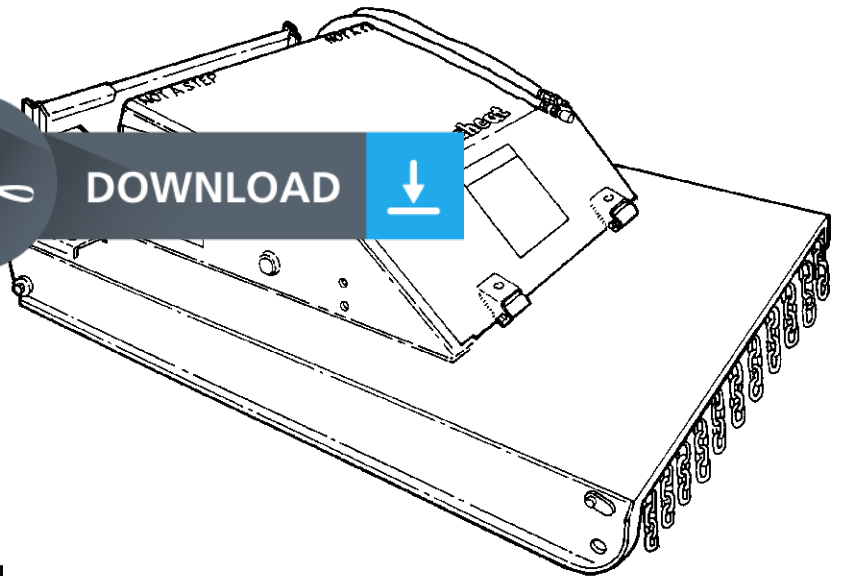

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

MAINTENANCE SAFETY




WARNING







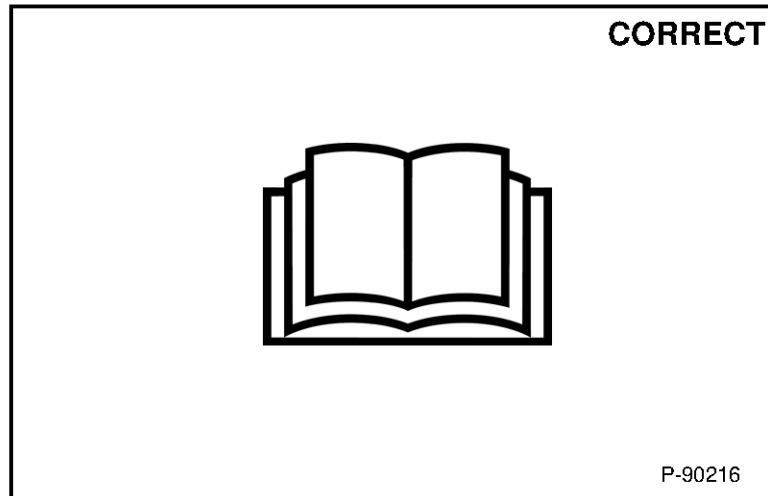

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



-  **Never service attachments / implements without instructions. See Operation & Maintenance Manual and Attachment / Implement Service Manual.**
-  **Cleaning and maintenance are required daily.**
-  **Never service or adjust attachment / implement with the engine running unless instructed to do so in manual.**
-  **Always lower the attachment / implement to the ground before lubricating or servicing.**
-  **Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.**
-  **Stop, cool and clean engine of flammable materials before checking fluids.**
-  **Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.**
-  **Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.**



Bobcat®

ALPHABETICAL INDEX

ADJUSTING THE COVER LATCH (S/N 467002282 & ABOVE, 467200101 & ABOVE AND 467100101 & ABOVE)	30-01
AUXILIARY HYDRAULIC PRESSURE GAUGE.....	20-01
BLADE	30-01
BRUSHCAT ROTARY CUTTER SERVICE.....	10-01
CHAIN SHIELD.....	30-01
GEARBOX 60 INCH (S/N 46702282 & ABOVE AND 467200101 & ABOVE)	30-01
GEARBOX 60 AND 72 INCH (S/N A01900101 & ABOVE, A01A00101 & ABOVE, A00800101 & ABOVE, A01B00101 & ABOVE AND A01C00101 & ABOVE)	30-01
GEARBOX 60 INCH (S/N 46702282 & ABOVE AND 467200101 & ABOVE)	30-01
GEARBOX 90 INCH	30-01
GLOSSARY OF HYDRAULIC SYMBOLS FOR ATTACHMENTS	SPEC-01
HYDRAULIC CONTROL VALVE (S/N 467200101 & ABOVE, 467002282 & ABOVE AND 467100101 & ABOVE).....	20-01
HYDRAULIC FLOW INFORMATION	20-01
HYDRAULIC MOTOR (S/N 467002282 & ABOVE, 467200101 & ABOVE AND 467100101 & ABOVE).....	20-01
HYDRAULIC SCHEMATIC	SPEC-01
INSPECTION	10-01
LUBRICATION	10-01
MOUNT (S/N 467002282 & ABOVE, 467200101 & ABOVE AND 467100101 & ABOVE).....	30-01
MOUNTING FRAME (S/N A01900101 & ABOVE, A00800101 & ABOVE, A00800101 & ABOVE, A01B00101 & ABOVE AND A01C00101 & ABOVE)	30-01
POWER TAKE OFF SHAFT	30-01
RELIEF VALVE (S/N 467200101 & ABOVE, 467002282 & ABOVE AND 467100101 & ABOVE).....	20-01
ROD (S/N 467002282 & ABOVE, 467200101 & ABOVE AND 467100101 & ABOVE).....	30-01
ROLLER.....	30-01
SPECIFICATIONS	SPEC-01
SPRING CYLINDER (S/N A00800101 & ABOVE, A01900101 & ABOVE, A01A00101 & ABOVE, A01B00101 & ABOVE AND A01C00101 & ABOVE).....	30-01
TROUBLESHOOTING.....	10-01



Thank you very much
for your reading.
Please click here
to get more information.