

NEW HOLLAND T6000 SERIES TRACTORS  
T6020 DELTA, T6030 DELTA,  
T6050 DELTA  
84207329-1 page 1  
12x12 TRANSMISSION, LESS CAB,  
WITH MECHANICAL ENGINE

SCHEMATIC FRAME INDEX

Starting	Frame 1-2
Engine	Frame 3-7
Transmission	Frame 8-11
Hydraulics	Frame 12-16
Loader	Frame 17
PTO	Frame 18
Turn Assist	Frame 19
Front Suspension	Frame 20
Brakes	Frame 21
CAN	Frame 22
Power Distribution	Frame 23-26
Battery Isolator	Frame 27
Power Distribution	Frame 28-30
Lighting	Frame 31-37
Power Outlets	Frame 38
Radio	Frame 39
Wash/Wipe	Frame 40-41
HVAC	Frame 42

COMPONENT LEGEND

Label Prefix	Component Type
A	Modules
B	Sensors
D	Diodes
E	Miscellaneous
F	Fuses
G	Charging
H	Lamp and Lights
K	Relays
M	Motors
MF	Maxi Fuse
PF	Power Fuse
R	Resistors
S	Switches
X	Power Sockets
Y	Solenoid Valves

WIRE REFERENCES

 
 
CM-1000-W/Y-1.0 WIRE GAUGE

GROUND LOCATIONS


- 1 CAB RH FRONT CONSOLE GROUND
- 2 CAB RH FRONT POST GROUND
- 3 CAB RH REAR POST GROUND
- 4 CAB RH REAR CONSOLE GROUND
- 5 BOOST STUB AT STARTER

CODE	HARNESS
AC	Air Conditioning
AS	Air Seat
FP	Foxed Diapl. Hyd. Pump
LF	Fender Left
ML	Mirror Left
MR	Mirror Right
RF	Fender Right


Color	Label	Description
Green	G	Ground, Chassis
Lilac	L	Key Battery Feed
Light Green	LG	
Light Brown	LN	
Brown	N	Unfused
Orange	O	

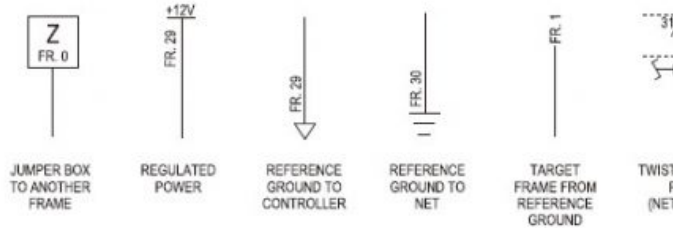

PROXIMITY OR SPEED SENSOR

 


FLUID LEVEL SENSOR

 


PRESSURE SENSOR



 
TEMPERATURE SENSOR



RANGE SWITCH

 

PRESSURE SWITCH

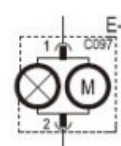 


ROTATING BEACON




LAMP



 
RELAY



BATTERY ISOLATOR SWITCH

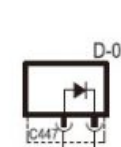 

DIODE

 

SWITCH WITH MOMENTARY CONTACT



FUSE



SWITCH

# NEW HOLLAND T6000 SERIES TRACTORS TRANSMISSION Manual

Instant download NEW HOLLAND T6000 SERIES TRACTORS TRANSMISSION Manual.MODELS COVERED IN MANUAL

NEW HOLLAND T6000 SERIES TRACTORS  
T6020 DELTA/T6030 DELTA/T6050 DELTA  
84207329

12<sup>◆◆</sup>12 TRANSMISSION,LESS CAB,  
WITH MECHANICAL ENGINE  
CHAPTERS COVERD IN MANUAL

\*H6830

\*-CONTENTS

\*-INTRODUCTION

\*-DISTRIBUTION SYSTEMS-A

\*-POWER PRODUCTION-B

\*-POWER TRAIN-C

\*-TRAVELLING-D

\*-FRAME POSITIONING-F

\*-TOOL POSITIONING-G

\*-CROP PROCESSING-KSPECIFICATION

File Format: PDF

Page: 36

Compatible: All Versions of Windows & Mac

Language: English

Requirements: Adobe PDF ReaderQ. Can I print out a page?

A. Yes you can print out a single page or the entire manual, its your choice.Q. Can I use this Manual on more than one computer?

A. Yes, this Manual can be used on as many computers as required.Q. Is this a trial or a limited version? A. No, this is the FULL Manual without any limitations or trial periods and can be used for life.Q. Will this Manual expire in 12 months or will I have to pay a renewal fee?

A. NO, Absolutely not! You can continue to use this Manual for life without the need to renew or pay any extra.Instant download means no shipping charges or waiting for paper or CD manuals to arrive at the mail. You will receive this manual by completing the payment via our secure payment processor immediately.We imply on the importance of choosing the apt service manual.You will surely enjoy browsing through the pages and learning how to keep your vehicle in order. It makes you up-to-date and more knowledge. We hope that our manual will be useful for you.Thanks for visiting!



Thank you very much  
for your reading.  
Please click here  
to get more information.