

2012 Doosan DX340LC Crawled Excavator Service Repair Workshop Manual



PDF



DOWNLOAD



DX340LC

Shop Manual

K1009684AE

Serial Number 5980 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Hydraulic Motor Part

Disassembly of Main Body of Motor Section

1. Place output side of hydraulic motor facing down and fix it.



Figure 31

2. Remove relief valve (35), decompression valve (351), and adjustment cover (352) from valve casing (303). Remove plug.



Figure 32



Figure 33

DX340LC

Shop Manual

K1009684E

Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.



Thank you very much
for your reading.
Please click here
to get more information.