



# Shop Manual DX380LC-5 Excavator

### Serial Number 10001 and Up

DOOSAN and the DOOSAN logo are registered trademarks of DOOSAN Corporation in the United States and various other countries around the world.



950106-01236E October 2014 5. Remove camshaft gear.

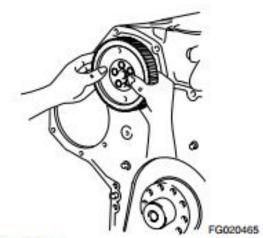


Figure 289

#### Installing the Camshaft Gear

- Install the intermediate gear as described in the work description Installing the intermediate gear on page -156.
- 2. Install the camshaft gear and tighten the screws.
- Install the flywheel housing according to the section 3. Installing the flywheel housing.
- 4. Install the flywheel according to the section Installing the flywheel.

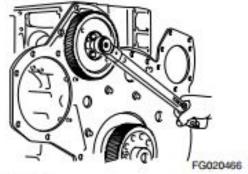


Figure 290

#### Removing the Crankshaft Gear

- Turn the crankshaft so cylinder number 1 is close to TDC. Use tool 99 309 and a locking bar on the flywheel starter gear.
- Remove flywheel according to the work description removing the flywheel.
- 3. Remove flywheel housing according to the work description removing the flywheel housing.
- 4. Remove intermediate gear.


## 99 309 FG020456 Figure291

#### IMPORTANT

After removing the intermediate gear, neither the camshaft nor the crankshaft must be rotated. This can cause pistons and valves to collide and be damaged.

#### Installing the Oil Cooler

- Clean the gasket faces on the cylinder block and oil cooler cover.
- 2. Install the oil cooler cover (1) with a new gasket.
- Install the lower coolant hose (2). 3.
- 4. Install the oil filter housing (3) with a new gasket and new oil filter.

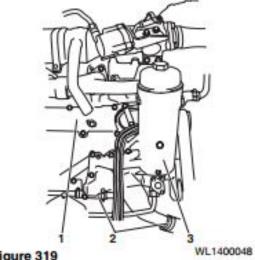

- Figure 319

- Install the clamp of the turbocharger cable harness (4). 5.
- Install the oil pressure sensor (5) and the coolant 6. temperature sensor (6).
- Install the hose and coolant pipe (7) on the water-cooled 7. EGR cooler.
- 8. Install the turbocharger.
- 9. Fill and bleed the cooling system.

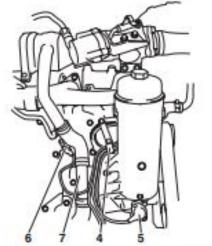


Figure 320

WL1400049



Thank you very much for your reading.

Please click here to get more information.