

BMW K1200RS Motorcycle Service Repair Workshop Manual














Repair Manual




K 1200RS

**BMW AG Motorcycle Division
After Sales**

Contents

Group	Chapter	Page	
00	Maintenance and General Information	00.1	
11	Engine	11.1	
12	Engine electrical system	12.1	
13	Fuel preparation and control	13.1	
16	Fuel tank and lines.....	16.1	
17	Cooling	17.1	
18	Exhaust system	18.1	
21	Clutch.....	21.1	
23	Gearbox.....	23.1	
31	Front fork	31.1	
32	Steering	32.1	

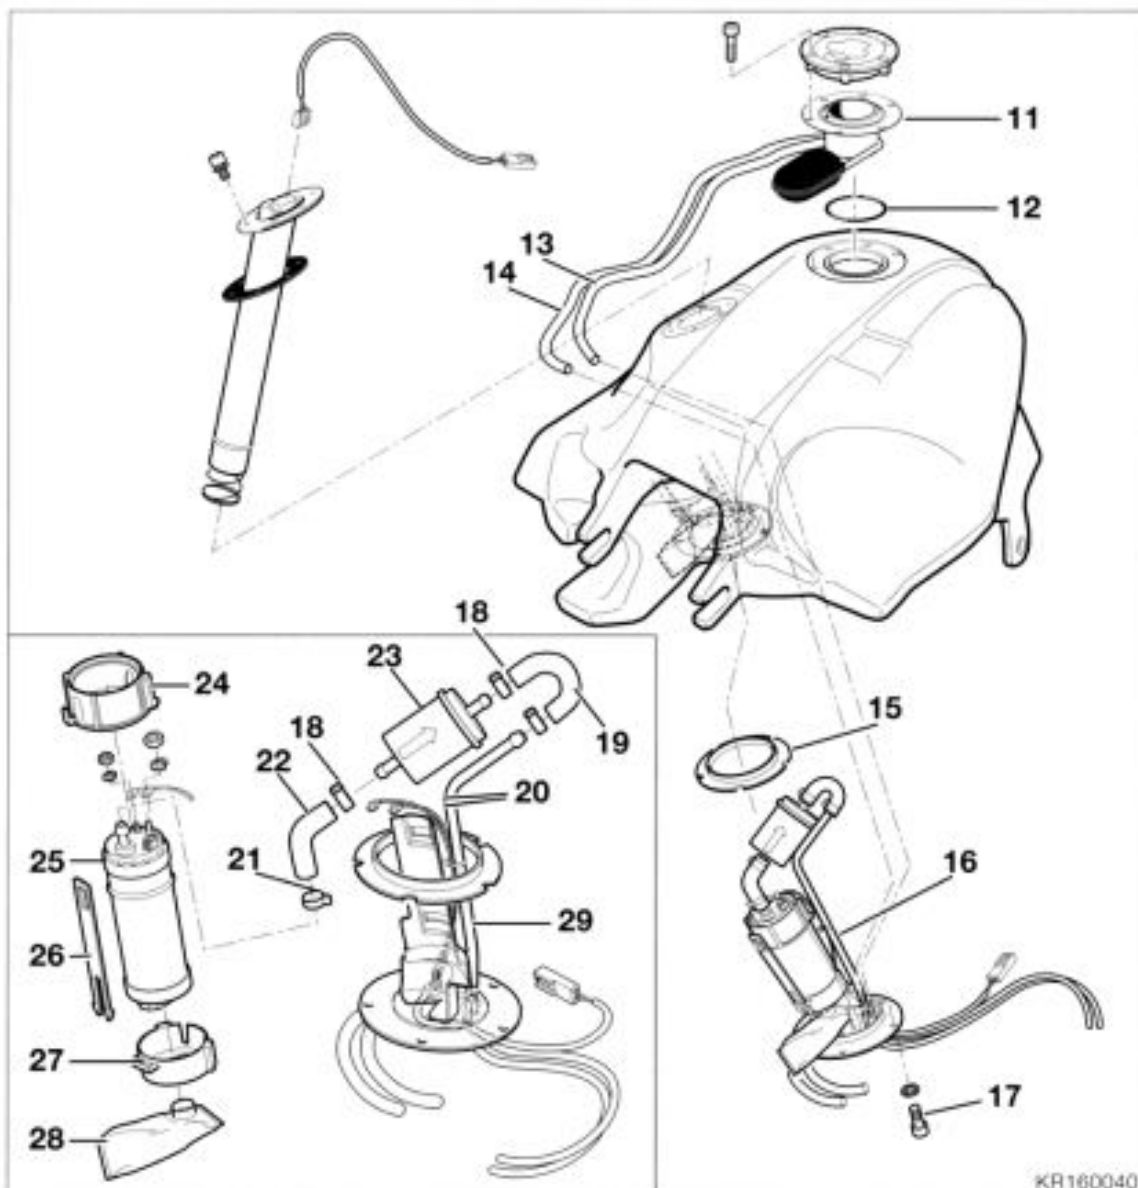

Renewing fuel filter (every 40,000 km/24,000 miles)

(Inspection III)



Note:

If the fuel is of poor quality, renew the fuel filter every 20,000 km/12,000 miles.

- Remove fuel tank. (→ 16.5)



Warning:

Comply with safety precautions when handling or working with fuel.

- Drain fuel tank.

Removing the fuel pump unit

- Take out screws (17).
- Pull fuel pump unit (16) far enough out of the fuel tank to enable the clips on drain hose (13) and vent hose (14) to be undone with pliers.
- Pull off the hoses.
- Remove fuel pump unit (16) completely, with gasket (15).

KR160040



Thank you very much
for your reading.
Please click here
to get more information.