



PDF



DOWNLOAD



# Repair Manual



R 1100 S

**BMW AG Motorcycle Division**  
**After Sales**

# Contents

## Group / Chapter

**00 Maintenance and general instructions**



**11 Engine**



**12 Engine electrics**



**13 Fuel preparation and control**



**16 Fuel tank and lines**



**18 Exhaust system**



**21 Clutch**



**23 Gearbox**



**31 Front fork**



**32 Steering**



**33 Rear wheel drive**



## Checking clutch fluid level



### Caution:

Keep the brake fluid in the clutch operating system away from painted surfaces on the motorcycle because brake fluid attacks paint.

- Motorcycle upright; if necessary, use stand, **BMW No. 00 1 560**, to hold the motorcycle upright.
- Turn the handlebar fully to the right.



- Check clutch fluid level.

**Required level with a new clutch liner:** .....  
.....Half way up sight glass

## Checking brake fluid level



### Caution:

Do not allow brake fluid to come into contact with painted parts of the motorcycle, because brake fluid attacks paint.

### Rear brake

- Motorcycle upright; if necessary, use stand, **BMW No. 00 1 560**, to hold the motorcycle upright.




- Check the brake fluid level by looking through the opening in the right-hand side panel.

**Required level:**..... MAX

### Front brake

- Motorcycle upright; if necessary, use stand, **BMW No. 00 1 560**, to hold the motorcycle upright.
- Handlebar centred.

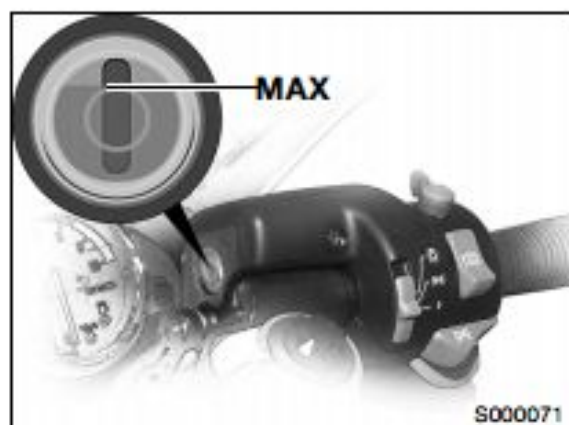

**Required level:**..... MAX





Thank you very much  
for your reading.  
Please click here  
to get more information.