

KOMATSU PC400-6,PC400LC-6,PC450-6,PC450LC-6 Hydraulic Excavator Service Repair Workshop Manual



SHOP MANUAL

KOMATSU


PC400, 400LC-6 PC450, 450LC-6

| MACHINE MODEL | SERIAL NUMBER |
|------------------|---------------------|
| PC400-6 | 32001 and up |
| PC400LC-6 | 32001 and up |
| PC450-6 | 12001 and up |
| PC450LC-6 | 12001 and up |

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- PC400, 450-6 mount the SA6D125-2 engine.
For details of the engine, see the 125-2 Series Engine Shop Manual.


TABLE OF CONTENTS

| | Page |
|--|--|
| INSPECTION AND MAINTENANCE | |
| Running-in period | 4-1 |
| Inspection and maintenance chart | 4-3 |
| Lubricant, fuel and coolant specifications; refill capacities | 4-4 |
| Lubricants: Engine oils, hydraulic oils, gear oils..... | 4-5 |
| Diesel fuels..... | 4-6 |
| Cooling system protection | 4-7 |
| Description of the inspection and maintenance operations | |
| Engine | Oil level 4-8 |
| | Oil change; Oil filter element; Crankcase breather .. 4-11 |
| | Valve clearance; Fuel injectors..... 4-12 |
| | Drive belt tension..... 4-16 |
| Fuel system | Fuel tank 4-19 |
| | Water separator 4-20 |
| | Fuel filter 4-23 |
| | Priming the fuel system 4-24 |
| Cooling system | Coolant level 4-28 |
| | Changing the coolant 4-31 |
| | Cleaning the radiator..... 4-31 |
| Air cleaner | Main filter element 4-32 |
| | Safety element 4-39 |
| Battery | Electrolyte level and state of charge..... 4-40 |
| Front axle | Oil level; Oil change..... 4-43 |
| Rear axle | Oil level; Oil change..... 4-44 |
| Transfer gear | Oil level; Oil change..... 4-47 |
| Service brake | Oil level 4-51 |
| | Changing the oil; Bleeding 4-52 |
| | Brake disc wear 4-55 |
| Parking brake | Adjusting 4-59 |
| Hydraulic system | Oil level; Adding oil; Pressurizing the oil tank 4-60 |
| | Oil change..... 4-63 |
| | Filter elements 4-64 |
| Lubricating the machine | Articulation joint, steering cylinder; Door hinges 4-67 |
| | Universal shafts 4-68 |
| Lubricating the equipment | Loader arms; Bucket cylinder; Tilt lever; |
| | Tilt link; Lift cylinder; Quick-attach coupler 4-71 |
| System pressures | Checking..... 4-72 |

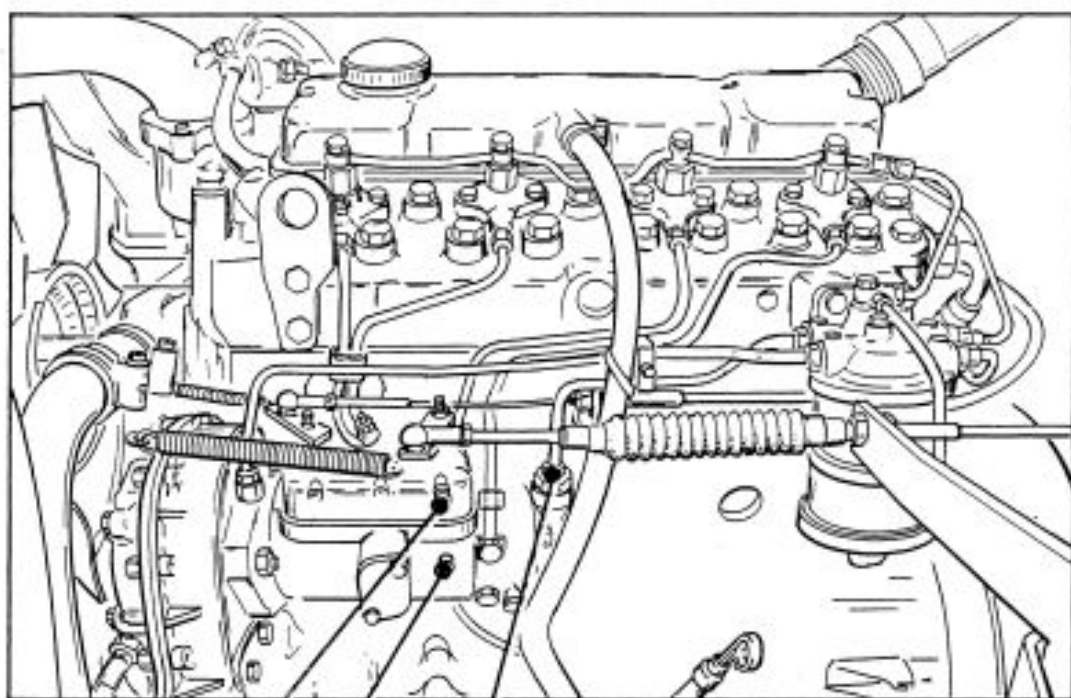

1 2 3

R 523

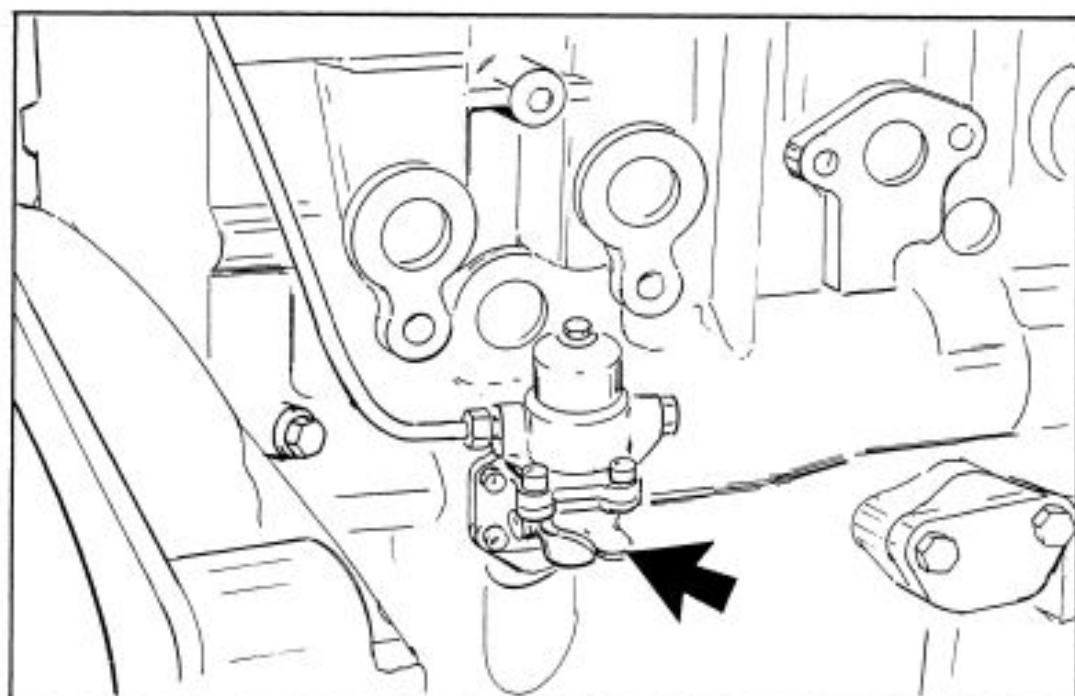

R 524



Thank you very much
for your reading.
Please click here
to get more information.