

# KOMATSU WA250-5H,WA250PT-5H Wheel Loader Service Repair Workshop Manual



# SHOP MANUAL

## **KOMATSU** **WA250-5H** **WA250PT-5H**

MACHINE MODEL

SERIAL NUMBER

**WA250-5H**  
**WA250PT-5H**

**WA250H50051 and up**  
**WA250H60051 and up**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- WA250-5H, WA250PT-5H mounts the SAA6D102E-2-A engine. For details of the engine, see the 102 Series Engine Shop Manual.

## CONTENTS

	No. of page
01 GENERAL .....	01-1
10 STRUCTURE, FUNCTION AND MAINTENANCE STANDARD .....	10-1
20 TESTING AND ADJUSTMENT .....	20-1
30 DISASSEMBLY AND ASSEMBLY .....	30-1
90 OTHERS .....	90-1


8. Disconnect hoses (9) and (10) from the accumulator for PPC.



12. Disconnect front drive shaft (15) from the transfer side. [\*1]



9. Remove air conditioner hose bracket (11).

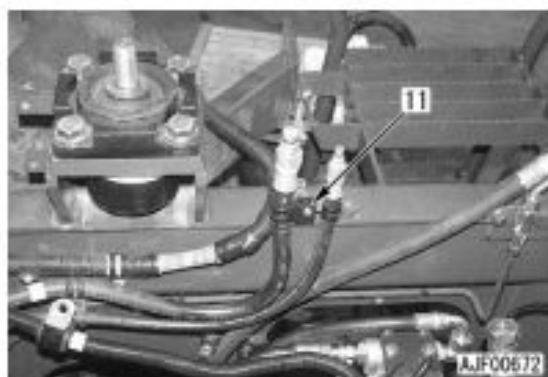

13. Remove rear drive shaft (16). [\*2]



10. Disconnect 2 hydraulic oil cooler hose clamps (12) and motor 2 drain hose clamp (13) from the right inside of the frame.

11. Disconnect wiring connector T09 (14).



14. Sling the transfer assembly temporarily and remove 2 transfer cushions (17) on both sides, and then remove 2 transfer mounting bolts (18) on both sides. [\*3]

★ After removing the right cushion, remove accumulator bracket assembly (19).





Thank you very much  
for your reading.  
Please click here  
to get more information.