

840, 940, 1040 and 1140 Tractors



TECHNICAL MANUAL 840, 940, 1040 and 1140 Tractors

TM4353 (01JUN82) English



John Deere Werke Mannheim
John Deere Ibérica S.A. Getafe
TM4353 (01JUN82)

LITHO IN U.S.A. (REVISED)
ENGLISH



840, 940, 1040 and 1140 Tractors
Technical Manual
TM-4353

CONTENTS

SECTION 10 – GENERAL

- Group 00 – Specifications and special tools
- Group 05 – Pre-delivery, delivery and after-sale inspections
- Group 10 – Lubrication and periodic service
- Group 15 – Engine and tractor tune-up
- Group 20 – Tractor separation

SECTION 20 – ENGINE

- Group 00 – Specifications and special tools
- Group 05 – Description, diagnosing malfunctions
- Group 10 – Cylinder head, valves and camshaft
- Group 15 – Cylinder block, liners, pistons and connecting rods
- Group 20 – Crankshaft, main bearings and flywheel
- Group 25 – Timing gear train
- Group 30 – Lubrication system
- Group 35 – Cooling system

SECTION 30 – FUEL AND AIR INTAKE SYSTEM

- Group 00 – Specifications and special tools
- Group 05 – General information, diagnosing malfunctions
- Group 10 – Fuel tank, water trap, fuel transfer pumps and fuel filter
- Group 15 – Roto Diesel fuel injection pump
- Group 20 – Fuel injection nozzles
- Group 25 – Cold weather starting aids
- Group 30 – Speed control linkage
- Group 35 – Air cleaner

SECTION 40 – ELECTRICAL SYSTEM

- Group 00 – Specifications and special tools
- Group 05 – Description and diagnosing malfunctions
- Group 10 – Wiring harnesses
- Group 15 – Controls and instruments
- Group 20 – Lighting systems
- Group 25 – Wiring diagrams
- Group 30 – Starting motor
- Group 35 – Alternator

SECTION 50 – POWER TRAIN

- Group 00 – Specifications and special tools
- Group 05 – Description, operation and lubricating system
- Group 10 – Clutch operating linkage
- Group 15 – Engine clutches
- Group 20 – Hi-Lo shift unit
- Group 25 – Creeper transmission
- Group 30 – Transmission shift linkage
- Group 35 – Synchronized transmission and transmission oil pump
- Group 40 – Collar shift transmission and transmission oil pump
- Group 45 – Differential
- Group 50 – Final drives
- Group 55 – Independent PTO
- Group 60 – Continuous-running PTO
- Group 65 – Mechanical front wheel drive

Copyright © by
DEERE & COMPANY
European Office
D 68 Mannheim
All rights reserved

CONTENTS (Contd.)**SECTION 60 – STEERING SYSTEM AND BRAKES**

- Group 00 – Specifications and special tools
- Group 05 – Power steering
- Group 10 – Manual steering
- Group 15 – Brakes

SECTION 70 – HYDRAULIC SYSTEM

- Group 00 – Specifications and special tools
- Group 05 – Description, diagnosing malfunctions and pressure tests
- Group 10 – Oil reservoir, filter, valves and oil cooler
- Group 15 – Hydraulic pumps
- Group 20 – Rockshaft
- Group 25 – Selective control valves (spool type)
- Group 30 – Selective control valves (poppet valve type)
- Group 35 – Hose couplers
- Group 40 – Remote cylinder

SECTION 80 – MISCELLANEOUS

- Group 00 – Specifications and special tools
- Group 05 – Front axle
- Group 10 – Belt pulley
- Group 15 – Front and rear wheels
- Group 20 – Axla trailer hitch

SECTION 90 – OPERATOR'S CAB

- Group 00 – Specifications and special tools
- Group 05 – Cab ventilation and heating
- Group 10 – Operator's seats
- Group 15 – Operator's cab
- Group 20 – Roll guard

Section 10 General

CONTENTS OF THIS SECTION

GROUP 00 – SPECIFICATIONS AND SPECIAL TOOLS

	Page
Specifications	00-3
Serial numbers	00-3
Model numbers	00-3
Engine	00-3
Engine clutch	00-4
Cooling system	00-5
Fuel system	00-5
Electrical system	00-5
Synchronized transmission	00-5
Collar shift transmission	00-5
Hi-Lo shift unit	00-6
Creeper transmission	00-6
Differential and final drives	00-6
Differential lock	00-6
PTO	00-6
Mechanical front wheel drive	00-7
Power steering	00-7
Manual steering	00-7
Foot brakes	00-7
Handbrake	00-7
Hydraulic system	00-8
Capacities	00-8
Travel speeds	00-9
Front and rear wheels	00-9
Dimensions and weights	00-9
Predelivery, delivery and after-sales inspections	00-10
Lubrication and service	00-11
Tune-up	00-12
Tractor separation	00-13
Standard torques	00-14
Special tools	00-16

GROUP 05 – PREDELIVERY, DELIVERY AND AFTER-SALES INSPECTIONS

	Page
Tractor storage	05-1
Predelivery inspection	05-2
Delivery inspection	05-9
After-sales inspection	05-10

GROUP 10 – LUBRICATION AND SERVICE

Lubrication and service	10-1
-----------------------------------	------

GROUP 15 – TUNE-UP

Preliminary engine testing	15-1
Dynamometer test	15-1
Testing compression pressure	15-2
Tune-up	15-3
Checking tractor operation	15-8
Standard torques	15-9

GROUP 20 – TRACTOR SEPARATION

Separating between engine and tractor front end	20-1
Removal and installation of engine	20-5
Removal and installation of clutch housing	20-8
Removal and installation of final drives	20-11
Removal and installation of rockshaft	20-13
Removal and installation of operator's cab	20-15



Thank you very much
for your reading.
Please click here
to get more information.