


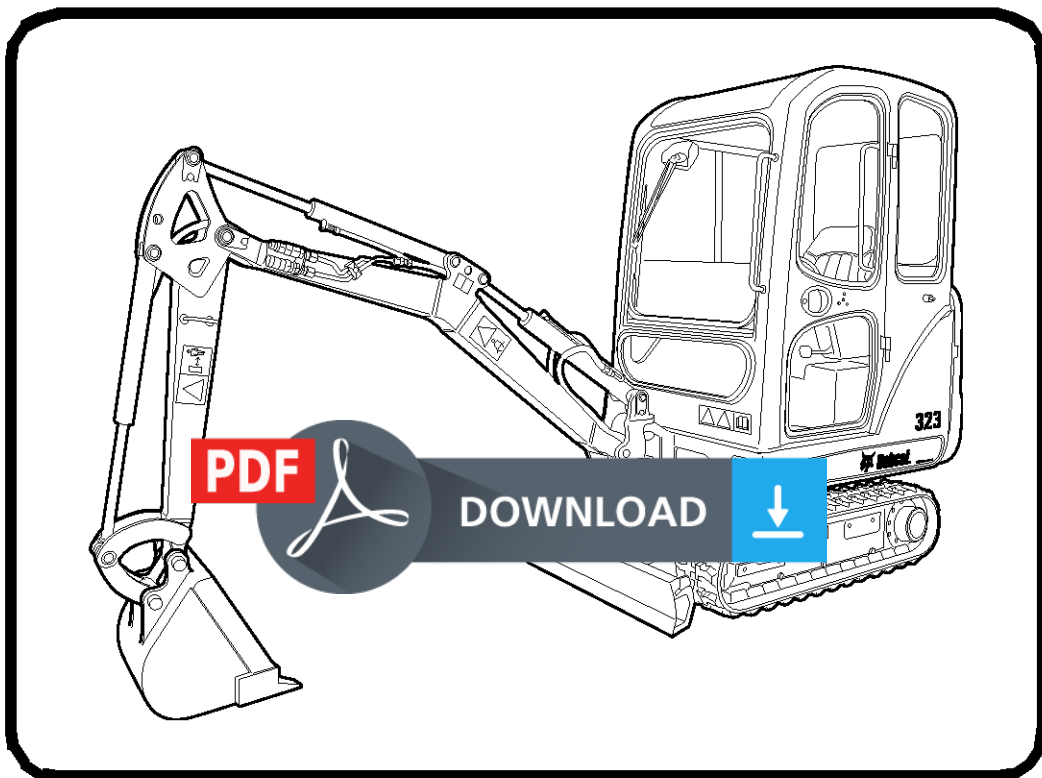

Bobcat®

Service Manual 321-323 Compact Excavator

321 - S/N A76511001 & Above
323 - S/N A01711001 & Above



Bobcat®

Printed in Belgium



MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

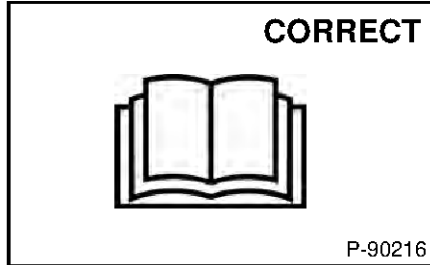


P-90216

 - ⚠ Never service the Bobcat Excavator without instructions.

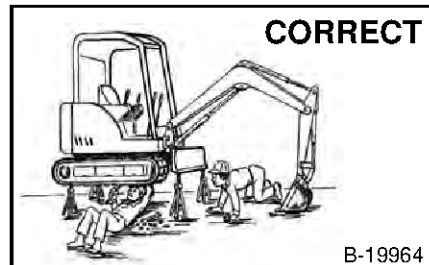


B-19964

 - ⚠ Use the correct procedure to lift and support the excavator.

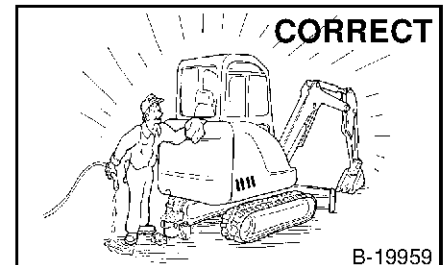


B-19959

 - ⚠ Cleaning and maintenance are required daily.

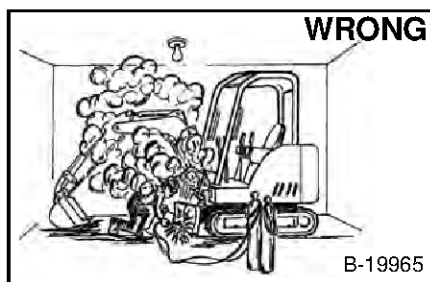


B-19965

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

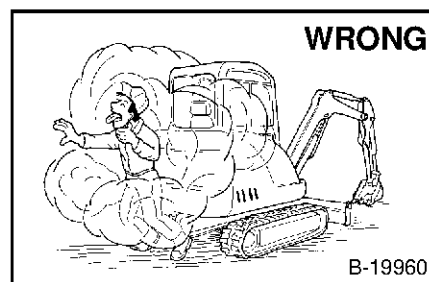


B-19960

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

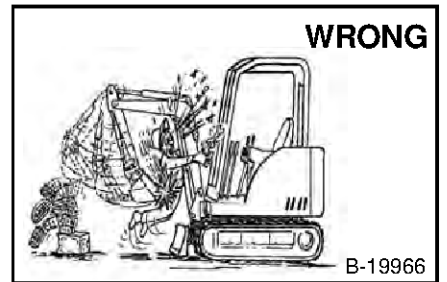


B-19966

 - ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

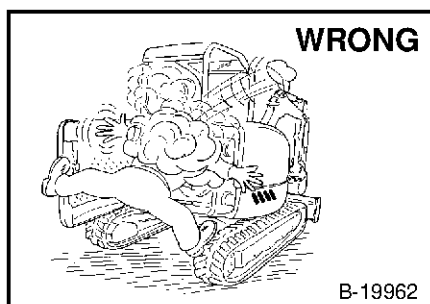


B-19962

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking, or when near open flame.

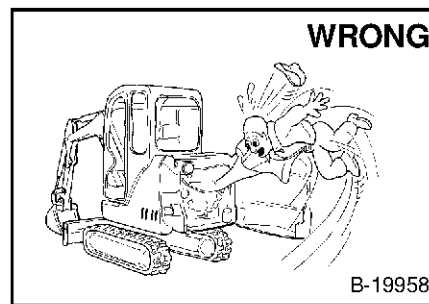

B-19958

 - ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.
- ⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

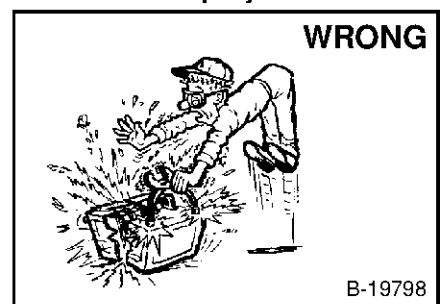

B-19798

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact.
- ⚠ Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW28-0409



Bobcat®

ALPHABETICAL INDEX

ACCUMULATORS.....	20-01	LIFTING AND BLOCKING THE EXCAVATOR.....	10-01
AIR CLEANER.....	60-01	LIFTING THE EXCAVATOR.....	10-01
AIRCLEANER SERVICE.....	10-01	LIGHTS.....	50-01
ALTERNATOR.....	50-01	LUBRICATION OF THE HYD. EXCAVATOR.....	10-01
ALTERNATOR BELT.....	10-01		
ARM.....	40-01	MAIN RELIEF VALVE.....	20-01
ARM CYLINDER.....	20-01	MANIFOLD ASSEMBLY / ACCUMULATOR.....	20-01
		MICROSWITCH.....	50-01
BATTERY.....	50-01		
BLADE.....	30-01	OIL COOLER.....	20-01
BLADE CONTROL.....	40-01	OPERATOR CAB (ROPS / TOPS).....	10-01
BLADE CYLINDER.....	20-01		
BLADE / TRACK EXPANSION SOLENOID BLOCK.....	20-01	PORT RELIEF VALVES.....	20-01
BOOM.....	40-01	PRESSURE REDUCING VALVE.....	20-01
BOOM CYLINDER.....	20-01		
BOOM SWING CYLINDER.....	20-01	RADIATOR.....	60-01
BUCKET.....	40-01	RECONDITIONING THE ENGINE.....	60-01
BUCKET CYLINDER.....	20-01	REGULATOR MAINTENANCE.....	70-01
		RIGHT CONSOLE.....	40-01
CAB.....	40-01	RIGHT CONTROL LEVER (JOYSTICK).....	20-01
CAB FILTER.....	10-01	RIGHT PEDAL.....	40-01
CONTROL CONSOLE LOCKOUTS.....	10-01	ROPS CANOPY.....	40-01
CONTROL LINKAGE ASSEMBLY.....	40-01		
CONVERSIONS.....	SPEC-01	SEAT AND SEAT MOUNT.....	40-01
CROSSPORT RELIEF VALVES.....	20-01	SEAT BELT.....	10-01
		SERVICE SCHEDULE.....	10-01
DE-AERATION.....	10-01	SLEW LOCK VALVE.....	20-160
		SPARK ARRESTOR MUFFLER.....	10-01 & 60-01
ELECTRICAL SYSTEM INFORMATION.....	50-01	SPECIFICATIONS 321 EXCAVATOR.....	SPEC-01
ENGINE.....	60-01	SPECIFICATIONS 323 EXCAVATOR.....	SPEC-01
ENGINE COMPONENTS AND TESTING.....	60-01	STARTER.....	50-01
ENGINE COOLING SYSTEM.....	10-01	SWING CIRCLE GEAR.....	30-01
ENGINE FLYWHEEL.....	60-01	SWING FRAME.....	40-01
ENGINE LUBRICATION SYSTEM.....	10-01	SWING MOTOR.....	20-01
ENGINE SPEED CONTROL.....	40-01	SWIVEL JOINT.....	20-01
FLOORMAT AND FLOORPLATES.....	40-01	TAILGATE.....	10-01 & 40-01
FLYWHEEL AND HOUSING.....	60-01	TORQUE SPECIFICATIONS FOR BOLTS.....	SPEC-01
FUEL LEVEL SENDER.....	50-01	TRACK DAMAGE IDENTIFICATION.....	30-01
FUEL SYSTEM.....	10-01	TRACK FRAME.....	30-01
FUEL TANK.....	40-01	TRACK IDLER.....	30-01
		TRACK FRAME EXPANSION CYLINDER.....	20-01
HEATER COIL.....	70-01	TRACK ROLLER.....	30-01
HEATER FAN.....	70-01	TRACKS.....	30-01
HEATER SYSTEM.....	70-01	TRANSPORTING THE EXCAVATOR.....	10-01
HEATER UNIT.....	70-01	TRAVEL CONTROLS.....	40-01
HEATER VALVE.....	70-01	TRAVEL MOTOR.....	10-01 & 20-01
HORN.....	40-01	TROUBLESHOOTING.....	60-01
HYDRAULIC CONNECTION SPECIFICATIONS.....	SPEC-01	TWO-SPEED BOOST SWITCH.....	50-01
HYDRAULIC CONTROL VALVE.....	20-01		
HYDRAULIC FILTER MOUNT.....	20-01	UPPERSTRUCTURE.....	40-01
HYDRAULIC FLUID SPECIFICATIONS.....	SPEC-01	UPPERSTRUCTURE SLEW LOCK.....	10-01 & 40-01
HYDRAULIC PUMP.....	20-01		
HYDRAULIC RESERVOIR.....	20-01		
HYDRAULIC SYSTEM.....	10-01		
HYDRAULIC SYSTEM INFORMATION.....	20-01		
LEFT CONSOLE.....	40-01		
LEFT CONTROL LEVER (JOYSTICK).....	20-01		
LEFT PEDAL.....	40-01		



Thank you very much
for your reading.
Please click here
to get more information.