

442



Bobcat®

 
Service Manual

**S/N 522311001 & Above
S/N 528911001 & Above
S/N 528611001 & Above**

PDF



DOWNLOAD

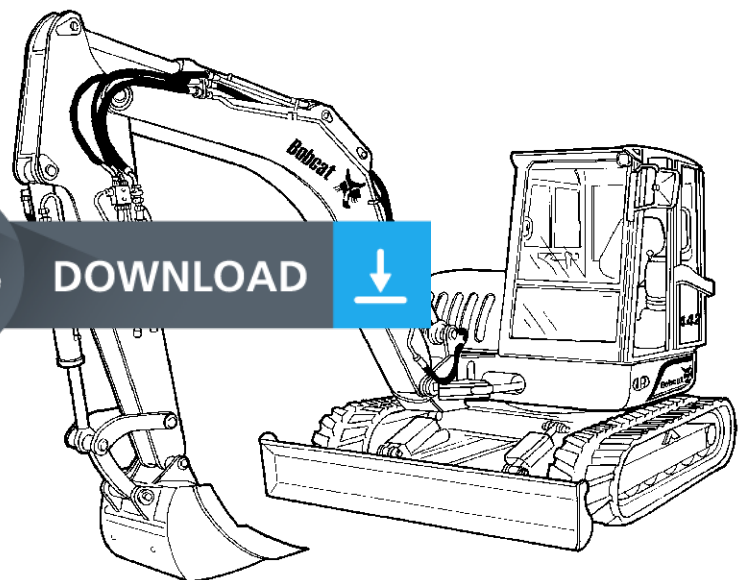

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

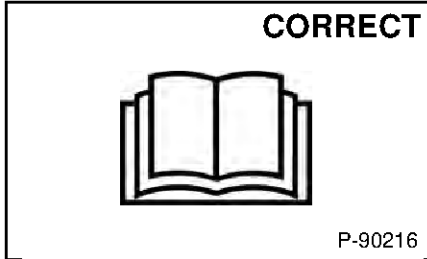


B-90216

 - ⚠ Never service the Bobcat Hydraulic Excavator without instructions.

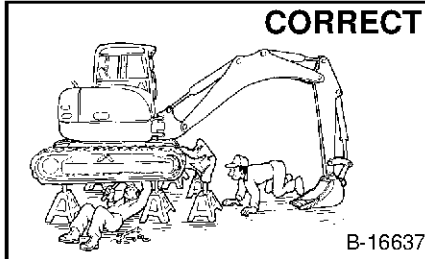


B-16637

 - ⚠ Use the correct procedure to lift and support the excavator.
- ⚠ Always lift the blade fully before installing jackstands.

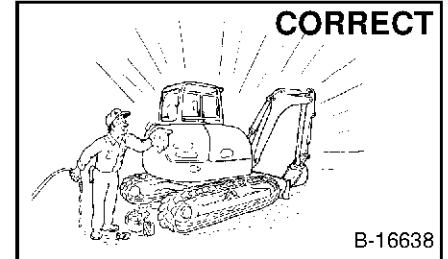


B-16638

 - ⚠ Cleaning and maintenance are required daily.

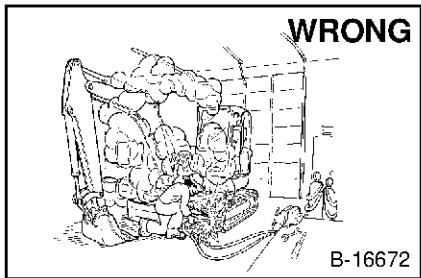


B-16672

 - ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

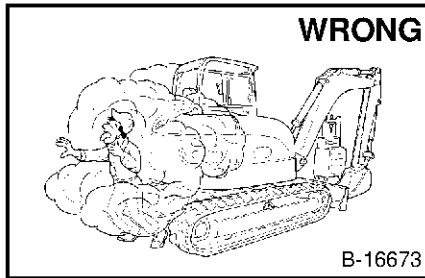


B-16673

 - ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.

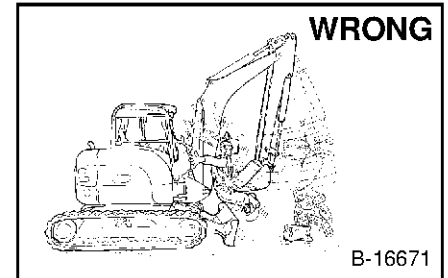


B-16671

 - ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

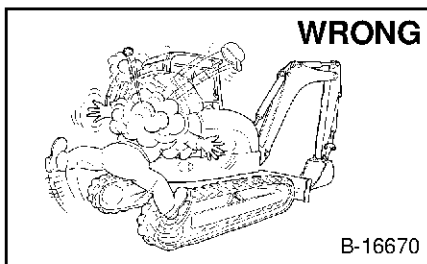


B-16670

 - ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

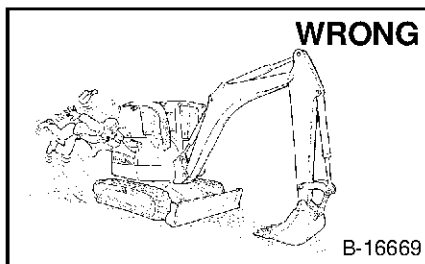

B-16669

 - ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

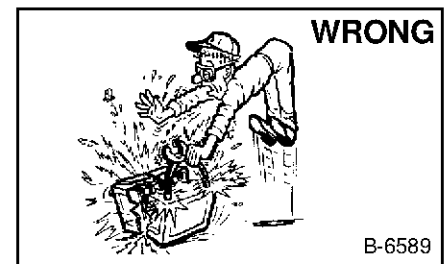

B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

ACCUMULATOR.....	20-01	FAN/FUEL PUMP BELT	10-01
AIR CLEANER	10-01, 60-01	FLOORMAT	40-01
AIR CONDITIONING COMPRESSOR BELT	10-01	FLYWHEEL.....	60-01
AIR CONDITIONING SERVICE.....	70-01	FRESH AIR FILTER	10-01
AIR CONDITIONING SYSTEM FLOW	70-01	FRONT CAB LIGHT	50-01
ALTERNATOR	50-01	FUEL COOLANT AND LUBRICANTS.....	SPEC-01
ALTERNATOR BELT	10-01	FUEL LEVEL SENDER	50-01
ARM	40-01	FUEL SYSTEM.....	10-01
ARM CYLINDER.....	20-01	FUEL TANK	40-01
AUXILIARY HYDRAULIC FLOW CONTROL/ HYDRAULIC BREAKER APPLICATION VALVE.....	20-01	GENERAL AIR CONDITIONING SERVICE GUIDELINES	70-01
AUXILIARY HYDRAULIC FLOW CONTROL VALVE	20-01	GREASE CYLINDER	30-01
AUXILIARY HYDRAULICS SELECTOR VALVE.....	20-01	HEATER/AC FAN	70-01
BASIC TROUBLESHOOTING	70-01	HEATER COIL/EVAPORATOR.....	70-01
BATTERY.....	50-01	HEATER VALVE	70-01
BATTERY DISCONNECT SWITCH.....	50-01	HORN.....	40-01
BLADE	30-01	HYDRAULIC BREAKER APPLICATION VALVE	20-01
BLADE CYLINDER.....	20-01	HYDRAULIC EXCAVATOR SPECIFICATIONS. SPEC-01	
BLADE FLOAT VALVE.....	20-01	HYDRAULIC FILTER MOUNT.....	20-01
BLADE VALVE	20-01	HYDRAULIC FLUID SPECIFICATIONS.....	SPEC-01
BOOM	40-01	HYDRAULIC GEAR PUMP	20-01
BOOM CYLINDER.....	20-01	HYDRAULIC PISTON PUMP	20-01
BOOM LOAD HOLDING VALVE.....	20-01	HYDRAULIC PISTON PUMP DRIVE COUPLER.....	20-01
BOOM OFFSET CYLINDER.....	20-01	HYDRAULIC RESERVOIR.....	20-01
BOOM OFFSET VALVE.....	20-01	HYDRAULIC SYSTEM	10-01
BUCKET	40-01	HYDRAULIC SYSTEM INFORMATION	20-01
BUCKET CYLINDER	20-01	INSTRUMENT PANEL.....	50-01
CAB.....	40-01	JOYSTICK CONTROL PATTERN SELECTOR VALVE.....	20-01
CAB TILT PROCEDURE.....	10-01	JOYSTICK LOCKOUT/TWO SPEED VALVE	20-01
COMPONENTS	70-01	LEFT CONSOLE	40-01
COMPRESSOR	70-01	LEFT CONTROL LEVER (JOYSTICK)	20-01
CONDENSER	70-01	LIFTING AND BLOCKING THE EXCAVATOR	10-01
CONTROL LEVERS	40-01	LIFTING THE EXCAVATOR	10-01
CONVERSIONS	SPEC-01	LOWER TRACK ROLLER.....	30-01
COOLING SYSTEM.....	10-01	LUBRICATION OF THE EXCAVATOR	10-01
COUNTER WEIGHT	40-01	MUFFLER.....	60-01
DUMP VALVE	20-01	OIL COOLER.....	20-01
ELECTRICAL SYSTEM INFORMATION	50-01	OIL TEMPERATURE REGULATOR.....	20-01
ENGINE	60-01	OPERATOR CAB	10-01
ENGINE BOLT TORQUE.....	SPEC-01	PORT RELIEF VALVES.....	20-01
ENGINE COMPONENTS AND TESTING	60-01	PRESSURE REDUCING VALVE.....	20-01
ENGINE LUBRICATION SYSTEM.....	10-01	PRESSURE SWITCH.....	70-01
ENGINE SPECIFICATIONS.....	SPEC-01		
ENGINE SPEED CONTROL	40-01		
EVAPORATOR/HEATER UNIT	70-01		
EXCAVATOR BOLT TORQUE	SPEC-01		
EXPANSION VALVE	70-01		



Thank you very much
for your reading.
Please click here
to get more information.