

Compact Utility Tractors 4520, 4720 (With Cab) Diagnostic and Repair



TECHNICAL MANUAL

Compact Utility models 4520 (SN. 650001-), 4720 (SN. 650001-)

TM105419 14 APR 15 (ENGLISH)

For complete service information also see:

POWERTECH 2.4 L & 3.0 L Diesel Engines

CTM301



John Deere Agriculture
Printed by Belgreen



Table of contents

FOREWORD

Section 10 - SAFETY

Group 05 - Safety

Section 20 - SPECIFICATIONS AND INFORMATION

Group 05 - General Specifications

Group 10 - Fuel and Lubricants

Group 15 - Serial Number Locations

Section 30 - ENGINE

Group 05 - Specifications

Group 10 - Repair

Section 40 - ELECTRICAL - NA

Group 05 - General Information

Group 10 - Specifications

Group 15 - Component Location

Group 20 - Schematics and Harnesses

Group 25 - Operation and Diagnostics

Group 30 - Tests and Adjustments

Group 35 - Service Codes

Group 40 - Electronic Controllers

Group 45 - Operation and Diagnostics - DTCs (TCU)

Group 50 - Operation and Diagnostics - DTCs (ICC)

Section 50 - ELECTRICAL - EEC

Group 05 - European Electrical Section

Group 10 - Specifications

Group 15 - Component Location

Group 20 - EEC Schematics and Harnesses

Group 25 - Operation and Diagnostics

Group 30 - Service Codes

Group 35 - Electronic Controllers

Section 60 - POWER TRAIN - HYDROSTATIC

Group 05 - Specifications

Group 10 - Component Location

Group 15 - Schematics

Group 20 - Theory of Operation

Group 25 - Diagnostics

Group 30 - Tests and Adjustments

Group 35 - Repair

Section 70 - POWER TRAIN - FINAL DRIVE

Group 05 - Specifications

Group 10 - Component Location

Group 15 - Theory of Operation

Group 20 - Diagnostics

Group 25 - Tests and Adjustments

Group 30 - Repair

Group 35 - PTO Theory of Operation

Group 40 - PTO Repair

Section 80 - HYDRAULICS

Group 05 - Specifications

Group 10 - Component Location

Group 15 - Schematics & Harnesses

Group 20 - Theory of Operation

Group 25 - Diagnostics

Group 30 - Tests and Adjustments

Group 35 - Repair

Section 90 - STEERING

Group 05 - Specifications

Group 10 - Component Location

Group 15 - Theory of Operation

Group 20 - Diagnostics

Group 25 - Tests and Adjustments

Group 30 - Repair

Section 100 - BRAKES

Group 05 - Specifications

Group 10 - Component Location

Group 15 - Theory of Operation

Group 20 - Diagnostics

Group 25 - Tests and Adjustments

Group 30 - Repair

Section 110 - HVAC

Group 05 - Specifications

Group 10 - Tools and Materials

Group 15 - General Information

Group 20 - Tests and Adjustments

Section 120 - MISCELLANEOUS

Group 05 - Specifications

Group 10 - Tools and Materials

Group 15 - Tests and Adjustments

Group 20 - Repair



Thank you very much
for your reading.
Please click here
to get more information.