

# Komatsu 3D82AE SERIES, 3D84E SERIES, 3D88E SERIES, 4D88E SERIES, 4D98E SERIES, 4D106 SERIES, S4D84E SERIES, S4D98E SERIES, S4D106 SERIES Diesel Engine Service Repair Manual

Download Complete Service Repair Manual for Komatsu 3D82AE SERIES, 3D84E SERIES, 3D88E SERIES, 4D88E SERIES, 4D98E SERIES, 4D106 SERIES, S4D84E SERIES, S4D98E SERIES, S4D106 Series Diesel Engine.

This Factory Service Repair Manual offers all the service and repair information about Komatsu Diesel Engine. The information on this manual covered everything you need to know when you want to repair or service Komatsu 3D82AE SERIES, 3D84E SERIES, 3D88E SERIES, 4D88E SERIES, 4D98E SERIES, 4D106 SERIES, S4D84E SERIES, S4D98E SERIES, S4D106 Series Diesel Engine.

Models Covered:

APPLICABLE MACHINE MODEL / ENGINE MODEL(YANMAR DESCRIPTION) / ENGINE MODEL(KOMATSU DESCRIPTION)

PC27R-8 / 3TNV82A-M5FA / 3D82AE-5MFA

PC35R-8 / 3TNV88-N5FA / 3D88E-5NFA

PC45R-8 / 4TNV88-N5FA / 4D88E-5NFA

PC75R-2 / 4TNV98-X2FB / 4D98E-2XFB

PW75R-2 / 4TNV98-X2FB / 4D98E-2XFB

PC95R-2 / 4TNV106-S2FB / 4D106-2SFB

PW95R-2 / 4TNV106-S2FB / 4D106-2SFB

PC110R-1 / 4TNV106T-W2FB / S4D106-2WFB

PW110R-1 / 4TNV106T-W2FB / S4D106-2WFB

SK510-5 / 3TNV84-K5FD / 3D84E-5KFD

SK714-5 / 4TNV88-K5FD / 4D88E-5KFD

SK815-5 / 4TNV88-K5FD / 4D88E-5KFD

SK815-5 turbo / 4TNV84T-K5FD / S4D84E-5KFD

SK818-5 / 4TNV88-K5FD / 4D88E-5KFD

SK820-5 turbo / 4TNV84T-K5FD / S4D84E-5KFD

SK1020-5 / 4TNV98-N2FE / 4D98E-2NFE

SK1020-5 turbo / 4TNV98T-N2FE / S4D98E-2NFE

SK1026-5 turbo / 4TNV98T-N2FE / S4D98E-2NFE

WB70A-1 / 4TNV98-N2FA / 4D98E-2NFA

WB98A-2 / 4TNV106T-S2FC / S4D106-2SFC

WB91R-2 / 4TNV106-S2FA / 4D106-2SFA

WB93R-2 / 4TNV106T-S2FA / S4D106-2SFA

WB97R-2 / 4TNV106T-S2FA / S4D106-2SFA

WB97S-2 / 4TNV106T-S2FA / S4D106-2SFA

WB150AWS-2 / 4TNV106T-S2FA / S4D106-2SFA

Manual Contents:

1. General

2. Inspection and Adjustment

