

# Komatsu Wheel Loaders WA380-6 Service Repair Workshop Manual



PDF



DOWNLOAD





# WA90-5

# WA100M-5

## WHEEL LOADER

MODEL:	SERIAL NUMBER:
WA90-5	50051 AND UP
WA100M-5	50051 AND UP

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local KOMATSU distributor for those items you may require. Materials and specifications are subject to change without notice.
- The Wheel Loaders WA90-5 and WA100M-5 are equipped with the engine S4D95LE-3. For details of this engine see Bulletin No. 3666418-00 (Cummins)

---


# CONTENTS

	No. of page
00 SAFETY .....	00-1
01 GENERAL .....	01-1
10 STRUCTURE AND FUNCTION .....	10-1
20 TESTING AND ADJUSTING .....	20-1
30 DISASSEMBLY AND ASSEMBLY .....	30-1
90 OTHERS.....	90-1

11. Move the safety rod on the right side upward until it reaches the pin at the cab floor.




12. Set the lever at the pump to "pump down" and pump the cab downward until the safety rod is secure against the right side of the cab floor.

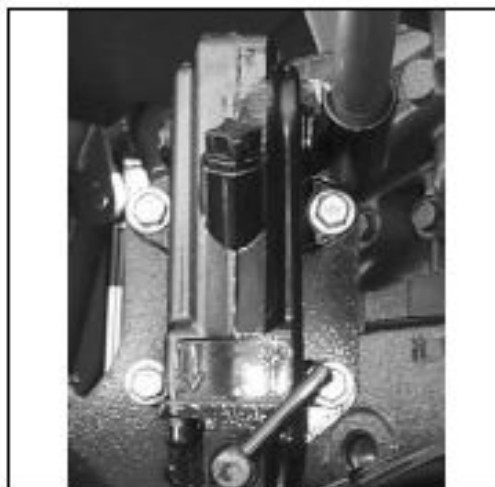

13. Take the lever out of the pump.

### Tipping down the driver's cab

1. Insert the lever into the pump. Set the lever at the pump to "pump up" and pump the cab upward until it reaches the limit stop.

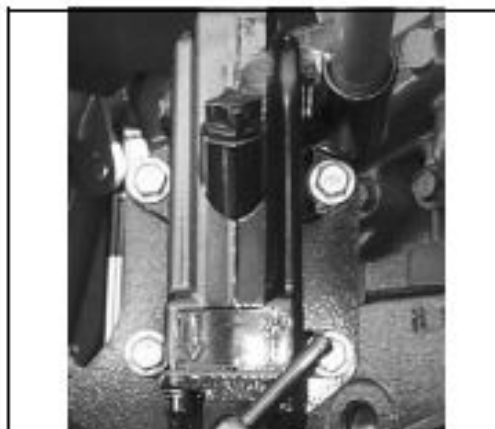



Thank you very much  
for your reading.  
Please click here  
to get more information.