

Large Square Baler

870N

870R

870S

990N

990R

990S

1270N

1270S

1290N

1290S

1290NXD

1290SXD

12130N

12130S

S/N: AGCFxxxxxEHB0x101 and After



Large Square Baler

1 General	1-1
1.1 General information	1-5
1.1.1 Introduction to this service manual	1-5
1.1.2 Units of measurement	1-5
1.1.3 Table of contents	1-5
1.1.4 Page numbers	1-5
1.1.5 Installing a stake nut	1-5
1.1.6 Removing a gib key	1-6
1.1.7 Installing a gib key	1-6
1.1.8 Removing an eccentric locking collar	1-7
1.1.9 Installing an eccentric locking collar	1-7
1.2 Safety	1-9
1.2.1 Safety alert symbol	1-9
1.2.2 Safety messages	1-9
1.2.3 Informational messages	1-9
1.2.4 Safety signs	1-9
1.2.5 Safety warnings	1-10
1.2.6 A word to the technician	1-10
1.2.7 The service manual	1-11
1.2.8 The operator manual	1-12
1.2.9 Toolbox	1-12
1.2.10 Operation	1-12
1.2.10.1 General information	1-12
1.2.10.2 Prepare for operation	1-13
1.2.10.3 Personal protective equipment	1-14
1.2.10.4 Seat instructions	1-14
1.2.10.5 Shield and guards	1-14
1.2.10.6 Exhaust warning	1-15
1.2.10.7 Flying debris	1-15
1.2.10.8 Handrails	1-16
1.2.10.9 Agricultural chemicals	1-16
1.2.11 Travel on public roads	1-16
1.2.12 Maintenance	1-18
1.2.12.1 General maintenance information	1-18
1.2.12.2 Fire prevention and first aid	1-20
1.2.12.3 High pressure leaks	1-21
1.2.12.4 Accumulator safety	1-22
1.2.12.5 Tire safety	1-22
1.3 Specifications	1-23
1.3.1 Dimensions and weights	1-23
1.3.2 Drive system specifications	1-24
1.3.3 Shearbolt specifications	1-25
1.3.4 Hydraulic specifications - on board	1-26
1.3.5 Pickup specifications	1-26
1.3.6 Rotor cutter specifications - early production	1-27
1.3.7 Rotor cutter specifications - late production	1-28
1.3.8 Packer specifications	1-29
1.3.9 Packer/cutter specification, if equipped	1-29
1.3.10 Stuffer specifications	1-29
1.3.11 Plunger specifications	1-30
1.3.12 Twine specifications	1-30
1.3.13 Knotter and needle specifications	1-31

1.3.14	Bale chamber tension specifications	1-31
1.3.15	Ejector specifications	1-31
1.3.16	Roller bale chute specifications, if equipped	1-32
1.3.17	Lamp specification	1-32
1.3.18	Knotter lubrication pump specifications	1-32
1.3.19	Chain lubrication pump specifications, if equipped	1-33
1.3.20	Lubricants and capacities	1-33
1.3.21	Tire specifications	1-34
1.3.22	Brake specifications, if equipped	1-35
1.3.23	Maximum speed	1-37
1.3.24	Tractor requirements	1-37
1.3.25	Noise levels	1-38
1.4	Bolt torque values	1-39
1.5	Machine identification	1-41
1.5.1	Serial number plate location	1-41
1.5.2	Serial number description	1-42
1.6	Machine components	1-43
1.6.1	Outside view - left-hand side	1-43
1.6.2	Outside view - right-hand side	1-44
1.6.3	Inside view - left-hand side	1-45
1.6.4	Inside view - right-hand side	1-46
1.6.5	Description of operation	1-46
1.7	Service schedule	1-48
1.8	Lubrication points	1-52
1.8.1	Driveline lubrication and maintenance	1-52
1.8.1.1	Removing and installing the implement driveline shields	1-53
1.8.2	Lubricating the hitch ball, if equipped	1-54
1.8.3	Lubricating the main drive slip clutch	1-54
1.8.4	Lubricating the overrunning clutch	1-55
1.8.5	Lubricating the flywheel bearing	1-55
1.8.6	Lubricating the connecting rods	1-55
1.8.7	Lubricating the packer crank bearings	1-56
1.8.8	Inspecting the packer crank bearings	1-57
1.8.9	Lubricating the packer/cutter crank bearings	1-57
1.8.10	Inspecting the packer/cutter crank bearings	1-57
1.8.11	Lubricating the cutter rotor clutch, if equipped	1-58
1.8.12	Lubricating the anchor for the rotor cutter chain tensioner	1-58
1.8.13	Lubricating the rotor cutter bearings	1-59
1.8.14	Lubricating the knife cranks, if equipped	1-59
1.8.15	Lubricating the main drive sprocket	1-60
1.8.16	Lubricating the stuffer drive	1-60
1.8.17	Lubricating the knotter/needle clutch	1-61
1.8.18	Lubricating the brake linkage	1-61
1.8.19	Lubricating the tandem axle pivot bushings	1-62
1.8.20	Lubricating the metering wheel shaft	1-62
1.8.21	Lubricating the six twine knotter center fitting	1-62
1.8.22	Lubricating the tucker arm and twine arm cam rollers	1-63
1.8.23	Lubricating the bale density cylinders	1-63
1.8.24	Lubricating the packer clutch	1-64
1.8.25	Lubricating the main packer/cutter crank bearing	1-64
1.8.26	Lubricating the packer/cutter chain tensioner	1-64
1.8.27	Lubricating the pickup overrunning clutch	1-65
1.8.28	Lubricating the pickup linkage roller	1-65
1.8.29	Lubricating the pickup spring pivot	1-66
1.9	Connecting to the tractor - CE	1-67
1.9.1	Removing the shipping bracket	1-67
1.9.2	Hitch component identification	1-67

1.9.3	Baler height setting	1-68
1.9.4	Tractor setup dimensions with an 80 mm (3.15 in) ball hitch, a CE spherical ball hitch, or a 50 mm (2 in) ring hitch	1-68
1.9.5	Tractor setup dimensions with a 40 mm (1.6 in) high ring hitch	1-69
1.9.6	Installing the machine hitch	1-69
1.9.7	Connecting the machine hitch to the tractor drawbar	1-71
1.9.8	Connecting a 50 mm (2 in) ring hitch to the tractor	1-72
1.9.9	Connecting an 80 mm (3.15 in) ball hitch to the tractor	1-72
1.9.10	Connecting a 40 mm (1.6 in) high ring hitch to the tractor	1-72
1.9.11	Operating a hydraulic tongue jack	1-73
1.9.12	Installing the safety transport chain	1-73
1.9.13	Constant velocity implement driveline, if equipped	1-74
1.9.13.1	Connecting a quick disconnect yoke to a power take off	1-74
1.9.13.2	Making marks on the constant velocity implement driveline	1-75
1.9.13.3	Checking the constant velocity implement driveline angle	1-76
1.9.13.4	Adjusting the constant velocity implement driveline angle	1-76
1.9.13.5	Checking the constant velocity implement driveline clearance	1-77
1.10	Checklists	1-78
1.10.1	Daily checklist	1-78
1.10.2	Inspection after the first hour of operation	1-78
1.11	Lighting and reflectors - CE	1-79
1.11.1	Lighting and reflectors	1-79
1.12	Lighting and reflectors - NA	1-80
1.12.1	Lighting and reflectors	1-80
1.13	Baler operation	1-81
1.13.1	Preparing to bale	1-81
1.13.2	Starting the baler	1-81
1.13.2.1	The plunger is away from the bale	1-81
1.13.2.2	The plunger is near or on the bale	1-81
1.13.2.3	Baler fails to start	1-82
1.13.3	Baling the first bale	1-82
1.13.4	Baling	1-83
1.13.5	Stopping the baler	1-83
1.14	Preparing to road the machine or to move the machine on a trailer	1-85
1.15	Lifting and tie down	1-88
1.15.1	Lifting a baler correctly	1-88
1.15.2	Lifting points	1-88
1.15.3	Tie down points	1-89
1.16	Air brake pressure release	1-91
1.17	Disconnecting the tractor	1-92
2	Main frame	2-1
2.1	Wheels and tires	2-3
2.1.1	Tire specifications	2-3
2.1.2	Remove a wheel	2-3
2.1.3	Installing a wheel	2-4
2.2	Single axle	2-5
2.2.1	Removing an axle shaft without brakes	2-5
2.2.2	Removing the axle shaft with brakes	2-5
2.2.3	Inspecting an axle	2-5
2.2.4	Installing an axle shaft without brakes	2-5
2.2.5	Installing an axle shaft with brakes	2-6
2.3	Tandem axle	2-7
2.3.1	Tandem axle steering lock	2-7
2.3.2	Removing the rear tandem axle	2-7
2.3.3	Removing the front tandem axle	2-8

2.3.4	Inspecting an axle	2-9
2.3.5	Installing the rear tandem axle	2-9
2.3.6	Installing the front tandem axle	2-11
2.3.7	Adjusting the rear wheel alignment	2-11
2.4	Wheel bearing	2-13
2.4.1	Inspect the wheel bearings for too much movement	2-13
2.4.2	Remove a wheel	2-13
2.4.3	Removing the wheel bearings - single axle without brakes	2-13
2.4.4	Remove the wheel bearings - machines with brakes	2-14
2.4.5	Inspecting the wheel bearing	2-15
2.4.6	Installing the wheel bearings - single axle without brakes	2-16
2.4.7	Install the wheel bearings - single axle with brakes and all tandem axles	2-16
2.5	Axle frame group	2-19
2.5.1	Removing the axle frame - single axle without brakes	2-19
2.5.2	Removing the axle frame - single axle with hydraulic brakes	2-19
2.5.3	Removing the axle frame - single axle with air brakes	2-20
2.5.4	Removing the axle frame - tandem axle without brakes	2-20
2.5.5	Removing the axle frame - tandem axle with hydraulic brakes	2-21
2.5.6	Removing the axle frame - tandem axle with air brakes	2-21
2.5.7	Installing the axle frame - single axle without brakes	2-22
2.5.8	Installing the axle frame - single axle with hydraulic brakes	2-22
2.5.9	Installing the axle frame - single axle with air brakes	2-23
2.5.10	Installing the axle frame - tandem axle without brakes	2-23
2.5.11	Installing the axle frame - tandem axle with hydraulic brakes	2-24
2.5.12	Installing the axle frame - tandem axle with air brakes	2-24
2.5.13	Removing the leaf spring assembly	2-25
2.5.14	Inspecting the leaf spring assembly	2-25
2.5.15	Installing the leaf spring assembly	2-26
2.6	Brakes	2-27
2.6.1	Inspection procedure for brakes	2-27
2.6.2	Inspect the air brake system	2-27
2.6.3	Connecting the machine hydraulic brake hoses to the tractor	2-28
2.6.4	Bleeding the hydraulic brake system	2-28
2.6.5	Inspect the brake lining thickness	2-28
2.6.6	Replace the brake linings	2-29
2.6.7	Adjust the brakes	2-31
2.6.8	Rubber brake wiper	2-32
2.6.9	Inspect the park brake system	2-32
3	Drive system	3-1
3.1	Implement driveline	3-3
3.1.1	Equal angle implement driveline, if equipped	3-3
3.1.1.1	Connecting a quick disconnect yoke to a power take-off	3-3
3.1.1.2	Adjusting the angles of an equal angle implement driveline	3-4
3.1.2	Constant velocity implement driveline, if equipped	3-5
3.1.2.1	Connecting a quick disconnect yoke to a power take off	3-5
3.1.2.2	Making marks on the constant velocity implement driveline	3-6
3.1.2.3	Checking the constant velocity implement driveline angle	3-7
3.1.2.4	Adjusting the constant velocity implement driveline angle	3-7
3.1.2.5	Checking the constant velocity implement driveline clearance	3-8
3.1.3	Removing the implement driveline (IDL)	3-9
3.1.4	Installing the implement driveline (IDL)	3-10
3.1.5	Replacing a pawl on a quick disconnect yoke	3-12
3.1.6	Replacing the cross and bearing	3-15
3.2	Main drive shaft	3-22
3.2.1	Driveline troubleshooting	3-22
3.2.2	Main drive shaft	3-22

3.2.3	Removing the main drive shaft	3-23
3.2.4	Inspecting the main drive shaft	3-25
3.2.5	Installing the main drive shaft	3-25
3.3	Main drive clutch	3-27
3.3.1	Main drive slip clutch adjustment	3-27
3.3.2	Lubricating the main drive slip clutch	3-28
3.3.3	Removing the main drive clutch	3-28
3.3.4	Disassembling the main drive clutch	3-28
3.3.5	Inspecting the main drive clutch	3-29
3.3.6	Assembling the main drive clutch	3-31
3.3.7	Disassembling the main drive overrunning clutch	3-32
3.3.8	Inspecting the main drive overrunning clutch	3-32
3.3.9	Assembling the main drive overrunning clutch	3-33
3.3.10	Installing the main drive clutch	3-33
3.4	Flywheel	3-34
3.4.1	Flywheel brake	3-34
3.4.2	Inspecting the flywheel brake lining	3-34
3.4.3	Replacing the flywheel shearbolt	3-35
3.4.4	Shearbolt troubleshooting	3-36
3.4.5	Removing the flywheel	3-38
3.4.6	Inspecting the flywheel	3-40
3.4.7	Inspecting the pinion seal	3-41
3.4.8	Replacing the pinion seal	3-41
3.4.9	Installing the flywheel	3-42
3.5	Auxiliary drive shaft	3-47
3.5.1	Removing the auxiliary drive shaft	3-47
3.5.2	Inspecting the auxiliary drive shaft	3-48
3.5.3	Installing the auxiliary drive shaft	3-49
3.6	Gearbox	3-51
3.6.1	Removing the gearbox	3-51
3.6.2	Installing the gearbox	3-53
3.6.3	80x70 (2x3), 80x90 (3x3), 120x70 (2x4), 120x90 (3x4), and 120x90 XD (3x4 XD) gearbox components	3-56
3.6.4	Disassembling a 80x70 (2x3), 80x90 (3x3), 120x70 (2x4), 120x90 (3x4), and 120x90 XD (3x4 XD) gearbox	3-57
3.6.5	Assembling a 80x70 (2x3), 80x90 (3x3), 120x70 (2x4), 120x90 (3x4), and 120x90 XD (3x4 XD) gearbox	3-61
3.6.6	Disassembling a 120x130 (4x4) gearbox	3-75
3.6.7	Assembling the 120x130 (4x4) gearbox	3-82
3.6.8	Adjusting the gearbox crank arm bolts	3-87
3.6.9	Gearbox troubleshooting	3-87
4	Hydraulic system	4-1
4.1	Hydraulic system general information	4-3
4.1.1	Hydraulic reservoir general information	4-3
4.1.2	Hydraulic components, left-hand side	4-4
4.1.3	Hydraulic components, rear	4-4
4.1.4	Connecting the machine hydraulic hoses to the tractor	4-5
4.2	Bale density circuit	4-6
4.2.1	Bale density circuit description	4-6
4.2.2	Filling the hydraulic system	4-6
4.2.3	Replacing a cartridge	4-6
4.3	Baler control valve assembly	4-8
4.3.1	Removing the baler control valve assembly	4-8
4.3.2	Installing the baler control valve assembly	4-10
4.3.3	Disassembling the baler control valve assembly	4-11
4.3.4	Inspecting the baler control valve assembly	4-13

4.3.5 Assembling the baler control valve assembly	4-15
4.4 Bale ejector/chute valve	4-18
4.4.1 Bale ejector hydraulic connections	4-18
4.4.2 Bale chute hydraulic connections	4-18
4.4.3 Removing the bale ejector/chute valve	4-19
4.4.4 Installing the bale ejector/chute valve	4-20
4.5 Accumulator auxiliary valve	4-22
4.5.1 Accumulator hydraulic system	4-22
4.5.2 Accumulator and bale ejector hydraulic connections	4-22
4.5.3 Disassembling the accumulator auxiliary valve	4-23
4.5.4 Inspecting the accumulator auxiliary valve	4-23
4.5.5 Assembling the accumulator auxiliary valve	4-24
4.6 Pickup lift cylinder	4-26
4.6.1 Pickup lift cylinder components	4-26
4.6.2 Removing the pickup lift cylinder	4-26
4.6.3 Installing the pickup lift cylinder	4-27
4.6.4 Disassembling the pickup lift cylinder	4-28
4.6.5 Inspecting the pickup lift cylinder	4-29
4.6.6 Assembling the pickup lift cylinder	4-29
4.7 Bale density cylinders	4-30
4.7.1 Bale density cylinder components	4-30
4.7.2 Removing the bale density cylinders	4-30
4.7.3 Installing the bale density cylinders	4-31
4.7.4 Disassembling the bale density cylinders	4-32
4.7.5 Inspecting the bale density cylinders	4-33
4.7.6 Assembling the bale density cylinders	4-33
4.8 Hydraulic troubleshooting	4-35
4.8.1 Testing the load control system - load decrease	4-37
4.8.2 Testing the load control system - load increase	4-37
4.9 Cutter hydraulics - GHB0x101 and later	4-39
4.9.1 Removing the knife cylinders	4-39
4.9.2 Installing the knife cylinders	4-41
4.9.3 Disassembling the knife cylinders	4-43
4.9.4 Assembling the knife cylinders	4-44
4.9.5 Removing the cutterbed cylinders	4-45
4.9.6 Installing the cutterbed cylinders	4-46
4.9.7 Disassembling the cutterbed cylinders	4-46
4.9.8 Assembling the cutterbed cylinders	4-47
4.9.9 Removing the cutter valve	4-48
4.9.10 Installing the cutter valve	4-49
4.9.11 Disassembling the cutter valve	4-50
4.9.12 Inspecting the cutter valve	4-50
4.9.13 Assembling the cutter valve	4-52
4.9.14 Checking the accumulator charge pressure	4-53
4.9.15 Charging an accumulator	4-54
4.9.16 Discharging an accumulator	4-56
4.9.17 Removing the accumulator	4-57
4.9.18 Installing the accumulator	4-58
5 Electrical system	5-1
5.1 Basic troubleshooting information	5-3
5.1.1 Basic troubleshooting procedures	5-3
5.1.2 Tools	5-4
5.1.3 Continuity check	5-4
5.1.4 Voltage check	5-5
5.1.5 Testing a solenoid valve	5-5
5.1.6 Testing a coil	5-7

5.2 Connectors	5-8
5.2.1 Machine lamp plug wiring diagram - North America	5-8
5.2.2 Machine lamp plug wiring diagram CE	5-9
5.2.3 Connecting the control harness plug	5-10
5.2.4 Connecting the four pin plug, machines with a disconnect brake	5-10
5.2.5 Checking a connector	5-10
5.2.6 Terminal numbers	5-11
5.2.7 Pins and sockets	5-11
5.2.8 Replacing a Packard connector	5-12
5.2.9 Replacing an AMP connector	5-13
5.3 Sensors and switches	5-14
5.3.1 Adjusting sensors and switches	5-23
5.3.2 Sensors and switches locations and specifications	5-24
5.3.3 Testing a sensor	5-25
5.3.4 Testing a switch	5-25
5.3.4.1 Testing a switch with the terminal	5-26
5.3.4.2 Testing a switch with a continuity test	5-26
5.4 Terminal	5-27
5.4.1 General terminal information	5-27
5.4.1.1 Terminal harness information	5-27
5.4.1.2 Icon functions	5-27
5.4.1.3 Terminal screen trees	5-33
5.4.2 CAN bus system overview	5-37
5.4.3 Startup screen	5-39
5.4.4 Main work screens	5-40
5.4.4.1 Changing the main work screen boxes	5-41
5.4.4.2 Main work screen boxes	5-41
5.4.4.3 Operating directional arrows	5-45
5.4.4.4 Flakes per bale	5-46
5.4.4.5 Bale density cylinder pressure	5-46
5.4.4.6 Changing between automatic and manual control mode	5-48
5.4.4.7 Plunger load	5-49
5.4.4.8 Plunger load setting information	5-50
5.4.4.9 Setting the plunger load	5-51
5.4.4.10 Feeder slip	5-52
5.4.4.11 Main work screen display area	5-53
5.4.5 Accumulator (if equipped)	5-55
5.4.5.1 Accumulator bale position	5-55
5.4.5.2 Accumulator modes	5-55
5.4.5.3 Accumulator manual mode operation	5-56
5.4.5.4 Accumulator bale unload indication	5-56
5.4.5.5 Accumulator errors	5-56
5.4.5.6 Accumulator shift lockout setting	5-57
5.4.6 Scale, if equipped	5-58
5.4.6.1 Bale weight	5-58
5.4.7 Strokes per flake	5-59
5.4.8 Releasing the bale chamber pressure before ejecting a bale	5-59
5.4.9 Releasing the bale chamber pressure	5-60
5.4.10 Machine settings screen	5-61
5.4.10.1 Machine settings screen information	5-61
5.4.10.2 Setting the chain lubrication interval	5-61
5.4.10.3 Setting the knotter lubrication interval	5-62
5.4.10.4 Setting the knotter lubrication operating time	5-63
5.4.10.5 Manual knotter lubrication start	5-63
5.4.10.6 Manual knotter lubrication stop	5-63
5.4.10.7 Changing the bale length	5-63
5.4.10.8 Changing the crop type	5-64
5.4.10.9 Changing the audio settings	5-64

5.4.11	Service screen	5-65
5.4.11.1	Service screen display	5-65
5.4.11.2	Switch service screen	5-66
5.4.11.3	Voltage service screen	5-69
5.4.11.4	Frequency service screen	5-70
5.4.12	Alarm log screen	5-72
5.4.12.1	Alarm detail screen	5-73
5.4.12.2	Removing an alarm	5-73
5.4.13	Machine configuration screen	5-74
5.4.14	Calibrating the accumulator scale	5-74
5.4.15	Calibrating the bale length, if equipped	5-76
5.4.16	Calibrating the roller bale chute scale with an object of a known weight	5-78
5.4.17	Calibrating the roller bale chute scale with a test bale	5-80
5.4.18	Calibrating the cutter	5-81
5.4.19	Rotor cutter - late production cutter	5-82
5.4.19.1	Changing the cutter knife setting	5-84
5.4.19.2	Lowering the cutterbed	5-86
5.4.19.3	Raising the cutterbed	5-87
5.4.19.4	Removing debris from the cutter knives	5-88
5.4.19.5	Unplugging the cutter	5-91
5.4.20	Work records screen	5-92
5.4.20.1	Job record screen	5-93
5.4.20.2	Changing the current job	5-95
5.4.20.3	Customer record screen	5-95
5.4.20.4	Changing the current customer	5-96
5.4.20.5	Year record screen	5-97
5.4.20.6	Changing the current year	5-98
5.4.20.7	Clearing a record	5-98
5.4.20.8	Storing work records on a data card	5-99
5.4.20.9	Lifetime counter screen	5-99
5.4.21	Indicator icons and error number	5-100
5.4.21.1	Machine indicator icons and error numbers	5-100
5.4.21.2	Accumulator indicator icons and error numbers	5-101
5.4.21.3	Scale indicator icons and error numbers	5-102
5.4.22	Alarms	5-102
5.4.22.1	Alarm information	5-102
5.4.22.2	Visual alarm descriptions	5-102
5.4.22.3	Audible alarm descriptions	5-102
5.4.22.4	Alarm table	5-103
5.5	Terminal troubleshooting	5-113
6	Bale feeding system	6-1
6.1	General information	6-3
6.1.1	Pickup assembly	6-3
6.1.2	Pickup assembly operation and settings	6-3
6.1.3	Pickup height	6-4
6.1.4	Adjusting the pickup assembly flotation - torsion rod system	6-4
6.1.5	Adjusting the pickup assembly flotation - compression spring system	6-5
6.1.6	Adjusting the flotation and the gauge wheels height	6-5
6.2	Chain adjustment	6-7
6.2.1	Adjusting the left-hand pickup chains	6-7
6.2.2	Adjusting the right-hand pickup chains	6-7
6.3	Pickup clutch - FHB0x999 and prior	6-8
6.3.1	Pickup assembly clutch operation	6-8
6.3.2	Pickup assembly slip clutch components	6-8
6.3.3	Pickup assembly overrunning clutch components	6-8
6.3.4	Adjusting the pickup assembly slip clutch	6-9



Thank you very much
for your reading.
Please click here
to get more information.