
TC30 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE SYSTEMS	3
SECTION 18 - CLUTCHES	7
SECTION 21 - GEAR TRANSMISSION	8
SECTION 25 - FRONT-WHEEL DRIVE FRONT AXLE	8
SECTION 27 - DIFFERENTIAL, REAR AXLE	9
SECTION 29 - HYDROSTATIC TRANSMISSION	9
SECTION 31 - POWER TAKE-OFF SYSTEMS	11
SECTION 33 - BRAKES	12
SECTION 35 - HYDRAULIC SYSTEM	12
SECTION 41 - STEERING SYSTEMS POWER STEERING	14
SECTION 44 - WHEELS AND TIRES	16
SECTION 55 - ELECTRICAL SYSTEM	17
SECTION 72 - SEPARATING THE TRACTOR	20
SECTION 90 - PLATFORM	20



The following pages are the **PDF** **DOWNLOAD** in each section and chapter of the TC30 Tractor Repair manual. Complete Repair part # 87021725.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC30 Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87021726

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	2
	Precautionary Statements	3
	Safety	4
	The Tractor	4
	Servicing the Tractor	4
	Operating the Tractor	5
	Driving the Tractor	5
	Operating the PTO	6
	Diesel Fuel	6
	Safety Frame (ROPS)	6
	Safety Decals	7
	Instruction Decals	8
	Product Identification Plate	11
	International Symbols	12
	Specifications	13
	General Dimensions	19
	Minimum Hardware Tightening Torques	22
	Lubricants	24
	Adjustments	25
	Tire Inflation Pressure	25

SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87021726

Chapter 1 - Engine

CONTENTS

Section	Description	Page
10 000	Specifications	4
	Metric Bolt Torque Specifications	11
	Special Tools	12
	Compression Test and Tools	12
	General Information	13
	Description of Operation	13
	Cylinder Head and Valve Train Components	14
	Cylinder Block Assembly	14
	Troubleshooting	15
	Engine Overhaul	20
	Engine Disassembly	20
	Fuel Injector and Glow Plug Removal	21
	Oil Pressure Switch	21
	Temperature Sending Switch and Alternator Removal	22
	Fan, Water Pump, and External Oil Tube Removal	22
	Air Inlet Manifold Removal	22
	Valve Cover Removal	23
	Rocker Arm Shaft and Support Bracket Removal	23
	Cylinder Head Removal	23
	Valve Tappet Removal	24
	Fuel Shutoff Solenoid Removal	24
	Engine Timing Gear Cover, Timing Gears, and Cam Shaft	24
	Disassembly, Inspection, Fits, Clearances and Assembly of Component Assemblies	30
10 101	Cylinder Head Disassembly	30
	Cylinder Head Inspection and Repair	30
	Valve Seats	31
	Valves	32
	Valve Guides	33
	Valve Springs	34
	Rocker Arms	34
Push Rods	35	

SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87021726

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Cylinder Head Assembly	36, 54
	Cylinder Block	36
10 105	Pistons, Piston Rings, and Connecting Rods Disassembly and Inspection	37
	Pistons, Rings, and Connecting Rod Assembly	42
10 103	Crankshaft	43
	Crankshaft Bearing (bushing) Inspection	44
	Crankshaft Bearing (bushing) Replacement	45
	Crankshaft Main Bearing Assembly	45
	Port Block Removal	46
	Port Block Installation	46
10 106	Timing Gear	46
	Camshaft Disassembly	47
	Camshaft Inspection	47
	Camshaft Assembly	47
10 103	Flywheel	48, 50
	Timing Gear Housing	48
	Engine Reassembly	49
	Crankshaft and Bearing Holder Reassembly	49
	Rear Oil Seal and Backplate Assembly	49
	Pistons and Connecting Rods	50
	Oil Suction Pipe and Suction Strainer	51
	Oil Sump	51
	Timing Gear Cover, Timing Gears, and Camshaft Assembly	51
	Idle Gear, Oil Pump, and Injection Timing	52
	Timing Gear Cover	52
	Crankshaft Pulley	52
	Fuel Injection Pump Assembly	53
	Power Steering Pump	53
	Head Gasket Selection	54
	Head Gasket Selection Chart	54
	Valve Clearance Adjustment	55
	Valve Cover	55

SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87021726

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Water Pump and Cooling Fan Assembly	56
	Air Intake Manifold Assembly	56
	External Oil Tube	56
	Glow Plug and Connector	56
	Fuel Injector	57
	Fuel Piping	57
	Alternator and Temperature Sender Switch	57
	Exhaust Manifold	58
	Engine Lubrication System	58
10 304	Description	58
	Model TC30 Oil Flow Chart	60
10 206	Oil Filter	61
10 304	Oil Pump	61
	Engine Oil Pressure Check	62
	Oil Pressure Relief Valve	64
	Oil Consumption	64
	Cooling System	65
10 400	Description of Operation	65
	Maintenance	66
	Coolant	66
	Radiator Cap	66
10 402	Thermostat	67, 73
10 402	Water Pump	67
10 414	Cooling Fan	67
	Cooling System Overhaul	68
10 406	Radiator	68
10 402	Water Pump	71



Thank you very much
for your reading.
Please click here
to get more information.