

John Deere 210G and 210GLC (PIN: 1FF210GX_F521988-) Excavator Service Repair Manual (TM13351X19)

210G and 210GLC Excavator

REPAIR TECHNICAL MANUAL

210G, 210GLC (PIN: 1FF210GX_F521988-)

TM13351X19 13AUG15 (ENGLISH)

For complete service information also see:

210G and 210GLC Excavator Diagnostic	TM13347X19
JDLINK (MTG) Technical Manual	TM114519
PowerTech 6068 OEM Diesel Engines (Final Tier 4/Stage IV Platform)	CTM120019



John Deere Construction and Forestry

Covers: 210GLC,1FF210GX_F521988)

Type: Service Manual

Language: English

Pages: 591

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

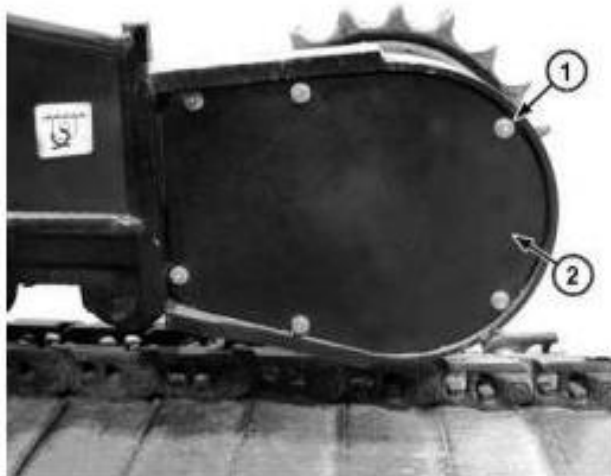
This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 210G and 210GLC (PIN: 1FF210GX_F521988-) Excavator Service Repair Manual (TM13351X19)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

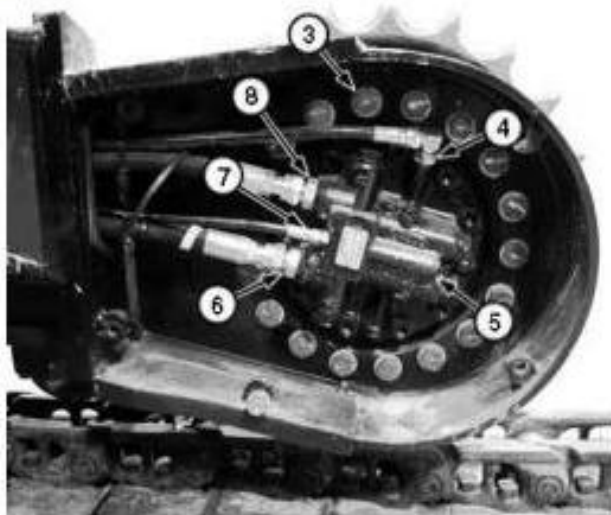
**LEGEND:**

- 1 Cap Screw (6 used)
- 2 Travel Motor Access Panel

Travel Motor Cover

Remove cap screws (1) and travel motor access panel (2).

[6] -

**LEGEND:**

- 3 Cap Screw (16 used)
- 4 Travel Motor Drain Hose
- 5 Travel Gear Case Assembly
- 6 Travel Motor Pressure Hose (forward)
- 7 Travel Motor Speed Change Valve Hose
- 8 Travel Motor Pressure Hose (reverse)

Travel Motor

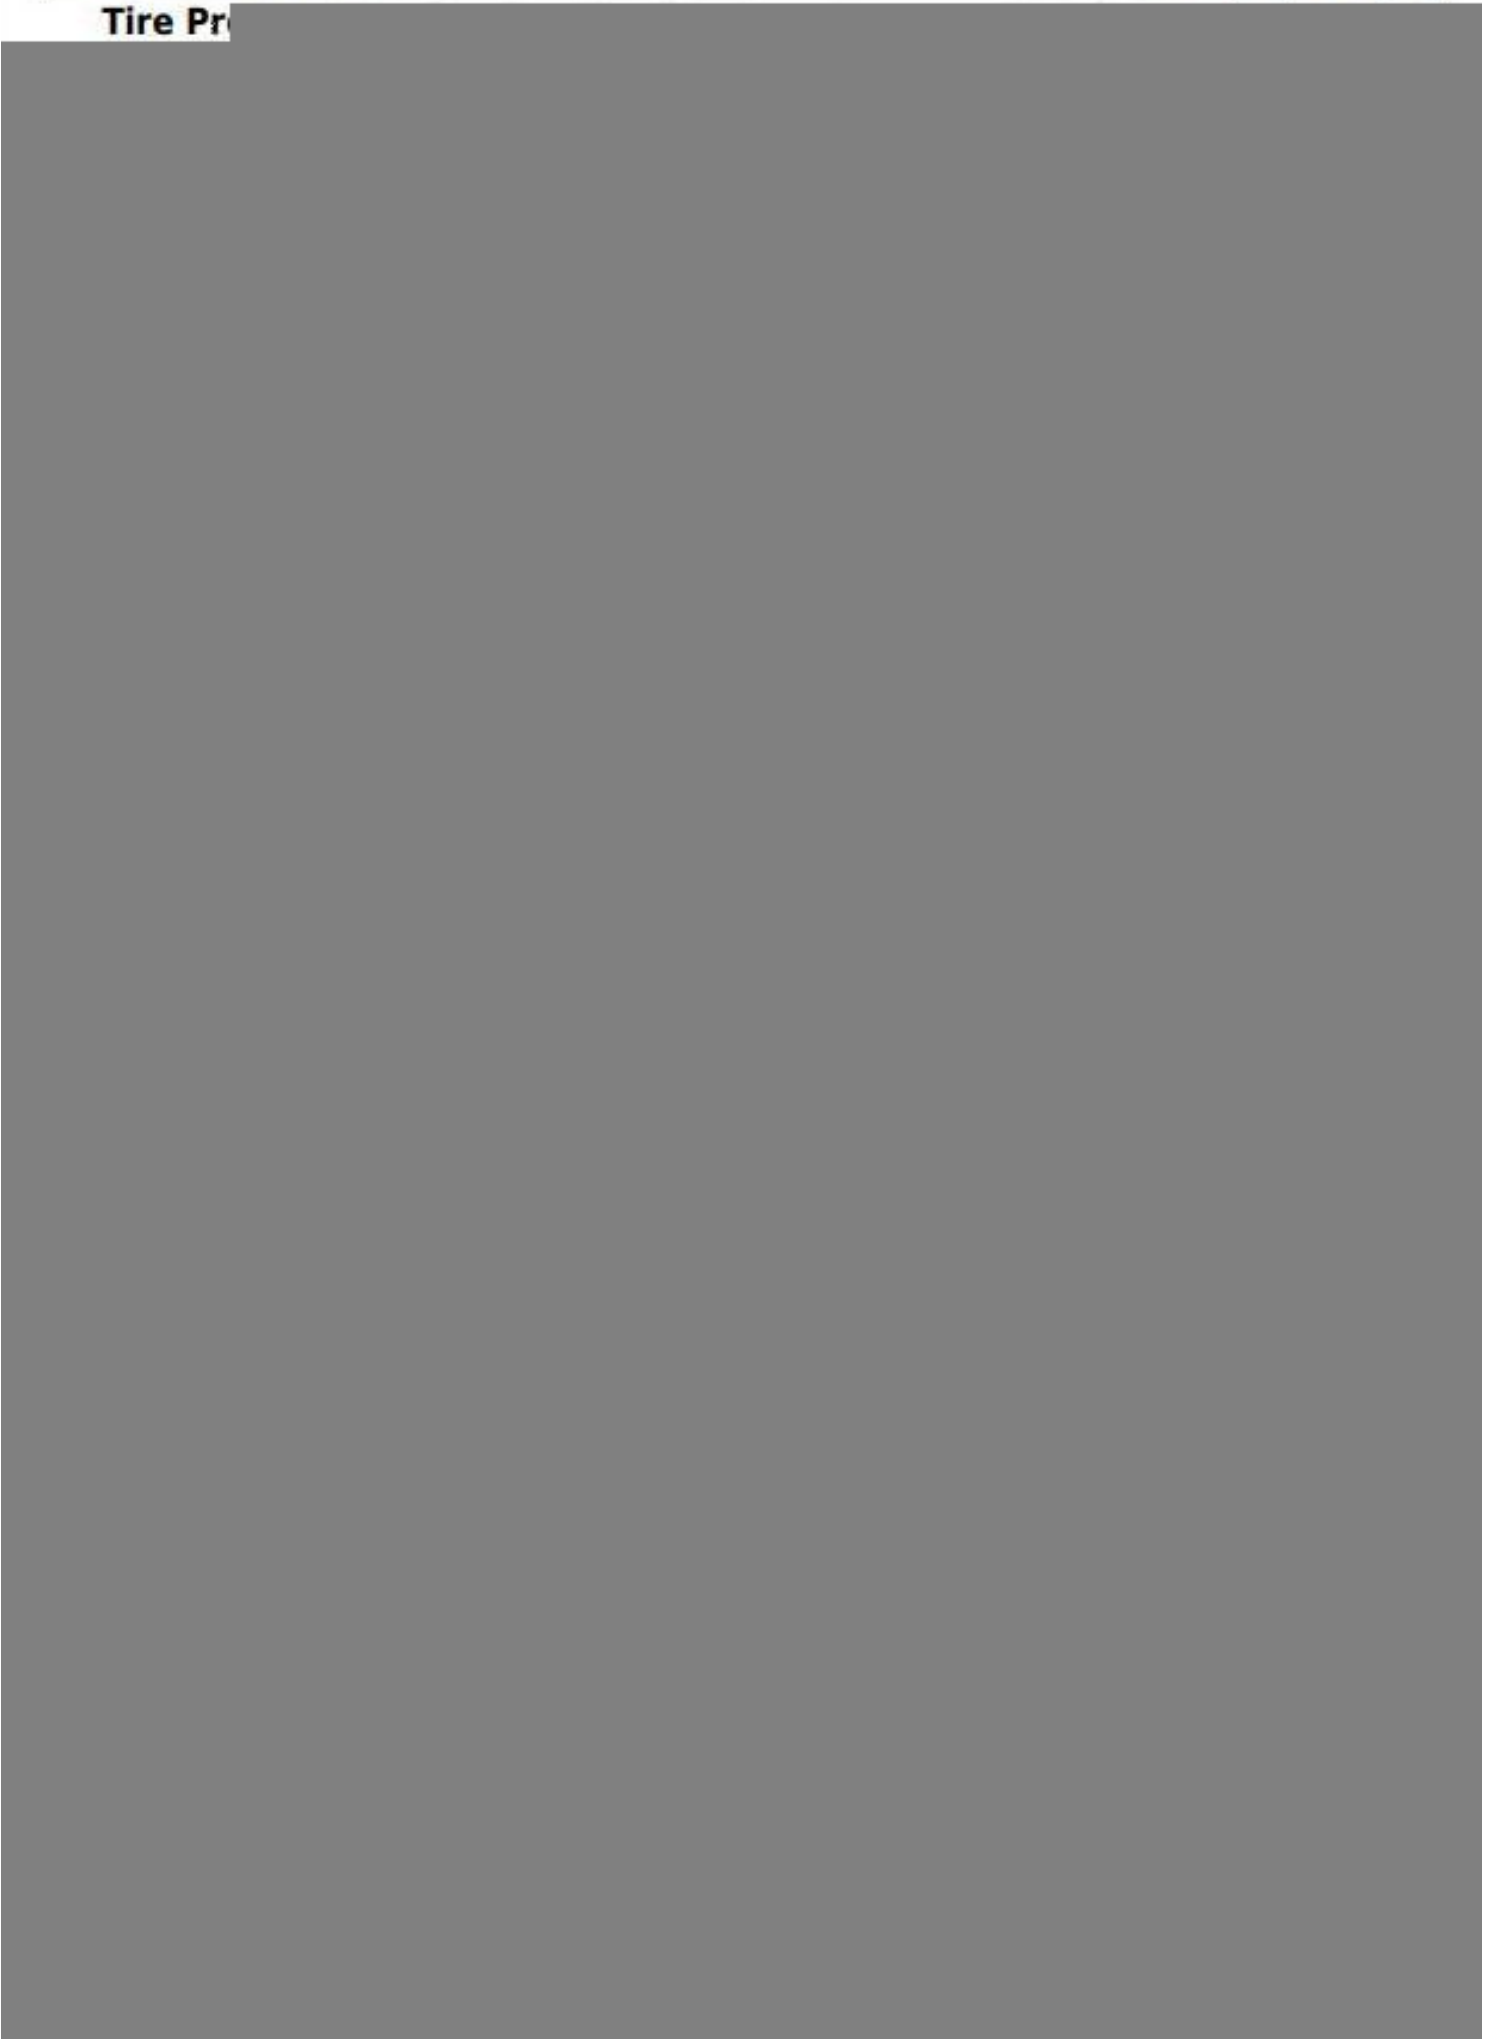
Install identification tags and disconnect hydraulic hoses (4, 6—8). Close all openings using caps and plugs. [See Travel Hydraulic System Line Connection](#). (Group 9025-15.)

[7] -

**CAUTION:**

Prevent possible crushing injury from heavy component. Use appropriate lifting device.

Tire Pr





Thank you very much
for your reading.
Please click here
to get more information.