

# 9560STS™, 9660STS™, 9760STS™ and 9860STS™ Combine Repair

## REPAIR TECHNICAL MANUAL

9860 STS, 9660 STS, 9760 STS, 9560 STS

TM2181 14 APR 15 (ENGLISH)

For complete service information also see:

9560 STS, 9660 STS, 9760 STS and 9860  
STS Combines Diagnosis TM2182

PowerTech 8.1 L Diesel Engines Base  
Engine CTM86

Alternators and Starting Motors CTM77

PowerTech 9.0 L OEM Diesel Engines Base  
Engine Repair CTM400

PowerTech 9.0 L Diesel Engines Level 14  
Electronic Fuel System With Denso HPCR CTM385

PowerTech Plus 4.5L and 6.8L Diesel  
Engines Level 14 Electronic Fuel Sys  
With Denso HPCR

PowerTech 8.1L Diesel Engines Level 9  
Electronic Fuel System With Denso High  
Pressure Common Rail CTM255

PowerTech 10.5 L & 12.5 L Diesel Engines,  
Level 6 Electronic Fuel Systems with Lucas  
EUIs CTM188

PowerTech 4.5L & 6.8L Diesel Engines Tier  
1/Stage I, Tier 2/Stage II, Tier 3/Stage IIIA,  
Tier 3/Stage IIA Tier 3/Stage III, (Base  
Engine) CTM104

PowerTech 10.5 L & 12.5 L Diesel Base  
Engine CTM100

PDF



DOWNLOAD



## Table of contents

### **FOREWORD**

#### **Section 10 - GENERAL**

- Group 05 - Safety
- Group 10 - Specifications
- Group 15 - Tune-Up and Adjustment
- Group 20 - Fuels and Lubricants

#### **Section 20 - ENGINE**

- Group 05 - Remove and Install Engine
- Group 10 - Cooling System
- Group 15 - Lower Engine Repair

#### **Section 30 - FUEL AND AIR REPAIR**

- Group 05 - Air Intake System
- Group 10 - Diesel Fuel System

#### **Section 40 - ELECTRICAL SYSTEM**

- Group 05 - Batteries
- Group 10 - Harness and Connector Repair
- Group 15 - Wire Harness Routing
- Group 20 - Fuses, Circuit Breakers and Relays
- Group 25 - Lighting
- Group 30 - Operators Station
- Group 35 - Sensors and Switches
- Group 40 - Wiper
- Group 45 - Alternator
- Group 50 - Starting Motor
- Group 55 - Electrical Engine Control
- Group 60 - GREENSTAR Components

#### **Section 50 - POWER TRAIN REPAIR**

- Group 05 - Transmission and Differential
- Group 10 - Single Reduction Final Drive—Heavy Duty
- Group 15 - Hydrostatic System
- Group 20 - Cam Lobe Motor
- Group 25 - Tires and Wheels

#### **Section 60 - POWER STEERING AND BRAKES**

- Group 05 - Steering
- Group 10 - Brakes

#### **Section 70 - HYDRAULIC REPAIR**

- Group 05 - Hydraulic Reservoir
- Group 10 - Hydraulic Pumps
- Group 15 - Hydraulic Valves
- Group 16 - Hydraulic Valve Stack (S.N. —715300)
- Group 17 - Hydraulic Valve Stack (S.N. 715301—)
- Group 20 - Hydraulic Cylinders
- Group 25 - Motors
- Group 30 - Accumulator

#### **Section 80 - SEPARATOR SHELL**

- Group 05 - Gull Wing Doors

#### **Section 90 - OPERATOR STATION REPAIR**

- Group 05 - Air Conditioning System (R134a)
- Group 10 - System Components
- Group 15 - Cab

#### **Section 110 - FEEDER HOUSE REPAIR**

- Group 05 - Conveyor

- Group 10 - Top Shaft and Slip Clutch
- Group 15 - Feeder House Drives and Reverser Gear Case
- Group 20 - CONTOUR MASTER Tilt Cylinder
- Group 25 - CONTOUR MASTER Tilt Frame

**Section 120 - SEPARATOR**

- Group 05 - Separator Repair
- Group 10 - Separator Drives
- Group 15 - Residue Disposal
- Group 20 - Conveyor Augers, Cleaning Fan And Chaffer And Sieve Frame
- Group 25 - Tailings Elevator and Augers
- Group 30 - Primary Countershaft Gear Case
- Group 35 - Header Electromagnetic Clutch

**Section 130 - GRAIN TANK AND UNLOADING SYSTEM REPAIR**

- Group 05 - Grain Tank Cross Augers
- Group 10 - Unloading Auger System Drives
- Group 15 - Vertical Unloading Auger and Lower Gear Case
- Group 20 - Horizontal Unloading Auger and Gear Case
- Group 25 - Clean Grain Elevator
- Group 30 - Grain Tank and Extensions

**Section 140 - ENGINE GEAR CASE AND CONTROL VALVE REPAIR**

- Group 05 - Engine Gear Case and Valve

**Section 199 - DEALER FABRICATED TOOLS**

- Group 05 - Dealer Fabricated Tools





Thank you very much  
for your reading.  
Please click here  
to get more information.