

ORIGINAL INSTRUCTIONS

# OPERATOR'S MANUAL

---

**T5.90**

**T5.100**

**T5.110**

**T5.120**

Tractor

*PIN HLRT5120AJLE00620 and above*



**Part number 51594058**  
3rd edition English  
April 2019  
*Replaces part number 51492907*



# Contents

---

## 1 GENERAL INFORMATION

Note to the Owner .....	1-1
Intended use.....	1-3
Electro-Magnetic Compatability (EMC).....	1-5
Manual scope and required training level .....	1-6
Metric and imperial units abbreviations.....	1-8
Identification plates .....	1-10
Operator's manual storage on the machine .....	1-15
Machine orientation.....	1-16
Selective catalytic reduction (SCR) system .....	1-17

## 2 SAFETY INFORMATION

Safety rules and signal word definitions .....	2-1
Safety rules - General information .....	2-2
Safety rules – Maintenance .....	2-2
Safety rules - Wheels and tires .....	2-3
Safety rules – Explosions and fires .....	2-4
Safety rules - Fire extinguisher .....	2-4
Safety rules – Battery .....	2-5
Safety rules - Instructor seat .....	2-5
Safety rules - Passenger seat .....	2-5
Safety rules – Operator presence system .....	2-6
Safety rules - Power Take-Off (PTO) .....	2-6
Safety rules - Reflectors and warning lights .....	2-6
Safety rules - Seat belts .....	2-6
Safety rules - Operator protective structure .....	2-6
Safety rules - HVAC system .....	2-8
Safety rules - Personal Protective Equipment (PPE) .....	2-9
Safety rules - "Do not use" sign .....	2-9
Safety rules - Hazardous chemicals .....	2-9
Safety rules - Near utilities .....	2-9
Safety rules - In the event of electrical storms .....	2-10
Safety rules – Mounting and dismounting the machine .....	2-10
Safety rules - Lifting and overhead loads .....	2-10
Safety rules - Front end loader .....	2-11
Ecology and the environment .....	2-12
Towing the tractor for recovery .....	2-13
Tractor jacking points.....	2-14
Burn prevention.....	2-15
Emergency escape from cab .....	2-16
Wheel chocks.....	2-17
Safety signs .....	2-18

---

## 3 CONTROLS AND INSTRUMENTS

### Access to operator's platform

Mounting and dismounting .....	3-1
External rear view mirrors .....	3-2
Getting to know the internal parts of the cab .....	3-3
Clock adjustment .....	3-6

### Operator's seat

Mechanical suspension seat .....	3-7
Air seat .....	3-8
Air suspension seat deluxe .....	3-9
Seat belt .....	3-11

### Instructional seat

Instructional seat - Localization overview .....	3-12
--	------

### Forward controls

Instrument panel .....	3-12
Selective catalytic reduction (SCR) system .....	3-18
Front controls .....	3-28

### Left-hand side controls

Left side console .....	3-33
Left side post controls .....	3-34
Hand brake lever - Operating (if equipped) .....	3-35

### Right-hand side controls

Park lock .....	3-36
Heating, ventilation or air-conditioning control .....	3-37
Hand throttle .....	3-38
Right-hand console .....	3-39
Right side post controls .....	3-42

### Exterior controls

Rear fender controls .....	3-44
Hydraulic lift .....	3-45
Trailer socket electrical .....	3-46

### Display

Performance windows .....	3-47
Programming tractor functions .....	3-51
Calibrating tool width .....	3-52
Activating/deactivating buzzer .....	3-53
Adjusting the dashboard/display brightness .....	3-54
Calibrating speed .....	3-56

---



Thank you very much  
for your reading.  
Please click here  
to get more information.