

# CLAAS DOMINATOR 48-68 Hydraulic & Electric System Technical Service Manual

Download Complete Service Repair Manual for CLAAS DOMINATOR 48-68 Hydraulic & Electric System. This Factory Service Repair Manual offers all the service and repair information about CLAAS DOMINATOR 48-68 Hydraulic & Electric System. The information on this manual covered everything you need to know when you want to repair or service CLAAS DOMINATOR 48-68 Hydraulic & Electric System.

Models Covered:

CLAAS DOMINATOR 48-68 Hydraulic & Electric System

Manual Contents:

Hydraulic System Contents:

HYDAULIC SYSTEM

STEERING HYDRAULICS

WORKING HYDRAULICS

CIRCUIT DIAGRAM

PRESSURE RELIEF VALVE

SWINGING THE GRAIN TANK UNLOADING TUBE

LOCK-UP VALVE UNIT

FLOW DRIVIDER

AUTOMATIC CUTTING HEIGHT CONTROL

HORIZONTAL REEL ADJUSTMENT

ATTACHMENT

VARIATOR FOOT VALVE

STRAW COLLECTOR

POSITION OF COMPONENTS

INDEX

Electric System Contents:

(DOMINATOR 48 from Serial No. 15403117

DOMINATOR 68 from Serial No. 15608462

MAIN POWER SUPPLY, DIESEL ENGINE ELECTRIC STARTING MOTOR

-FOR MECHANICAL ENGINE CONTROL

MAIN POWER SUPPLY, DIESEL ENGINE ELECTRIC STARTING MOTOR

-FOR ELECTRONIC ENGINE CONTROL (CAT)

STARTING THE DIESEL ENGINE AND ENGINE CONTROL

-FOR MECHANICAL ENGINE CONTROL

STARTING THE DIESEL ENGINE AND ENGINE CONTROL

-FOR ELECTRONIC ENGINE CONTROL (CAT)

DIESEL ENGINE CUT-OFF SYSTEM

-FOR MECHANICAL ENGINE CONTROL

DIESEL ENGINE CUT-OFF SYSTEM

