

# 570MXT Loader Landscaper

## Service Manual 6-43571

### Table of Contents

Description	Section No.	Publication Form No.
<b>General</b>	<b>Tab 1</b>	
Section Index - General		6-43590
Standard Torque Specifications	1001	7-52931
Fluids and Lubricants	1002	6-43460
Metric Conversion Chart	1003	7-52950
Loctite Product Chart		8-98902
<b>Engine</b>	<b>Tab 2</b>	
Section Index - Engine		6-43600
Engine and Radiator Removal and Installation	2000	6-43820
Stall Tests	2002	6-43470
For Engine Repair, see the Engine Service Manual.		
<b>Fuel System</b>	<b>Tab 3</b>	
For Fuel System Repair, see the Engine Service Manual.		
<b>Electrical</b>	<b>Tab 4</b>	
Section Index - Electrical		6-43610
Removal and Installation of Electrical Components	4000	6-41930
Electrical Specifications and Troubleshooting	4001	6-43480
Batteries	4003	7-49440
Starter Motor - Denso	4004	7-11451
Instrument Cluster	4005	6-41880
Alternator	4007	7-49250
<b>Steering</b>	<b>Tab 5</b>	
Section Index - Steering		6-43620
Removal and Installation	5000	6-41950
Steering Specifications, Pressure	5001	6-43490
Steering Control Valve	5002	7-11920
Steering Cylinders	5003	7-11930
Front Axle - Two Wheel Drive	5005	7-10470
Front Axle - Four Wheel Drive	5006	6-43840



Reprinted

# Table of Contents

Description	Section No.	Publication Form No.
<b>Power Train</b>		
	<b>Tab 6</b>	
Section Index - Power Train		6-43630
Removal and Installation of Power Train Components	6000	6-43850
Standard (Carraro) Transmission Specifications, Pressure Checks and Troubleshooting	6002	6-40700
Wheels and Tires	6003	6-43860
Rear Axle and Planetaries	6004	6-43870
Standard (Carraro) Transmission	6007	6-41730
<b>Brakes</b>		
	<b>Tab 7</b>	
Section Index - Brakes		6-43640
Removal and Installation of Brake Components	7000	6-42040
Master Cylinder	7003	7-49490
For parking brake and brake pedal adjustments, see Section 9001.		
<b>Hydraulics</b>		
	<b>Tab 8</b>	
Section Index - Hydraulics		6-43650
Removal and Installation of Hydraulic Components	8001	6-43881
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	6-43511
Cleaning the Hydraulic System	8003	7-49640
Hydraulic Pump	8004	7-14761
Loader Control Valve	8005	7-11223
Cylinders	8006	7-50880
Three Point Hitch Control Valve	8007	6-43670
Accumulator for Machines with Optional Ride Control	8009	7-52450
Solenoid Valve for Machines with Optional Ride Control	8010	7-14561
Flow Control Valve	8011	6-43890
Lock Valve	8012	6-43900
Flow Control Priority Valve	8013	6-76990
<b>Mounted Equipment</b>		
	<b>Tab 9</b>	
Section Index - Mounted Equipment		6-43660
Pedals and Levers	9001	6-43520
Air Conditioning Troubleshooting For Systems With R-134a Refrigerant	9002	7-50091
Air Conditioning System Gauges and Testing For Systems With R-134a Refrigerant	9003	7-50901
Air Conditioning System Service For Systems With R-134a Refrigerant	9004	7-51030
Air Conditioning Components Service For Systems With R-134a Refrigerant	9005	7-51050
Loader	9006	6-42110
ROPS Cab and Canopy	9007	7-14800
Standard and Mechanical Suspension Seat	9009	6-42140
<b>Schematics</b>		
<b>Electric and Hydraulic Schematic Foldout P.I.N. JJG0301854 and Before</b>	<b>In Rear Pocket</b>	6-43530
<b>Electric and Hydraulic Schematic Foldout P.I.N. JJG0301855 and After</b>	<b>In Rear Pocket</b>	6-77010

**NOTE:** Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

# SECTION INDEX

## GENERAL

<b>Section Title</b>	<b>Section Number</b>
Standard Torque Specifications .....	1001
Fluid and Lubricants .....	1002
Metric Conversion Chart .....	1003
Loctite Product Chart	

CASE CORPORATION  
700 State Street  
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION  
3350 South Service Road  
Burlington, ON L7N 3M6 CANADA

Bur 6-43590

Copyright © 2001 Case Corporation  
Printed in U.S.A.  
July, 2001



Thank you very much  
for your reading.  
Please click here  
to get more information.