



SERVICE/MAINTENANCE MANUAL

This manual has been prepared for and is considered part of -

8500-1/8500E-1

Model Number

XXXXXRef

Serial Number

This Manual is Divided into the following Sections:

	SAFETY SECTION
SECTION 1	REFERENCE MATERIALS
SECTION 2	TEST PROCEDURES
SECTION 3	GENERAL
SECTION 4	POWER TRAIN
SECTION 5	HYDRAULIC SYSTEM
SECTION 6	HOIST SYSTEM
SECTION 7	BOOM HOIST SYSTEM
SECTION 8	SWING SYSTEM
SECTION 9	TRAVEL SYSTEM
SECTION 10	ELECTRICAL SYSTEM
SECTION 11	AIR CONDITIONER
SECTION 12	TRANSLIFTER SYSTEM
SECTION 13	TROUBLESHOOTING

